

advanced FLOW engineering Instruction Manual P/N: 51-11072 & 54-11072

Make: Chevrolet/GMC Model: Trucks/SUVs Year: 07-08 Engine: V8-4.8/5.3/6.0/6.2L



- Please read the entire instruction manual before proceeding.
- Ensure all components listed are present.
- If you are missing any of the components, call customer support at 951-493-7100.
- Ensure you have all necessary tools before proceeding.
- Do not attempt to work on your vehicle when the engine is hot.
- Disconnect the negative battery terminal before proceeding.
- Retain factory parts for future use.

Label	Qty.	Description	Part Number
A1	1	Pro DRY S Air Filter	21-91051 (Gray Media)
A2	1	Pro 5R Air Filter	24-91051 (Blue Media)
В	1	Tube	05-00798
С	1	Housing	05-00780
D	1	Adaptor	05-00611
E	1	Reducer Coupling	05-00834
F	2	Reducer Coupling	05-00020
G	1	Nipple	03-50193
Н	1	3/8" Fuel Hose - 14"	05-00110
Ι	5	Button Head Screw	03-50113
J	3	Clamp - #064	03-50006
K	3	Clamp - #072	03-50010
L	21	Seal Trim	05-00007
Μ	1	Plug	05-01180

Installation will require the following tools:

4mm Hex Key, 9/16 Wrench, 5/16 Nut Driver, 10mm Socket & Ratchet, T-15 Torx Driver.







Refer to Figure A for steps 1-4

Step 1. Remove Engine Cover.

- Step 2. Loosen the clamps attaching the tube to the MAF sensor and throttle body.
- Step 3. Disconnect the wire harness from the MAF Sensor.
- Step 4. Remove MAF sensor, be careful not to drop or damage sensor.



Refer to Figure B for steps 5-7

Step 5. Remove the stock breather line from the engine. (Note: breather line has a push clip to remove) Step 6. Remove the stock housing by lifting up and out.


Step 7. Detach the coolant hose support clip from the stock intake tube.





Refer to Figure C for step 8

Step 8. Remove stock intake tube from vehicle.

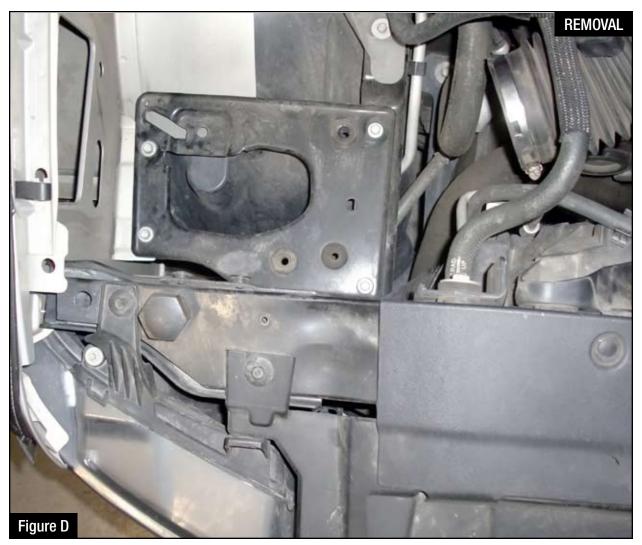

Refer to Figure D for step 9

Step 9 Remove 4 bolts from stock housing bracket and save them for later use.





Refer to Figure E for steps 10-13

Step 10. Insert the air filter adaptor into the housing.

- Step 11. Using (5) Button head screws fasten the air filter adaptor to the aFe intake housing.
- Step 12. Attach reducer coupling (05-00020) to air filter adaptor
- Step 13. Install MAF sensor into coupling using provided clamps.



Refer to Figure F for step 14

Step 14. Plug the unused hole with supplied plastic push plug.





Refer to Figure G for steps 15-16

Step 15. Using the stock 4 mounting bracket bolts, fasten the aFe housing to the chassis.

Step 16. Install the trim seal on the upper edge of the housing.

Step 17. Attach reducer coupling (05-00020) to the MAF sensor.



Refer to Figure H for step 17

Step 17. Install supplied coupler (05-00034), clamps, brass fitting, and breather hose to the aFe intake tube. (Do not tighten clamps.)





Refer to Figure I for steps 18-19

- Step 18. Install the aFe intake tube into the vehicle aligning between both the housing and throttle body coupler.
- Step 19. Plug in the breather tube to the existing location on the vehicle.

INSTALL



Refer to Figure J for steps 19-20

Step 19. Install aFe air filter. Step 20. Tighten all clamps.





Refer to Figure K for steps 21-23

- Step 21. Reconnect MAF sensor harness. On 2011 and newer 6.0/6.2L reconnect the extra sensor harness.
- Step 22. Re-install engine cover.
- Step 23. Your Installation is now complete. Make sure to tighten all clamps and check all electrical connections.

NOTE: Retighten all connections after approximately 100-200 miles. **Place enclosed CARB EO sticker on or near the device on a smooth, clean surface. EO identification label is required to pass smog inspection.** Page left blank intentionally



Pro DRY S Air Filter



P/N: 21-91040

Blue Squeeze Restore Kit



P/N: 90-50501



P/N: 24-91040

Pro DRY S Restore Kit



P/N: 90-59999

Blue Aerosol Restore Kit



P/N: 90-50001



P/N: 40-10149



P/N: 40-10083

To purchase any of the items above, view airflow charts, dyno graphs, photos, and video; please go to aFepower.com.

Warranty

General Terms:

- aFe warrants their products to be free from manufacturer's defects due to workmanship and material.
- This warranty applies only to the original purchaser of the product and is non-transferrable.
- Proof of purchase of the aFe product is required for all warranty claims.
- Warranty is valid provided aFe instructions for installation and/or cleaning were properly followed.
- Proper maintenance with regular inspections of product is required to insure warranty coverage.
- Damage due to improper installation, abuse, unauthorized repair or alteration is not warranted.
- Incidental or consequential damages or cost, including installation and removal of part, incurred due to failure of aFe
 product is not covered under this warranty.
- All warranty is limited to the repair and/or replacement of the aFe part. To request Return Goods Authorization ("RGA"), email RGA@afepower.com or call (951)493-7100. Upon receipt of the RGA, you must return the product to the address provided in the RGA, freight prepaid and accompanied with a dated proof of purchase and the RGA. Upon receipt of the defective product and upon verification of proof of purchase, aFe will either repair or replace the defective product within a reasonable time, not to exceed thirty days.

Product Category	P/N Prefix	Warranty duration
Direct OE Replacement Filters	10, 11, 30, 31, 71, 73	Life of the vehicle
Racing Filters	18	1 year
Universal	21, 24, 72	2 years
Air Intake Systems	50, 51, 54, 55, 75	2 years
Exhaust Systems	49	2 years
Intercoolers & Intercooler Tubes	46-2	2 years
Intake Manifolds	46-1	2 years
Differential Cover	46-7	Life of the vehicle
Exhaust Manifolds	46	2 years
Throttle Body Spacers	46-3	2 years
Fluid Filters	44	90 days
Pre-Filters	28	2 years
Heavy Duty OE Replacement	70	2 years
PowerSports OE Replacement	81, 87	2 years
PowerSports Intake Systems	85	2 years

No other warranty expressed or implied applies nor is any person or advanced FLOW engineering authorized to assume any other warranty. Some States do not allow the exclusion or limitation of incidental or consequential damages or do not allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State. Page left blank intentionally

Page left blank intentionally



advanced FLOW engineering, inc. 252 Granite Street Corona, CA 92879 TEL: 951.493.7100 • TECH: 951.493.7100 x23 E-Mail:Tech@aFepower.com