



200-582 INSTALLATION INSTRUCTIONS 86-90 Chevrolet/GMC S-10 2.8L V6

Thank you for purchasing the PowerAid Throttle Body Spacer. Please read the instruction manual carefully before proceeding with the installation. Your PowerAid Throttle Body Spacer was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

Thank you for selecting AIRAID.

INTAKE SYSTEMS FOR VEHICLES LISTED ARE 50 STATE LEGAL. SEE AIRAID.COM FOR CARB STATUS ON EACH PART FOR A SPECIFIC VEHICLE.



Parts List

AIR-KIT582PA	Aluminum Plate	(1)
AIR-KIT582G	Gasket	(2)
AIR-KIT582H	Hardware	
	5/16-18" x 3 1/4" Bolts	(3)
	5/16" Washers	(3)


Tools List

1/2" Socket
Ratchet
Flat Screwdriver

Installation Instructions. Read Me!

1. **DISCONNECT NEGATIVE (-) BATTERY CABLE.**
2. Remove throttle body air intake assembly.
3. Remove (3) bolts from throttle body. (**Ref. "C"**)
4. Remove gasket and clean surfaces.
5. Install power plate (**Ref. "A"**) with (2) gaskets (**Ref. "B"**).
 - A. One gasket located between throttle body and power plate.
 - B. One gasket located between power plate and manifold.
6. Install (3) bolts and washers (**Ref. "C"**) using **Step 3** as an example.
7. Inspect & Test throttle linkage for full Open & Closed travel Before driving. Some cruise or kickdown cables may require adjustment. Please refer to your vehicles service manual for proper adjustment.
8. Reinstall throttle body air intake assembly using **Step 2** as an example.
9. Reconnect negative battery cable. Enjoy!

The sound of power...The "whistle" means its working!

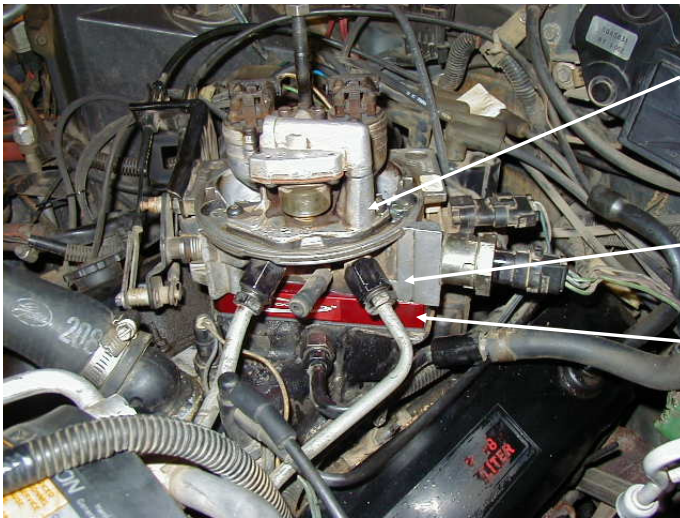

Ref. "C"- (3) 5/16-18" x 3 1/4" Bolts
(3) 5/16" Washers

Ref. "B"- (2) Gaskets

Ref. "A"- (1) Power Plate

AIR-I20582B
Rev. 12.21.16