



Installation Instructions

For Part Numbers:

300-138 720-431 Airaid Oiled Media Filter
 301-138 721-431 SynthaMax Dry Media Filter - Red
 302-138 722-431 SynthaMax Dry Media Filter - Black

2003-05 Chrysler PT Cruiser
 Turbo 2.4L I4



INTAKE SYSTEMS FOR VEHICLES LISTED ARE 50 STATE LEGAL. SEE AIRAID.COM FOR CARB STATUS ON EACH PART FOR A SPECIFIC VEHICLE.

Component Identification

1.	Airaid Premium Filter	1
2.	Front Panel Coated	1
3.	MAF Panel Coated	1
4.	Weather Strip 29 1/2"	1
5.	6-32 Screw	4
6.	6-32 Keps Nut	4
7.	#6 Flat Washer	4
8.	Airaid Decal	1

Full color instructions can be viewed on our web site at Airaid.com. If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

1) DISCONNECT NEGATIVE (-) BATTERY CABLE.

2) Remove the Factory Air Box Lid

- Loosen the clamp on the factory intake tube at the air box lid. **See Fig#1**
- Unclip the factory air box lid and remove from vehicle.
- Extract the factory air filter box assembly. (*Note: leave the base in place*) **See Fig#1**
- Unclip and remove the small intake tube attached to the factory air filter box. **See Fig#2 & Fig #3**
- Replace the factory air filter box in its original place and re-connect the hose in its original location. **See Fig#4**


3) Assemble the Airaid Cool Air Dam

- Assemble the two Airaid Cool Air Dam panels with the hardware provided. **See Fig #5.**
- Position the assembled Airaid Cool Air Dam in place of the factory air box. Snap into place.
- Connect the factory intake tube to the Airaid Cool Air Dam and fasten using the factory clamp. **See Fig#6**
- Mount the Airaid premium filter to the Airaid Cool Air Dam & secure using the clamp provided. **See Fig #6**
- Press the supplied weather strip onto the upper rim of the Airaid Cool Air Box. (*Hint: for easy installation of weather seal, start on a corner*) **See Fig #6**

4) Finishing Up-Apply the Airaid Foil Decal onto the Panel as shown.

- Check for any foreign objects or debris in the intake path.
- Reconnect the negative battery cable & double-check your work.

Fig#1

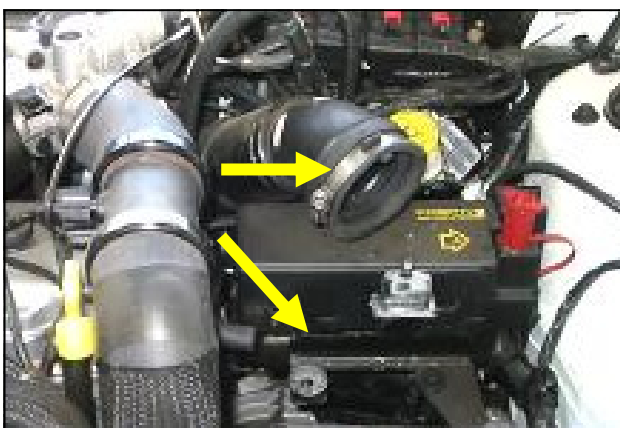

Fig#2



Fig#3



Fig#4



Fig#5



Fig#6



Thank you for purchasing the Airaid Intake System. Contact Airaid @ (800) 498-6951 8:00 AM - 5:00 PM MST weekdays for questions regarding fit or instructions that are not clear to you. Your Airaid Intake System was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If any parts are missing, contact Airaid. The air filter element is protected from direct exposure to water and debris; care should be taken not to drive through deep water. WATER INGESTION IS THE DRIVERS RESPONSIBILITY! The air filter is reusable and should be cleaned periodically.

FILTER IDENTIFICATION

720-431 Airaid Oiled Media

721-431 Airaid SynthaMax Dry Media - Red

722-431 Airaid SynthaMax Dry Media - Black

For your Oiled media filter we suggest using the AIRAID Filter Tune-Up Kit!

SynthaMax®

Do Not Oil



**P/N 790-551 Aerosol Spray
P/N 790-550 Squeeze Spray**



Synthamax Air Filters do not require oil. Service air filter as needed by cleaning with common non-petroleum all-purpose household cleaner and water. Simple Green®, Formula 409® or equivalent works great. Apply cleaner to outside of air filter and allow to soak. Then flush filter clean from the inside out with a garden hose and repeat steps if necessary. Do not apply high pressure water or air to clean filter. Allow filter to air dry and reinstall.

INTAKE SYSTEMS FOR VEHICLES LISTED ARE 50 STATE LEGAL. SEE AIRAID.COM FOR CARB STATUS ON EACH PART FOR A SPECIFIC VEHICLE.