



300-575 INSTALLATION INSTRUCTIONS 00-01 Dodge Dakota/Durango 4.7L

Thank you for purchasing the PowerAid Throttle Body Spacer. Please read the instruction manual carefully before proceeding with the installation. Your PowerAid Throttle Body Spacer was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

Thank you for selecting AIRAID.



**INTAKE SYSTEMS FOR VEHICLES LISTED ARE 50 STATE
LEGAL. SEE AIRAID.COM FOR CARB STATUS ON EACH
PART FOR A SPECIFIC VEHICLE.**

<u>Parts List</u>		
AIR-KIT575PA	Aluminum Plate	(1)
AIR-KIT575H	Hardware	
	"O"-ring	(1)
	3/4" Linkage Plates	(5)
	6mm x 20mm Flat Head Screws	(5)
	6mm x 60mm Bolts	(3)
	6mm Flat Washers	(3)
	6mm x 12mm Bolt	(1)
	6mm Lock Washer	(1)

Ask about our Airaid Intake System for your vehicle. Call for details!


<u>Tools List</u>
10mm Socket
Ratchet
4mm Hex Key
Standard Screwdriver

Installation Instructions. Read Me!

1. **DISCONNECT NEGATIVE (-) BATTERY CABLE.**
2. Remove the throttle body intake cover and save bolts.
3. Remove air intake assembly.
4. Remove (3) bolts from throttle body.
5. Remove bolts from throttle linkage bracket and save.
6. Install power plate using (3) 6mm x 60mm bolts and flat washers. (Ref. "D")
7. Locate (3) linkage plates and (3) 6mm x 20mm flat head screws before installing the throttle linkage and dipstick bracket. * **Please Note: Remove the stud from front throttle linkage mount. Dipstick must be relocated to forward mount on lower linkage plate using 6mm x 12mm bolt and lock washer.**
8. Locate (2) linkage plates using (2) flat head screws to reposition throttle body cover using saved bolts. **Refer to Step 1.**
9. Inspect & Test throttle linkage for full Open & Closed travel before driving. Some cruise or kickdown cables may require adjustment. Please refer to your vehicles service manual for proper adjusting.
10. Reinstall the throttle body air intake assembly using **Step 3** as an example.
11. Reconnect battery cable. Enjoy!

The sound of power...The "whistle" means its working!

Ref. "A"- (1) Power Plate
(1) "O"-ring

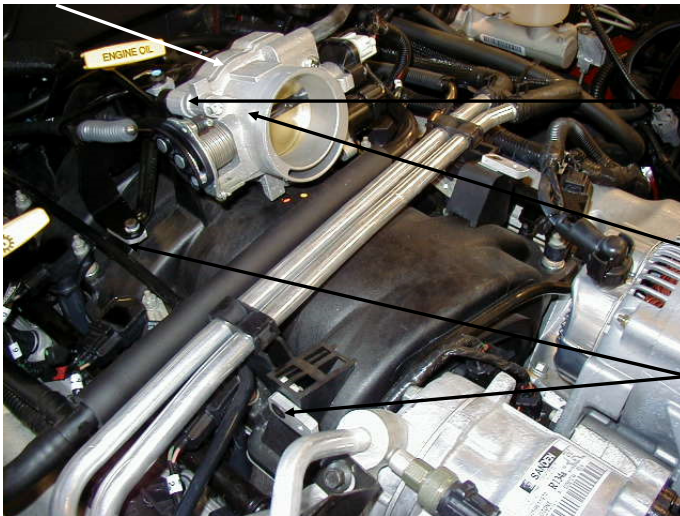

Ref. "D"- (3) 6mm x 60mm Bolts
(3) 6mm Flat Washers

Ref. "B"- Throttle

Ref. "C"- (5) 3/4" Linkage Plates
(5) 6mm x 20mm Flat Head Screws

AIR-I30575B
Rev. 12.22.16