

INSTALLATION MANUAL

2051180

Level of Difficulty

Easy

Parts List

1	Driver / left running board*
1	Passenger / right running board*
1	Driver / left bracket, front
1	Driver / left bracket, middle
1	Driver / left bracket, rear
1	Passenger / right bracket, front
1	Passenger / right bracket, middle
1	Passenger / right bracket, rear
8	Hex screw, M8
8	Flat washer, M8
8	Lock washer, M8
8	Pull through nuts, M8
2	Bolt plate, M10
4	Flat washer, M10
2	Lock washer, M10
2	Hex nut, M10
2	Plastic retainers, M10
2	Carriage bolt, 1/2"
2	Flat washer, 1/2"
2	Lock washer, 1/2"
2	Hex nut, 1/2"
2	3" x 1 1/2" spacer

* Running boards sold separately

Additional Hardware*


12	Hex bolt, M8
12	Flat washer, M8
12	Lock washer, M8
12	Hex nut, M8

* Aluminum side bars are supplied with additional hardware. Quantities listed are in addition to the standard supplied hardware.

Tools Required

Ratchet	Socket set
Level	--

Product Photo

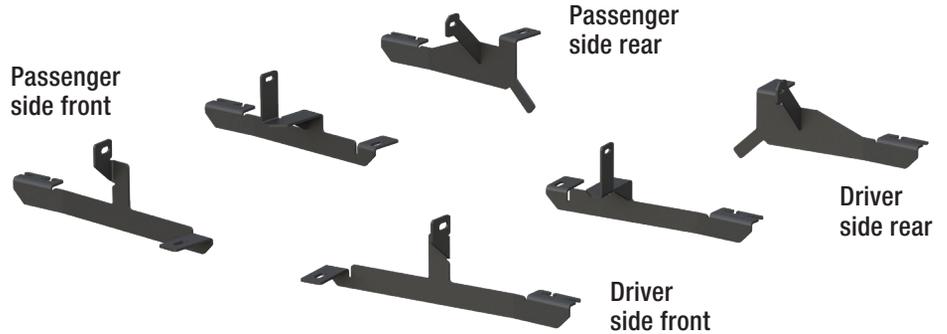

AeroTread™ (not included)



Notes and Maintenance

Before you begin installation, read all instructions thoroughly.

Proper tools will improve the quality of installation and reduce the time required.

To protect the product, wax after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

For polished, gloss and other smooth finishes, polish may be used to clear small scratches and scuffs on the finish.

Mild automotive detergent may be used to clean the product. Do not use dish detergent, abrasive cleaners, abrasive pads, wire brushes or other similar products that may damage the finish.

Refer to the last page of this manual for troubleshooting, warranty and product registration information.

Refer to the table to the left when securing hardware during the installation process to help prevent damage to the product or vehicle.

Torque Specifications

Metric	Metric		SAE	SAE	
	Bolt	Torque		Bolt	Torque
M6 bolt		3 ft.-lbs.	1/4" bolt		3 ft.-lbs.
M8 bolt		7 ft.-lbs.	5/16" bolt		7 ft.-lbs.
M10 bolt		16 ft.-lbs.	3/8" bolt		16 ft.-lbs.
M12 bolt		28 ft.-lbs.	7/16" bolt		20 ft.-lbs.
--		--	1/2" bolt		28 ft.-lbs.

Use above torque setting unless otherwise noted

Step 1

Starting on the driver side, locate the three mounting locations on the inside of the rocker panel and underneath the vehicle.

Note: Each bracket is specific to a mounting location. Refer to page 1 product image for correct locations.



Step 2

Locate the front mounting holes.

Secure the front mounting bracket using an M8 pull-through nut, lock washer, flat washer and hex screw.

Snug the hardware, but do not fully tighten at this time



Step 3

Locate the middle mounting holes. Remove plugs if they are present. Insert an M10 bolt plate into the rear mounting hole. Secure using an M10 flat washer, lock washer and hex nut.

Secure the front mounting bracket using an M8 pull through nut, lock washer, flat washer and hex screw.

Snug the hardware, but do not fully tighten at this time




Step 4

Locate the rear mounting holes. Insert a 3" x 1 1/2" spacer and a 1/2" carriage bolt in the rear hole. Secure using a 1/2" lock washer and flat washer.

Secure the front mounting bracket using an M8 pull-through nut, lock washer, flat washer and hex screw.

Snug the hardware, but do not fully tighten at this time

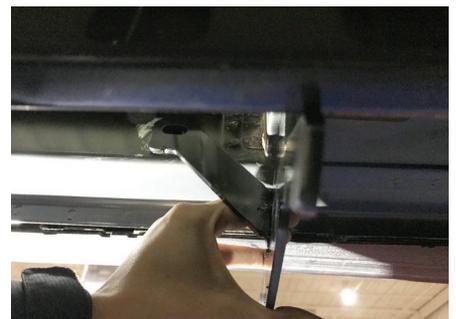


Step 5

Place the running board on the brackets and align the M8 bolts with the slots in the brackets on the vehicle.

Attach the running board to the brackets using six M8 bolts, lock washers, flat washers and hex nuts.

Adjust and level the running board, centering it between the front and rear wheels.

With the running boards in position, it is recommended to tighten all brackets to the vehicle first, followed by the running board connections.

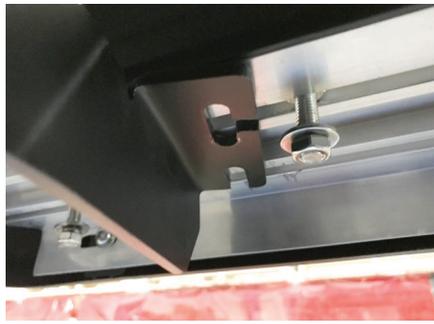

Step 6

Repeat steps 1 through 5 on the passenger side of the vehicle.

Congratulations on the installation of your new ARIES AeroTread™ running boards.

With the running boards installed, periodic inspections should be performed to ensure all mounting hardware remains tight.

To protect your investment, see the 'Notes and Maintenance' section on the first page of this instruction manual.



Product Registration

CURT Group stands behind our products with industry leading warranties. You can help us continue to improve our product line and help us understand your needs by registering your purchase by visiting:

warranty.curtgroup.com/surveys

At CURT Group, customer is king. We value your feedback and we use that information to make improvements on our products. Please, take a minute and let us know how we are doing.