

INSTALLATION MANUAL

2055130

This is the first of two manuals required to complete this installation. The second manual is included with your side bars / running boards.

Level of Difficulty

Easy

Parts List

1	Driver / left side bar / running board
1	Passenger / right side bar / running board
4	VersaTrac™ mounting bracket, universal
2	Bolt plate, M6
2	Flat washer, M6
2	Lock washer, M6
2	Hex nut, M6
28	Hex bolt, M8 - 1.25 x 25mm
28	Flat washer, M8
28	Lock washer, M8
16	Hex nut, M8

*Running boards sold separately

Tools Required


Ratchet	Socket, 10mm
Torque wrench	Socket, 13mm
Level	--

Torque Specifications

M6 bolt	3 ft-lbs.
M8 bolt	7 ft-lbs.

Use above torque setting unless otherwise noted

Product Photo

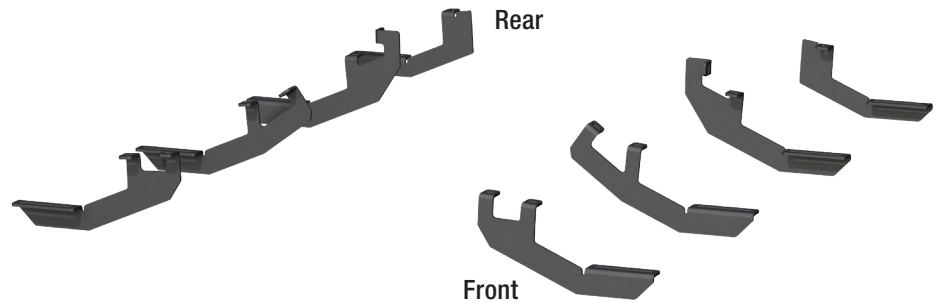

NOTICE

Before you begin installation, read all instructions thoroughly.

Proper tools will improve the quality of installation and reduce the time required.

To help prevent damage to the product or vehicle, refer to the specified torque specifications when securing hardware during the installation process.

Maintenance

To protect the product, wax after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

For polished, gloss and other smooth finishes, polish may be used to clear small scratches and scuffs on the finish.

Mild automotive detergent may be used to clean the product. Do not use dish detergent, abrasive cleaners, abrasive pads, wire brushes or other similar products that may damage the finish.

Product Registration and Warranty

CURT Group stands behind our products with industry-leading warranties.

Provide feedback and help us to improve our products by registering your purchase at:

warranty.curtgroup.com/surveys

Step 1

Starting on the driver side, locate the four mounting tabs along the bottom edge of the vehicle.



Step 2

Starting at the front driver-side mounting location, locate the threaded hole on the inside of the body panel.

Place a bracket onto the vehicle and secure with two M8 hex bolts, lock washers and flat washers.

Snug the hardware, but do not fully tighten.

Repeat this step to install the bracket over the second and third mounting tab locations.



Step 3

Locate the rear driver-side mounting tab.

Insert a bolt plate through the hole. Place a bracket onto the vehicle and secure with an M6 flat washer, lock washer and hex nut.

Repeat steps 1 through 3 on the passenger side of the vehicle.

NOTICE

To complete the installation, refer to the manual included with your running boards / side steps.

