
INSTALLATION INSTRUCTION For Ford F150 Regular/Super Cab 97-04 ITEM NO:4506

(ATTENTION)

- 1. Please read this installation instruction before installing this part. When install it, please pay attention to protecting your vehicles.
- 2. When you use it, please check this parts at a fix time-lapse, such as one month or two month.

(PARTS LIST)

No	Name	Photo	Qty	Remarks	No	Name	Photo	Qty	Remarks
1	Mount Bracket		2		8	"T"Bolt		4	
2	Mount Bracket		2		9	flat washer	(16	M6
3	"T"Bolt		4	M10	10	LOCK NUT	&	16	M6
4	"T"Bolt		2	M10					
5	Flat Washer	(6)	12	M10					
6	Lock Washer	0	12	M10					
7	Hex Nut		12	M10					

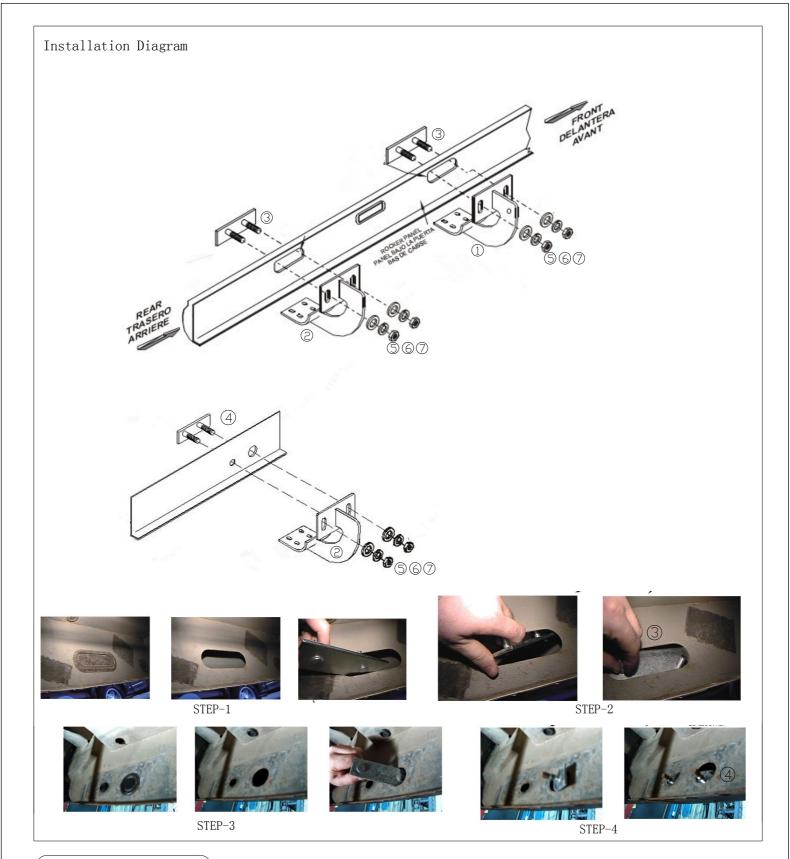

(INSTALLATION STEPS)

STEP 1: Check the parts in the box carefully if match above list.

STEP 2:Pls prepare the tools for installation, follow as:10-12wrench, 14-17 wrench.

STEP 3:Put the mount bracket into the girder of the car, and tighten it with "T"Bolt 34.

STEP 4: Install the Side Bar to the mount bracket, and tighten it with T"Bolt .

STEP 5:Installation is finished.