



Driver Side Installation Pictured

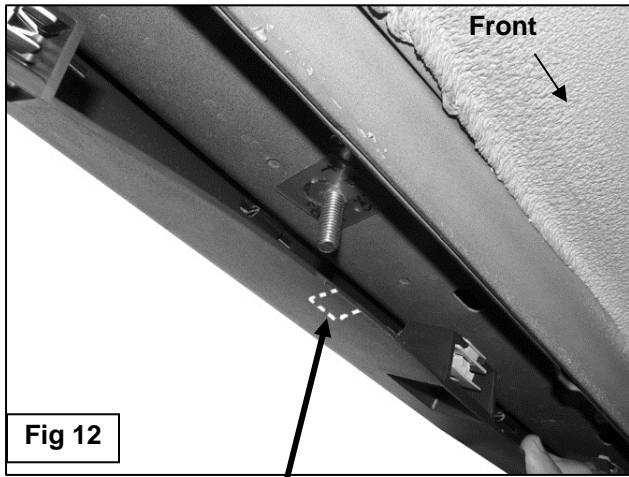

Dotted line represents area to cut from bottom edge of rocker panel cover to clear center Bracket

- 10mm Flat Washer
- M10 Lock Washer
- M10 Hex Nut

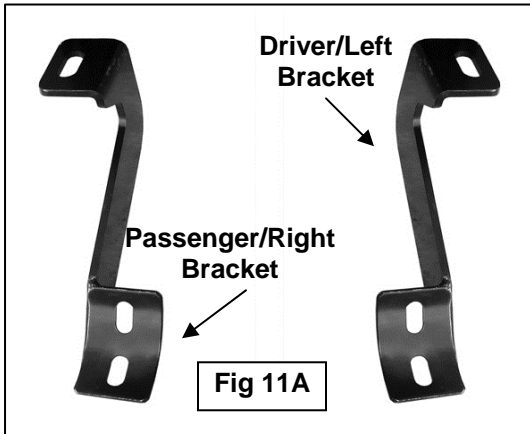