


BESTOP EZFOLD Hard Tonneau Installation Instructions

333 Centennial Parkway, Suite B. • Louisville, CO 80027 • 1-800-845-3567



- 1.** Place the cover on front of truck bed.

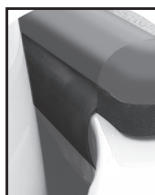


Place dust seal between cab and truck bed.



- 7.** Cover is laying down flat.




- 8a.** Secure tailgate clamp hooks for a snug fit.

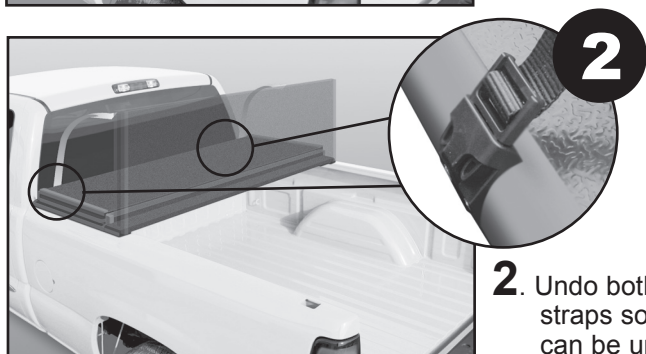


- 2.** Undo both tie-down straps so cover can be unfolded.




- 3.** Unfold the cover all the way open to align cover on the truck bed rails before clamping.

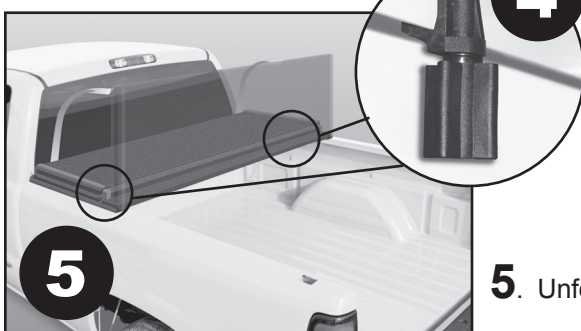


- 4.** Secure cab clamp hooks under the metal bed rail. Toyota Models Only - Tighten lock nut at bottom of knob.

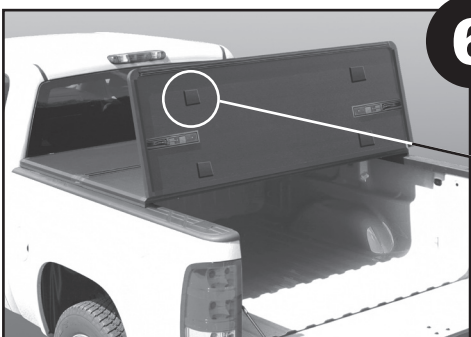


- 5.** Unfold first section.

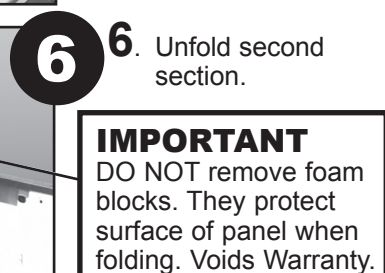

IMPORTANT
DO NOT remove foam blocks. They protect surface of panel when folding. Voids Warranty.

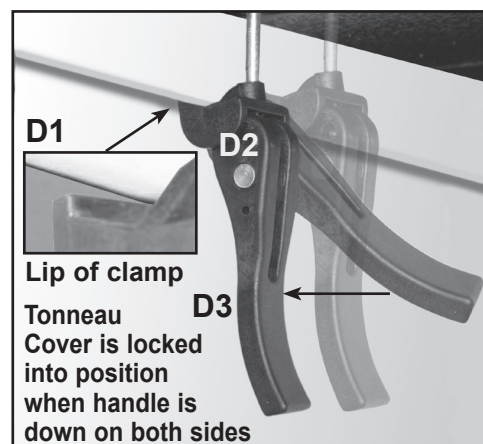

- 8b.** To clamp cover down, put lip of clamp hooks under the side metal bed rail and push handle down. (See D1, D2, D3)

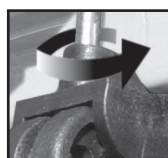


How To Adjust Clamps

- To adjust, turn clamp hook clockwise to tighten or counter clockwise to loosen.

9. Vehicles With Utility Track

- A.** Slide aluminum blocks into track, position and tighten set-screw.
B. Secure cab and tailgate clamp hooks on to aluminum blocks.

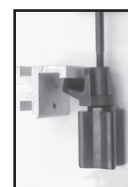

Cab



Tailgate

10. Paint Protectors

- A.** Apply to inside metal bed rail at each latch location

***Patent No's.**

8,348,328/8,256,824/8,511,736