



BX1706

2013-14 Chevy Traverse LTZ Installation Instructions

Attachment Tab Height: 18"

Attachment Tab Width: 24"

Serial Number

Please read BOTH these Installation Instructions and the General Instructions prior to installing or operating this equipment.

- Blue Ox® towing products and accessories are intended to be installed by Blue Ox® Dealers who are familiar with our products and have the equipment and knowledge necessary to do "fit work". If needed, Blue Ox® Dealers can be found at www.blueox.com or by contacting our Customer Care Department at (402) 385-3051.
- Many Blue Ox® baseplates are designed to use existing holes and hardware to mount the baseplate to the towed vehicle. Even though bolts are there, do not assume they are adequate for baseplate mounting. Always use the hardware supplied in the hardware kit and existing hardware as specified in the installation instructions.

Bolt Torque Specifications

Torque in Foot-Pounds for Inch Bolts

Bolt Size	Grade 5	Grade 8
1/4"	10	14
5/16"	19	29
3/8"	33	47
7/16"	54	78
1/2"	78	119
5/8"	154	230
3/4"	257	380



If the front of your vehicle looks different than this, please contact us at (402)385-3051.

Reference your vehicle owner's manual for manufacturer's towing specifications.

Bolt Torque Specifications

Torque in Foot-Pounds for Metric Bolts

Bolt Size	Grade 8.8	Grade 10.9
6MM	6	8
8MM	16	22
10MM	31	40
12MM	54	70
14MM	89	117
16MM	161	230
18MM	222	318



WARNING

Failure to read and follow these instructions could result in separation of the towed vehicle from the tow bar, causing property damage, loss of towed vehicle, personal injury or death.

BX1706
2013-14 Chevy Traverse LTZ
Installation Instructions

Instruction Notes: The fascia, fascia shroud and windshield washer fluid reservoir are removed and reinstalled for the baseplate installation. Some drilling and trimming is required.

Place all components that are removed on a flat, sturdy surface. All items will be reinstalled unless otherwise noted after the baseplate is installed.

The dimensional variations between otherwise identical vehicles can be considerable. While the baseplate was designed for easy installation, it may be necessary to tailor the baseplate slightly to compensate for vehicle manufacturer's tolerances.

The BX8848 4-Diode Light Wiring Kit is recommended for this vehicle.

NOTICE

- Handling of some cosmetic parts when installing this product may require the use of protective covers, rags, specialty tools, etc. to prevent damage.
- When using power drills be aware of the dangers of torque and drill bit length.
- When using a reciprocating saw be aware of objects behind the cutting surface.
- Use a good quality paint to spray cut edges of frame to prevent rusting.
- Be sure that **ALL** electrical connections are plugged in and accessories are functioning properly before reinstalling the fascia.
- The baseplate is computer tested to your vehicle's GVWR, exceeding this weight will void the manufacturer's warranty.
- Be sure to use Loctite® Red on all bolts before tightening. Tighten all bolts according to the torque chart provided.
- Dealer or installer be certain the user receives these instruction sheet.
- If the baseplate is in an accident, it must be replaced. **DO NOT** use it again! An accident can cause unseen damage and using it again could result in more damage or serious injury. **DO NOT** use the baseplate if it is damaged or missing parts.


BX1706

2013-14 Chevy Traverse LTZ

Installation Instructions

Tools Required

Large Vise Grip
 Flat Screwdriver
 Utility Knife
 Reciprocating Saw
 Torque Wrench
 Drill
 Tape Measure
 Loctite® RED
 13/32" Drill Bit
 1/2" Drill Bit
 7MM Socket
 10MM Socket
 9/16" Socket
 9/16" Wrench
 T20 Torx

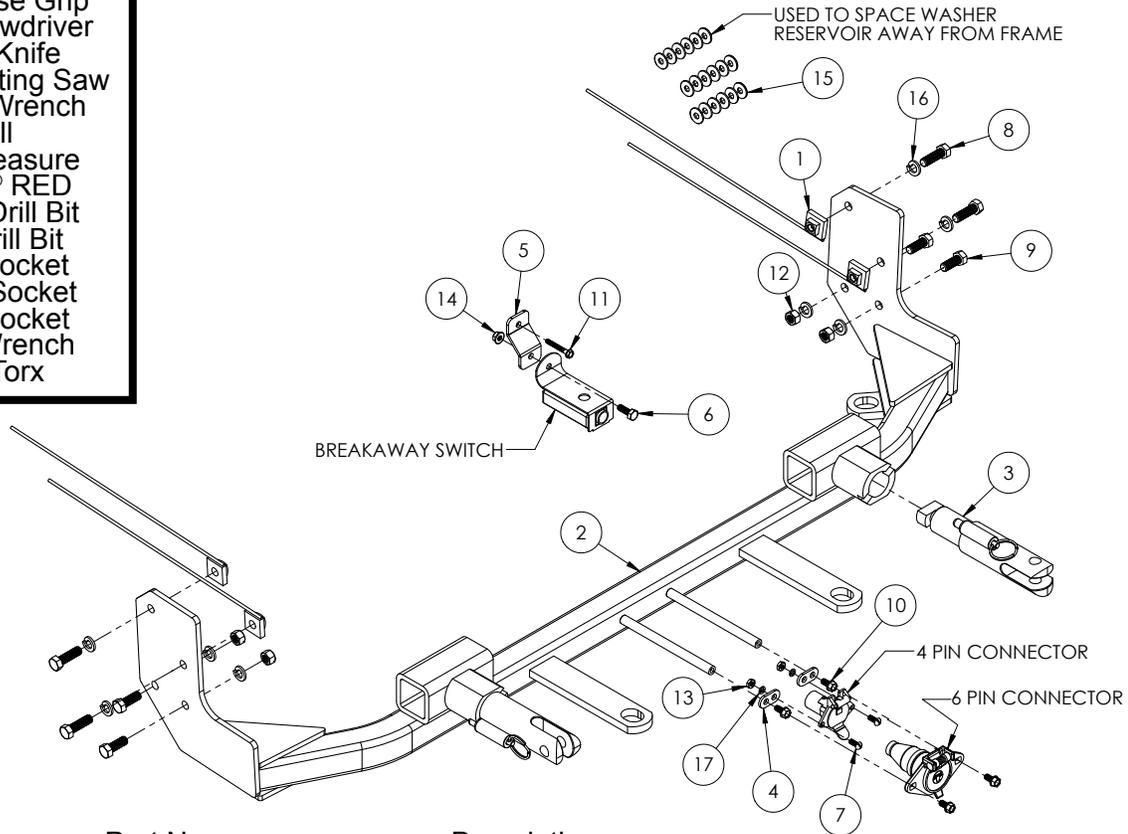


Item No.	Part No.	Description	Qty.
1	61-5208	3/8"-16 Nut Plate w/ 14" Wire	4
2	61-7170	BX1706 Baseplate	1
3	62-3468	Attachment Tab Assembly with Hole	2
4	101-5822	4 Way Connector Adapter	2
5	101-7599	Breakaway Bracket	1
6	201-0050	1/4"-20 x 3/4" Hex Head Bolt, Grade 5, ZP	1
7	201-0192	#10-32 1/2" Round Slotted Head Screw	2
8	201-0368	3/8"-16 x 1-1/4" Hex Head Bolt, Grade 5, ZP	4
9	201-0443	3/8"-16 x 1" Hex Head Bolt, Grade 5, ZP	4
10	201-0553	1/4-20 x 1/2" Hex Wshd Bolt Type F TCS, ZP	2
11	201-0654	#10-16 x 1" Self Drilling Screw, ZP	1
12	202-0003	3/8"-16 Hex Nut, ZP	4
13	202-0047	#10-32 Hex Nut	2
14	202-0069	1/4"-20 Hex Flange Whiz Lock Nut, ZP	1
15	203-0001	1/4" Flat Washer, ZP	18
16	203-0010	3/8" Lock Washer, ZP	8
17	203-0054	#10 Lock Washer, ZP	2
18	226-0049(not shown)	Class IV Safety Cables	2
19	229-0512(not shown)	1/2" Quicklink, ZP	2
20	290-0437(not shown)	Black Cap Plug Receiver	2


Important:

Use only genuine factory replacement parts on your baseplate. Do **NOT** substitute homemade or non-typical parts. If a bolt is lost or in need of replacement, for your safety and the preservation of your baseplate, be sure to use a replacement bolt of the same grade (In most cases it will be Grade 5, please reference the parts list above). Replacement parts may be ordered through your nearest Blue Ox® Dealer or Distributor. Failing to follow and/or altering these installation instructions in either installation or required equipment will void the manufacturer's warranty. Towing behind a non-motorized vehicle will void the warranty.

BX1706
2013-14 Chevy Traverse LTZ
Installation Instructions

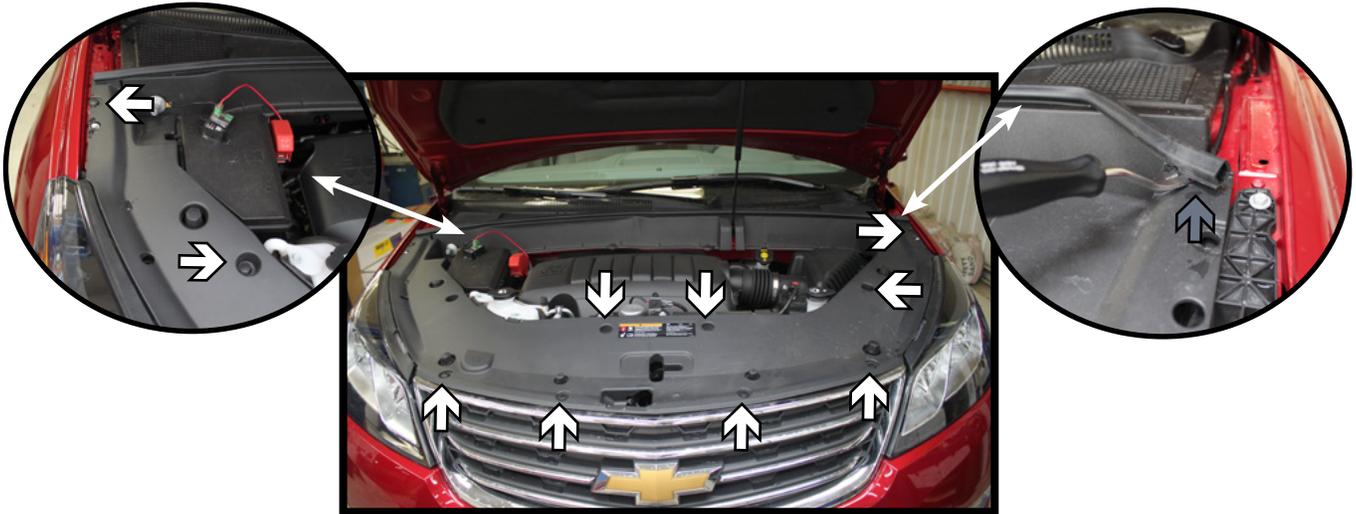

1. Remove the ten (10) push pins from the top edge of the fascia shroud (white). Then pry up the ends of the rubber strip on each side, releasing the clip underneath (gray). Remove the shroud from the vehicle.

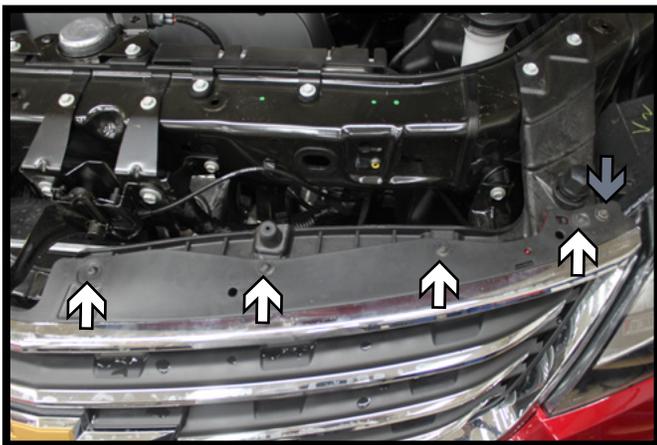


2. Using a T20 Torx, remove the seven (7) screws from the top edge of the fascia (white). There are four (4) on the driver side and three (3) on the passenger side. Using a 7MM socket, remove the two (2) screws from the top edge of the fascia corners (gray). There is one (1) on each side of the vehicle.




3. **2013 Models:** Using a T20 Torx, remove the three (3) screws from the outer edge of the wheel well. Do this on both sides of the vehicle.

2014 Models: Using a T20 Torx, remove the two (2) lower screws from the outer edge of the wheel well. Then using a 7MM socket, remove the upper screw. Do this on both sides of the vehicle.

BX1706
2013-14 Chevy Traverse LTZ
Installation Instructions

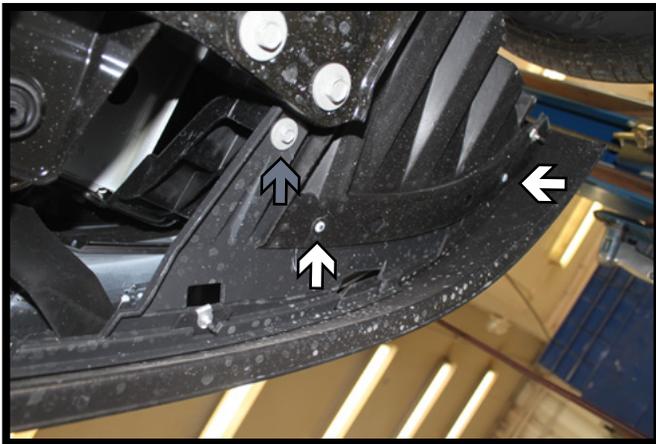


4. On the underside of the fascia, using a T20 Torx, remove the outer screws (white). Then using a 10MM socket, remove the inner screw (gray). Do this on both sides of the vehicle. Disconnect all electrical wiring and remove the fascia from the vehicle.

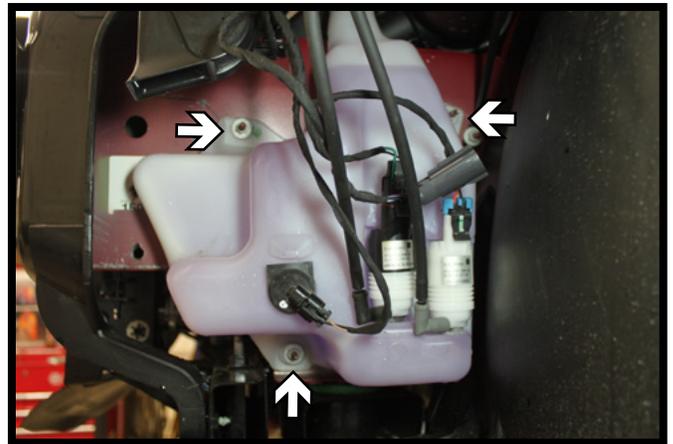

5. On the driver side, using a 10MM socket, remove the three (3) nuts from the washer fluid reservoir. Disconnect all lines and electrical connections, then set reservoir aside.





6. On the driver side, remove the push pin from the temperature sensor and temporarily move above the bumper. The sensor will be relocated later.

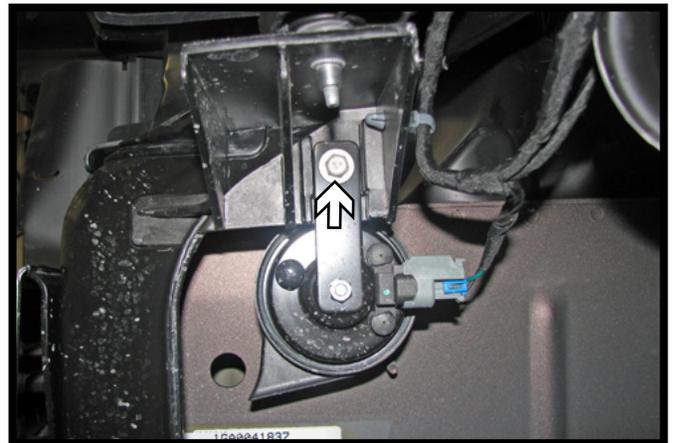


7. Using a 10MM socket, remove the screw from the horn bracket and set horn aside. Do this on both sides of the vehicle.

BX1706
2013-14 Chevy Traverse LTZ
Installation Instructions

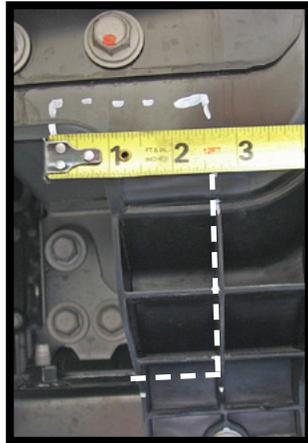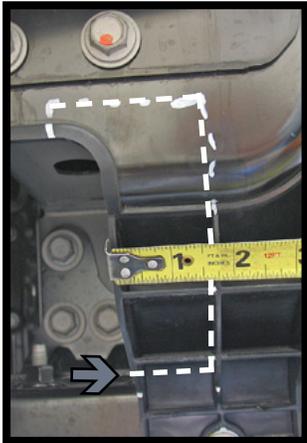


8. Using a reciprocating saw, trim an area on the frame approximately as shown. Cut the bottom flush with the bottom rail (gray) and vertically just inside the rib (approximately 1-5/8") then 2-1/2" back at the top. Do this on both sides of the vehicle.

9. Tip the baseplate onto the frame. Measure down 2-13/16" from the top of the frame to the top of the baseplate. Measure 6-1/4" from the front of the frame to the back of the baseplate. Level the baseplate and clamp into position. Using the baseplate as a template, drill a 13/32" hole (white) and insert a 3/8"-16 x 1" hex bolt, 3/8" lock washer and 3/8"-16 hex nut. Do this to both sides of the vehicle. Tighten down fasteners.

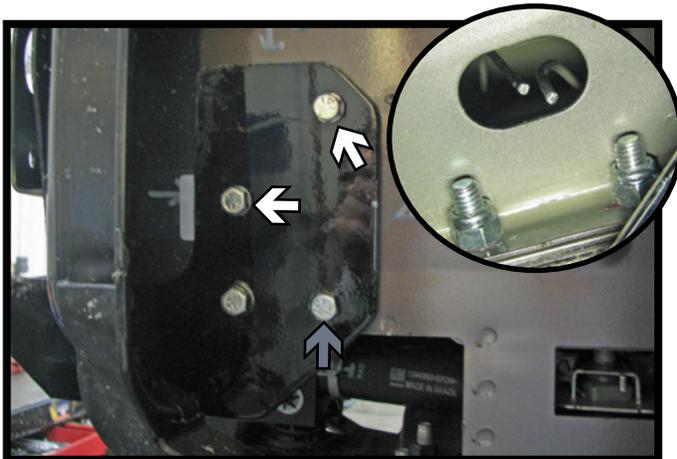


10. Drill out remaining holes with a 13/32" drill bit. Insert a 3/8"-16 x 1" hex bolt, 3/8" lock washer and 3/8"-16 hex nut in the other bottom hole (gray). In the top two (2) holes (white), install 3/8"-16 x 1-1/2" hex bolts and 3/8" lock washers attached to 3/8"-16 nut plates inserted up inside the bottom of the frame. Do this to both sides of the vehicle.

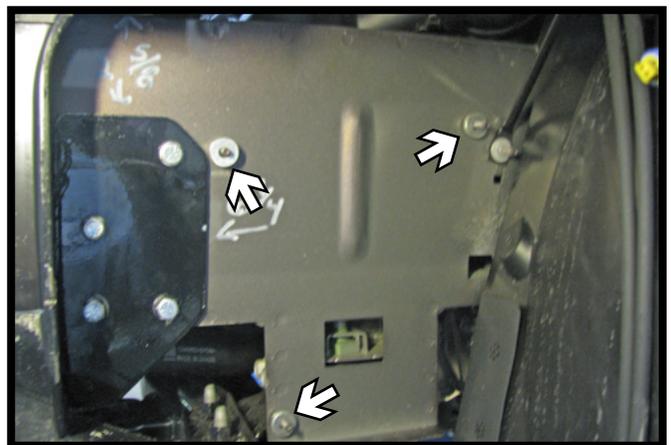

11. On the driver side, place six (6) 1/4" flat washers onto each of the washer reservoir studs. Reinstall the reservoir and horns.


BX1706
2013-14 Chevy Traverse LTZ
Installation Instructions

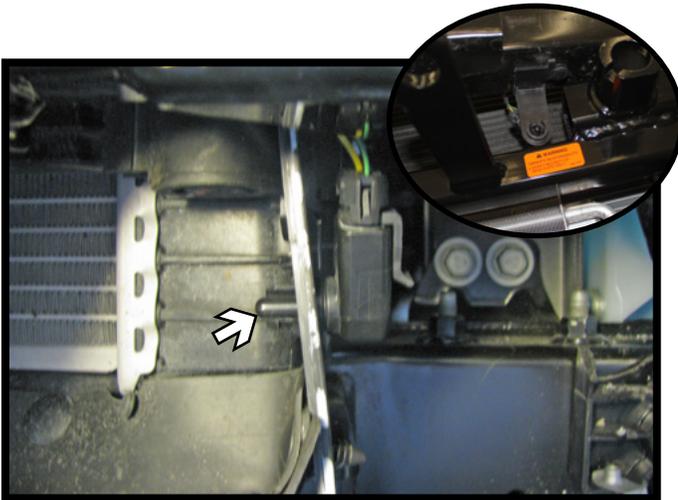

12. Reinstall the temperature sensor to its original location or on the driver's side, using a 1/2" drill bit, drill a hole into the plastic shrouding. Then snap the temperature control into the hole.



13. Attach the permanent baseplate safety cables to the provided convenience link on the baseplate. The photo above shows the recommended installation of the cables to frame of vehicle. Additional options may interfere with suggested mounting; in this case, secure the cables to a solid piece of the frame as described in the instructions included with the permanent baseplate safety cables. Be sure the safety cables do not rub against any hoses or moving parts. Do this on **BOTH** sides of the vehicle.

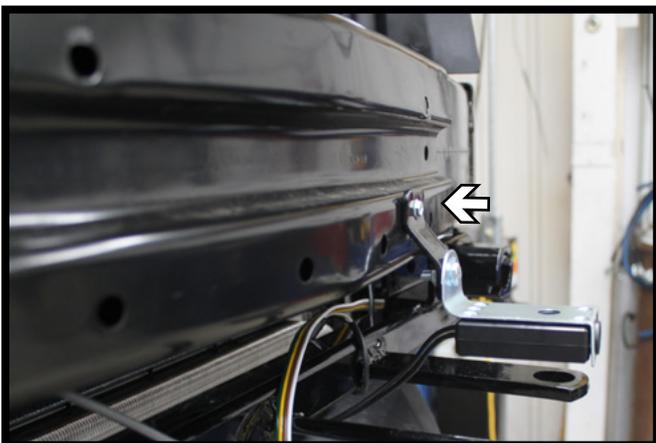

14. Optional: Attach the breakaway bracket to the metal bumper with the #10-16 x 1" self drilling screw at the desired location. Attach the breakaway to the bracket with a 1/4"-20 x 3/4" bolt and 1/4"-20 whiz nut.



15. Hold the fascia as close to its original position, mark and trim the fascia around the convenience links and attachment tabs. Reinstall the fascia and fascia shroud.

BX1706
2013-14 Chevy Traverse LTZ
Installation Instructions

CUSTOMER SERVICE COMMITMENT

Blue Ox® is committed to providing you with exceptional customer care throughout your lifetime with our products. Our team is here to assist you with any questions you may have regarding the performance of your product. Simply call (402) 385-3051 and you can speak with our customer care team.

Additionally, please visit our website to see which rallies our Destination America team will be attending. For a nominal fee, our service technician will service your towing system to ensure it's in proper working condition. Also, as a commitment to our customers, should you visit our factory, you can stay at our full service Blue Ox® campground at no charge along with enjoying a factory tour.

Again, thank you for being our customer and for the confidence you have shown in the performance of our products. It is because of customers like you we enjoy the success we have today.

© 2013 Blue Ox
One Mill Road, Industrial Park
Pender, Nebraska 68047
Phone: (402) 385-3051
Fax: (402) 385-3360
www.blueox.com