



# BX2411

## 2011-14 Dodge Durango 2011-14 Jeep Grand Cherokee Installation Instructions

Please read **BOTH** these Installation Instructions and the General Instructions prior to installing or operating this equipment.

- Blue Ox® towing products and accessories are intended to be installed by Blue Ox® Dealers who are familiar with our products and have the equipment and knowledge necessary to do “fit work”. If needed, Blue Ox® Dealers can be found at [www.blueox.com](http://www.blueox.com) or by contacting our Customer Care Department at (402) 385-3051.
- Many Blue Ox® baseplates are designed to use existing holes and hardware to mount the baseplate to the towed vehicle. Even though bolts are there, do not assume they are adequate for baseplate mounting. Always use the hardware supplied in the hardware kit and existing hardware as specified in the installation instructions.

**Serial Number**

**Attachment Tab Height: 18”**

**Attachment Tab Width: 27-1/2”**

**Bolt Torque Specifications**  
Torque in Foot-Pounds for Inch Bolts

Bolt Size	Grade 5	Grade 8
1/4”	10	14
5/16”	19	29
3/8”	33	47
7/16”	54	78
1/2”	78	119
5/8”	154	230
3/4”	257	380



2014 Dodge Durango shown



2014 Jeep Grand Cherokee shown

**Bolt Torque Specifications**  
Torque in Foot-Pounds for Metric Bolts

Bolt Size	Grade 8.8	Grade 10.9
6MM	6	8
8MM	16	22
10MM	31	40
12MM	54	70
14MM	89	117
16MM	161	230
18MM	222	318

WARNING

Failure to read and follow these instructions could result in separation of the towed vehicle from the tow bar, causing property damage, loss of towed vehicle, personal injury or death.

If the front of your vehicle looks different than this, please contact us at (402)385-3051.

**Reference your vehicle owner’s manual for manufacturer’s towing specifications.**

BX2411  
2011-14 Dodge Durango  
2011-14 Jeep Grand Cherokee  
Installation Instructions



**Instruction Notes:** The fascia is removed and reinstalled for the baseplate installation. Some drilling and trimming is required.

Place all components that are removed on a flat, sturdy surface. All items will be reinstalled unless otherwise noted after the baseplate is installed.

The dimensional variations between otherwise identical vehicles can be considerable. While the baseplate was designed for easy installation, it may be necessary to tailor the baseplate slightly to compensate for vehicle manufacturer's tolerances.

The BX8848 4-Diode Wiring Kit is recommended for the 2014 Dodge Durango.

The BX8869 Tail Light Wiring Kit is recommended for all other models.

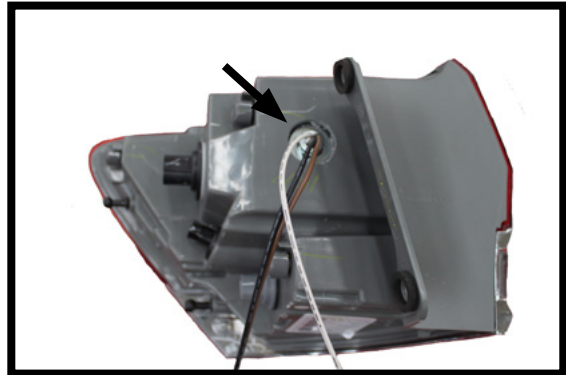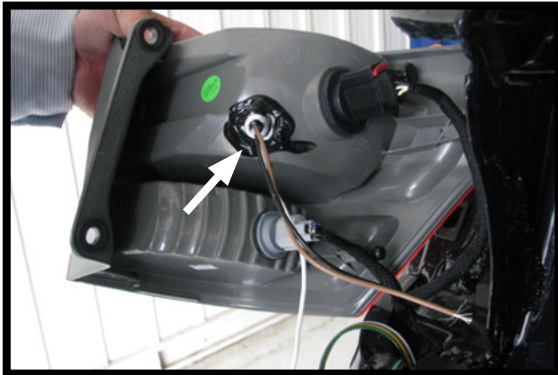

Drill a hole according to the tail  
light wiring kit instructions.

### **NOTICE**

- Handling of some cosmetic parts when installing this product may require the use of protective covers, rags, specialty tools, etc. to prevent damage.
- When using power drills be aware of the dangers of torque and drill bit length.
- When using a reciprocating saw be aware of objects behind the cutting surface.
- Use a good quality paint to spray cut edges of frame to prevent rusting.
- Be sure that **ALL** electrical connections are plugged in and accessories are functioning properly before reinstalling the fascia.
- The baseplate is computer tested to your vehicle's GVWR, exceeding this weight will void the manufacturer's warranty.
- Be sure to use Loctite® Red on all bolts before tightening. Tighten all bolts according to the torque chart provided.
- Dealer or installer be certain the user receives these instruction sheet.
- If the baseplate is in an accident, it must be replaced. **DO NOT** use it again! An accident can cause unseen damage and using it again could result in more damage or serious injury. **DO NOT** use the baseplate if it is damaged or missing parts.

# BX2411


## 2011-14 Dodge Durango

## 2011-14 Jeep Grand Cherokee

### Installation Instructions

#### Tools Required

Large Vise Grip  
 Flat Screwdriver  
 Phillips  
 Screwdriver  
 Utility Knife  
 Torque Wrench  
 Rivet Gun  
 Tape Measure  
 Loctite® RED  
 8MM Socket  
 10MM Socket  
 16MM Socket  
 30MM Socket  
 30MM Wrench  
 9/16" Socket  
 9/16" Wrench

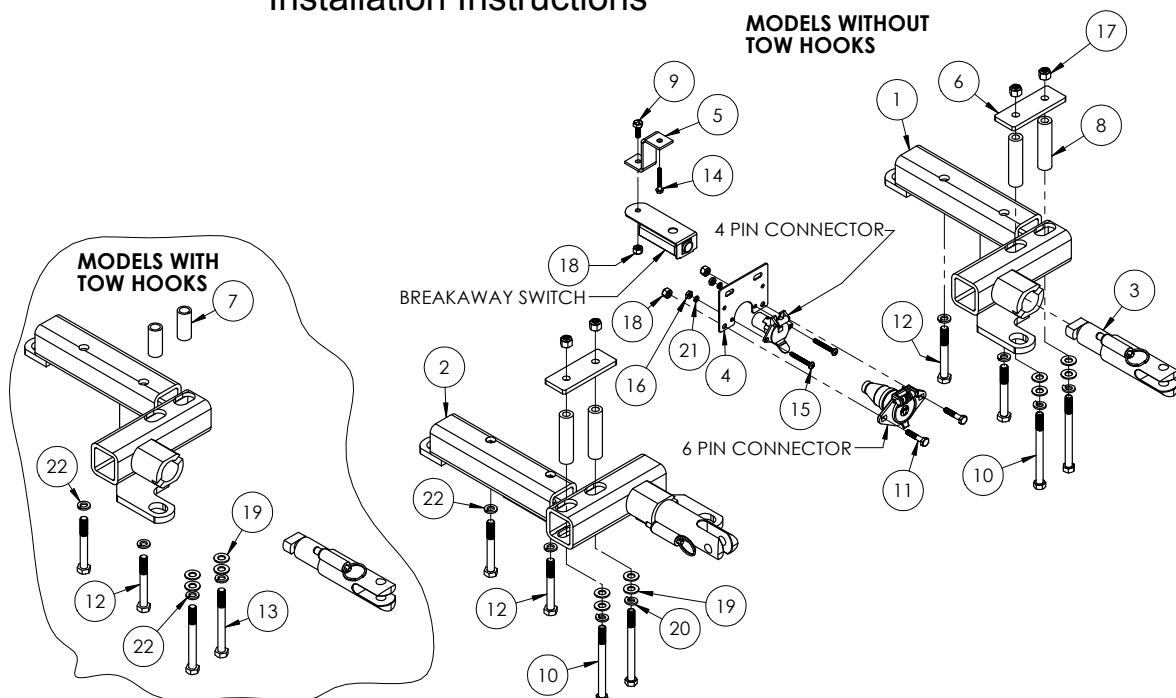


Item No.	Part No.	Description	Qty.
1	61-7272	BX2411 DS Baseplate	1
2	61-7273	BX2411 PS Baseplate	1
3	62-3468	Attachment Tab Assembly with Hole	2
4	101-6845	Electrical Bracket	1
5	102-7056	Breakaway Bracket	1
6	102-7106	Locking Plate	2
7	107-3184	Spacer Tube 3/4"Ø x 1-23/32"	4
8	107-3496	Spacer Tube 3/4"Ø x 3"	4
9	201-0050	1/4"-20 x 3/4" Hex Head Bolt, Grade 5, ZP	1
10	201-0077	3/8"-16 x 4-1/2" Hex Head Bolt, Grade 5, ZP	4
11	201-0204	1/4"-20 x 1-1/4" Hex Head Bolt, Grade 5, ZP	2
12	201-0429	10MM-1.5 x 80MM Hex Head Bolt, Grade 8.8, ZP	4
13	201-0432	10MM-1.5 x 100MM Hex Head Bolt, Grade 10.9, ZP	4
14	201-0654	#10-16 x 1" Self Drilling Screw	1
15	201-0192	#10-32 x 1-1/2" Phillips Pan Head Screw	2
16	202-0047	#10-32 Hex Nut	2
17	202-0090	3/8"-16 Hex Nylon Insert Lock Nut, ZP	4
18	202-0102	1/4"-20 Hex Nylon Lock Nut, ZP	3
19	203-0003	3/8" Flat Washer, ZP	8
20	203-0010	3/8" Lock Washer, ZP	4
21	203-0054	#10 Lock Washer, ZP	2
22	203-0104	10MM Lock Washer, ZP	8
23	226-0049(not shown)	Class IV Safety Cables	2
24	229-0512(not shown)	1/2" Quicklink, ZP	2
25	229-0536(not shown)	6.3MM Plastic Rivet	4
26	290-0437(not shown)	Black Cap Plug Receiver	2

#### Important:

Use only genuine factory replacement parts on your baseplate. Do **NOT** substitute homemade or non-typical parts. If a bolt is lost or in need of replacement, for your safety and the preservation of your baseplate, be sure to use a replacement bolt of the same grade (In most cases it will be Grade 5, please reference the parts list above). Replacement parts may be ordered through your nearest Blue Ox® Dealer or Distributor. Failing to follow and/or altering these installation instructions in either installation or required equipment will void the manufacturer's warranty. Towing behind a non-motorized vehicle will void the warranty.

BX2411  
2011-14 Dodge Durango  
2011-14 Jeep Grand Cherokee  
Installation Instructions


**Fascia Removal: 2011-13 Dodge Durango / Jeep Grand Cherokee**

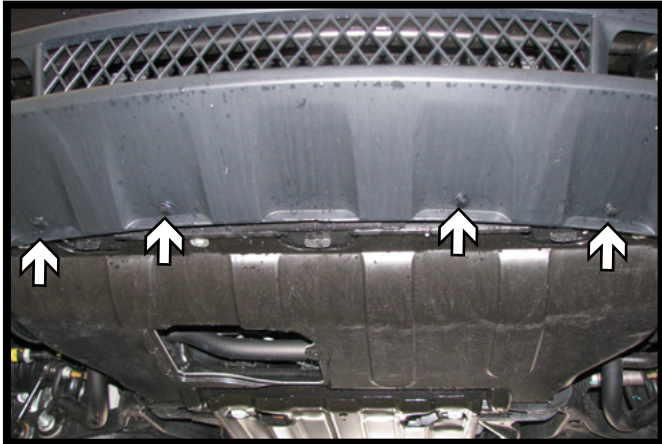

1. On the bottom side of the fascia, remove the four (4) push pins.



2. Using a utility knife, remove the two (2) plastic rivets from outer edge of the wheel well. Then release the knob at the bottom inner edge of the wheel well, by turning 90°. Do this on both sides of the vehicle.

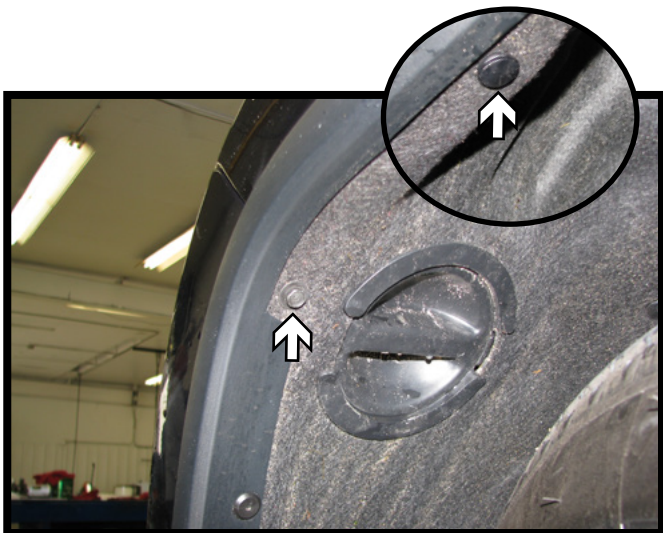

3. Along the upper edge of the wheel well, using a 10MM socket, remove the screw. Then remove the push pin further up (inset). Do this on both sides of the vehicle.



4. Pull the top corners of the fascia out releasing the clips behind. Continue working inward towards the grille releasing the clips under the headlights and grille. Set the fascia aside.


Continue to Step #1 on page #7

BX2411  
2011-14 Dodge Durango  
2011-14 Jeep Grand Cherokee  
Installation Instructions


**Fascia Removal: 2014 Dodge Durango**




1. Remove the two (2) Phillips head push pins from the top edge of the fascia.

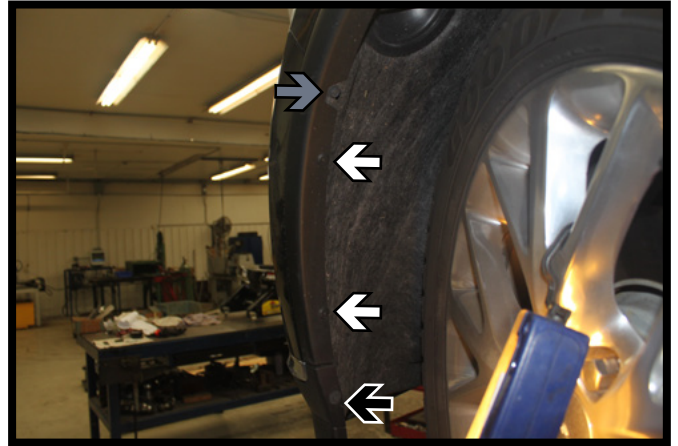

2. In the wheel well, using a 10MM socket, remove the top screw (gray). Using a 8MM socket, remove the lower screw (black). Then remove the two (2) plastic rivets (white). Do this on both sides of the vehicle.

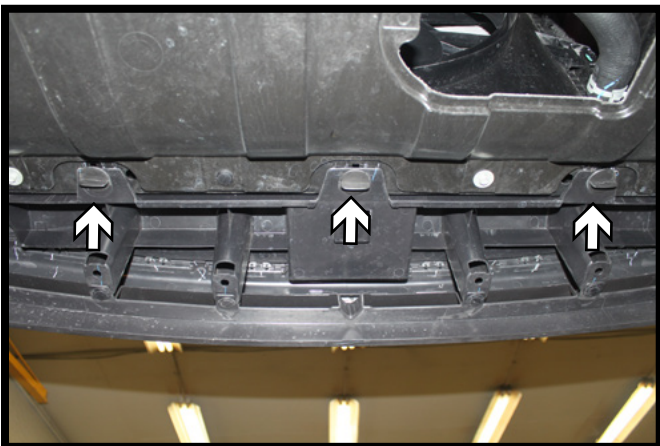

3. On the underside of the fascia, turn the three (3) locking knobs 90° to release.

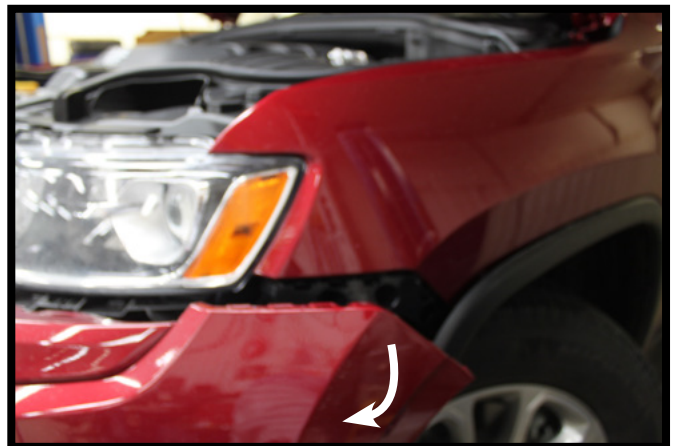

5. Pull the top corners of the fascia out releasing the clips behind, continue working inward towards the grille releasing the clips under the headlights. Pull the fascia forwards disconnecting all electrical connections and set the fascia aside.

Continue to Step #1 on page #7

BX2411  
2011-14 Dodge Durango  
2011-14 Jeep Grand Cherokee  
Installation Instructions


**Fascia Removal: 2014 Jeep Grand Cherokee**



1. On the topside of the fascia, remove the two (2) push pins.



2. Using a utility knife, remove the two (2) plastic rivets from outer edge of the wheel well (white). Then using a 10MM socket, remove the upper screw (gray). Do this on both sides of the vehicle.

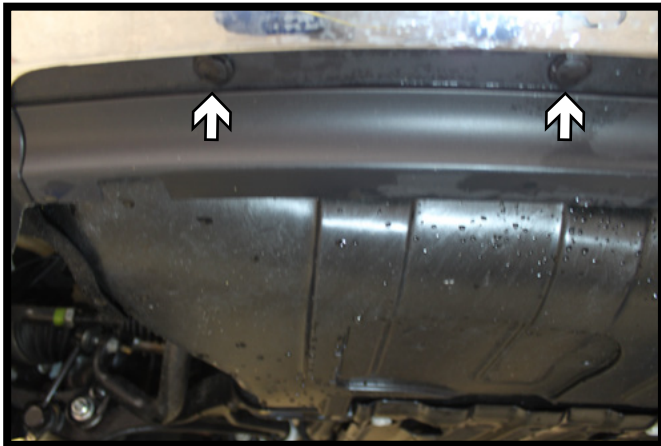

3. Underneath the bumper, remove the two (2) push pins. Do this on both sides of the vehicle.



4. On the underside of the fascia, release the fascia clips by turning 90°. There is one (1) towards the middle (white) and one (1) towards the outer edge by the tire (gray). Do this on both sides of the vehicle.




5. Pull the top corners of the fascia out releasing the clips behind, continue working inward towards the grille releasing the clips under the headlights. Pull the fascia forwards disconnecting all electrical connections and set the fascia aside.


Continue to Step #1 on page #7

BX2411  
2011-14 Dodge Durango  
2011-14 Jeep Grand Cherokee  
Installation Instructions


**Baseplate Installation: All Models**

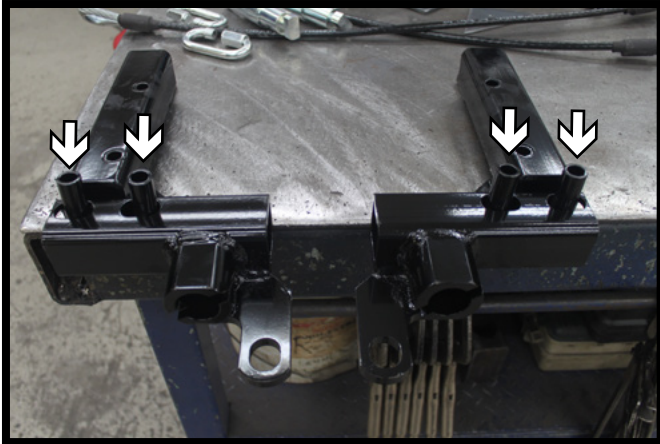


1. Prior to installing the baseplate to the vehicle, install the appropriate spacer tubes into the slots of the baseplate. The tubes will vary depending on whether the vehicle is equipped with tow hooks or not. Reference page 3.

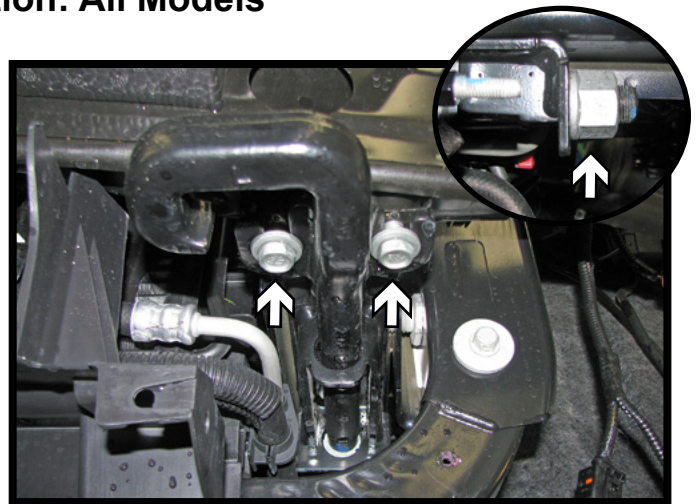

2. **Models equipped with tow hooks:** Using a 16MM socket, remove the two (2) bolts from the front side. Then using a 30MM socket or wrench, remove the nut from the backside of the tow hook. Remove the tow hook from the vehicle. Do this on both sides of the vehicle.

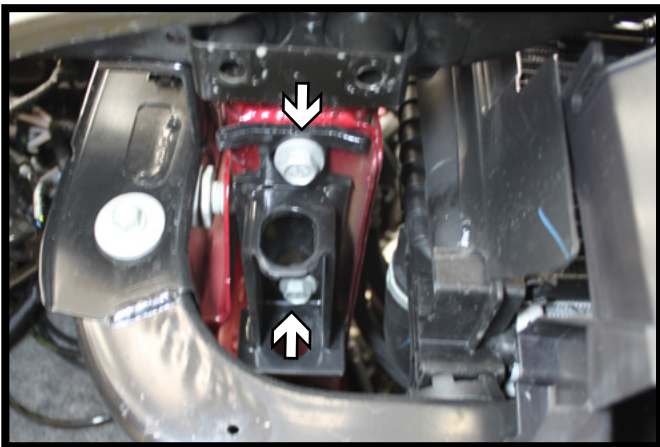


3. **Models equipped with tow hooks:** Using a 16MM socket, remove the two (2) bolts from the tow hook bracket. Remove the tow hook bracket from the vehicle. Do this on both sides of the vehicle.

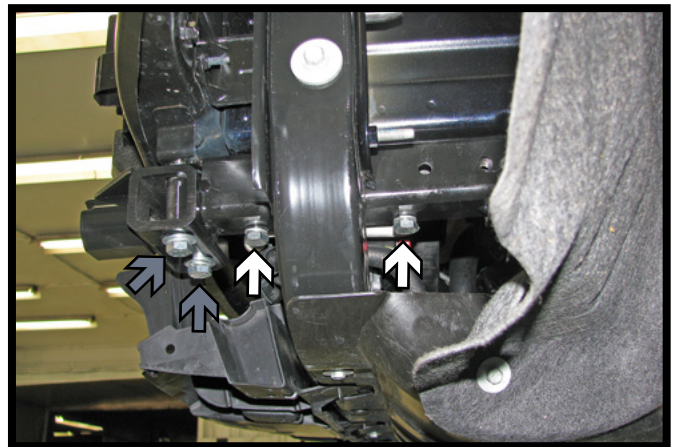


4. **Models equipped with tow hooks:** Slide the baseplate into position on the frame. Install two (2) 10MM-1.5 x 80MM bolts with 10MM lock washers into the bottom holes (white). Install 10MM-1.5 x 100MM bolts with 10MM lock and 3/8" flat washers thru the baseplate into the bumper on both the front holes (gray). Tighten all hardware. Do this on both sides of the vehicle.


BX2411  
2011-14 Dodge Durango  
2011-14 Jeep Grand Cherokee  
Installation Instructions

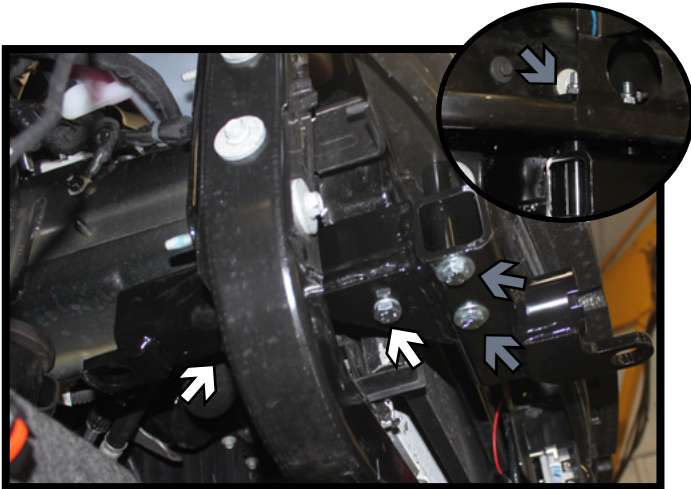


5. **Models equipped without tow hooks:** Slide the baseplate into position on the frame. Install two (2) 10MM-1.5 x 80MM bolts with 10MM lock washers into the bottom holes (white). Insert 3/8"-16 x 4-1/2" bolts with 3/8" lock and flat washers into the front holes with the locking plate and 3/8"-16 lock nuts on top of bumper (inset). Tighten all hardware. Do this on both sides of the vehicle.

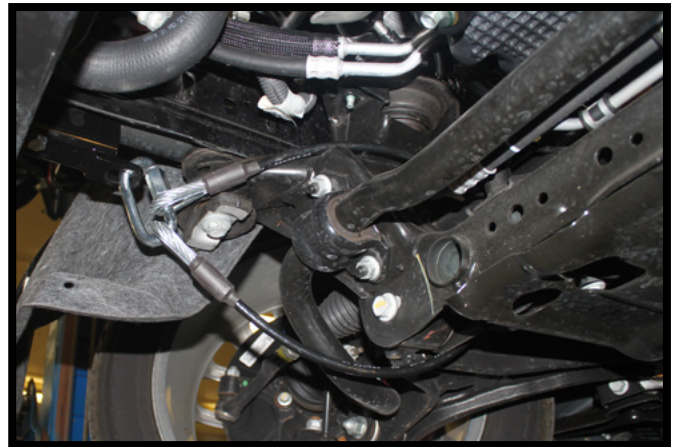

6. Attach the permanent baseplate safety cables to the provided convenience link on the baseplate. The photo above shows the recommended installation of the cables to frame of vehicle. Additional options may interfere with suggested mounting; in this case, secure the cables to a solid piece of the frame as described in the instructions included with the permanent baseplate safety cables. Be sure the safety cables do not rub against any hoses or moving parts. Do this on **BOTH** sides of the vehicle.

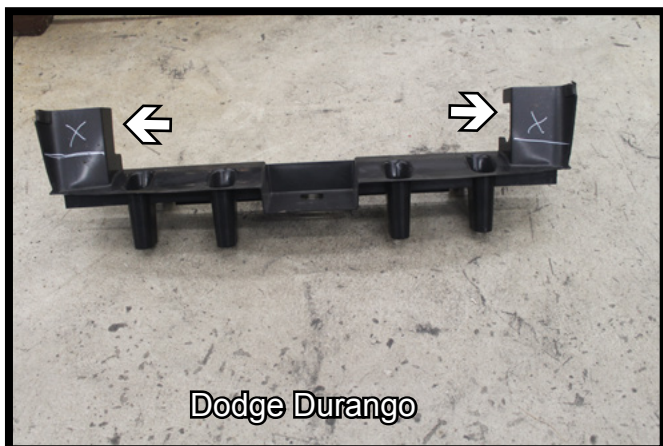

7. **Dodge Durango Only:** Trim the plastic support on the backside of the fascia as shown for baseplate clearance.

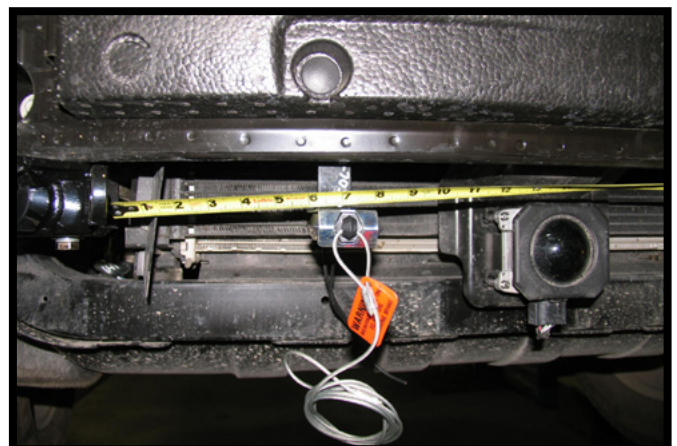

8. **Optional:** If installing a breakaway, measure over approximately 7" from the convenience link, install the breakaway bracket to the bumper with a #10-16 x 1" self drilling screw. Attach the breakaway to the bracket with a 1/4"-20 x 3/4" bolt and 1/4"-20 lock nut.



BX2411  
2011-14 Dodge Durango  
2011-14 Jeep Grand Cherokee  
Installation Instructions



9. Hold the fascia as close to its original position, mark and trim the fascia around the convenience links and attachment tabs. Reinstall the fascia. Using the rivet gun, replace the rivets in each wheel well.

## CUSTOMER SERVICE COMMITMENT

Blue Ox® is committed to providing you with exceptional customer care throughout your lifetime with our products. Our team is here to assist you with any questions you may have regarding the performance of your product. Simply call (402) 385-3051 and you can speak with our customer care team.

Additionally, please visit our website to see which rallies our Destination America team will be attending. For a nominal fee, our service technician will service your towing system to ensure it's in proper working condition. Also, as a commitment to our customers, should you visit our factory, you can stay at our full service Blue Ox® campground at no charge along with enjoying a factory tour.

Again, thank you for being our customer and for the confidence you have shown in the performance of our products. It is because of customers like you we enjoy the success we have today.

© 2013 Blue Ox  
One Mill Road, Industrial Park  
Pender, Nebraska 68047  
Phone: (402) 385-3051  
Fax: (402) 385-3360  
www.blueox.com