




INSTALLATION INSTRUCTIONS

BODY ARMOR OVERLAND BED RACK 16-18 TACOMA DOUBLE CAB SHORT BED

PARTS LIST:

1	Driver/left Front Corner Assembly	24	8-1.25mm x 40mm Socket Head Bolts
1	Passenger/Right Front Corner Assembly	32	8-1.25mm x 20mm Button Head Bolts
1	Driver/left Rear End Assembly	4	8-1.25mm x 18mm Button Head Bolts
1	Passenger/Right Rear End Assembly	8	8-1.25mm x 35mm Hex Bolts
1	Driver/left Front Mounting Bracket	8	8mm x 16mm x 1.6mm Flat Washers
1	Passenger/Right Front Mounting Bracket	64	8mm Nylon Lock Nuts
2	Rear Mounting Brackets	2	8mm Hex Nuts
2	Upper Accessory Mounting Brackets	2	6mm x 45mm Hex Bolts
2	Lower Accessory Mounting Brackets	2	6mm x 12mm x 1.6mm Flat Washers
4	"L" Univ. Accessory Brackets	24	2-Hole Washer for Tube Connectors
8	Round Spacers for "L" Brackets	4	Self-Adhesive Tape
2	Front Cross Brace Assemblies	1	6mm Wrench
4	Side Bar Assemblies	1	5mm Wrench
2	Rack Top Cross Bar Assemblies		

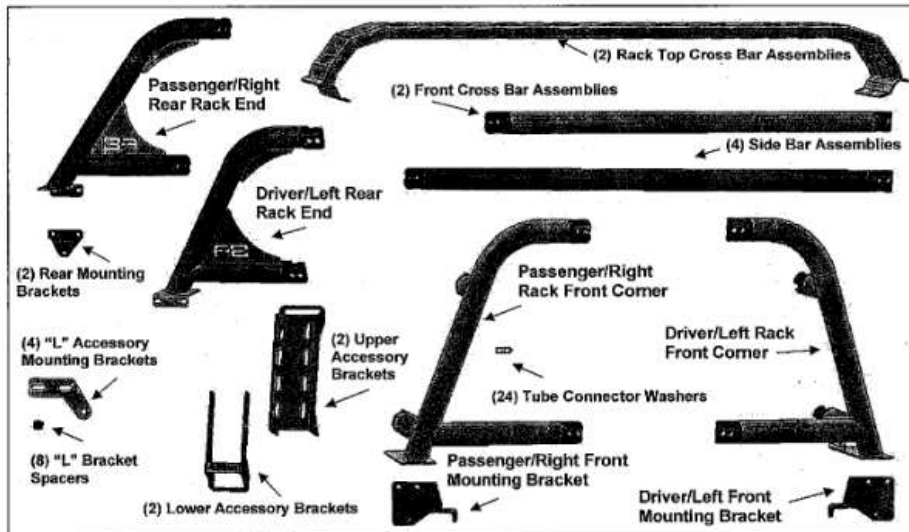

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. ASSISTANCE IS HIGHLY RECOMMENDED.

**BODY
ARMOR**

BODYARMOR4X4.COM
CALL US: 951.808.0750
ORDERS@BODYARMOR4X4.COM