

Exhaust System Installation for Chevrolet Camaro SS & Z28 and Pontiac Firebird & Trans-Am PN-14780



These instructions have been written to help you with the installation of your Borla Performance Exhaust System. Please read this document completely before beginning the installation of your system.

Please compare the parts in the box with the bill of materials provided to assure that you have all the parts necessary for this installation.

To ensure this part number fits your specific model year, please visit our website for the latest model year listings at www.BORLA.com.

Thank you for purchasing a Borla Performance Exhaust System.

Borla Performance Exhaust System (PN-14780) is designed for the Chevrolet Camaro SS & Z28, and Pontiac Firebird & Trans-Am, Coupe/Convertible, 5.7L V8 engine, RWD automatic or manual transmissions.

Borla Performance Industries recommends that an exhaust shop or professional after market parts installer, who has all the necessary equipment, tools and experienced personnel needed for proper installation, should perform the installation of this system. However, if you decide to perform the installation, we recommend someone should help you. Ensure the installer uses all under car safety precautions including eye protection.

Please take time to read and understand the following...

By installing your Borla Performance Exhaust System, you indicate that you have read this document and you agree with the terms stated below.

It is the responsibility of the purchaser to follow all installation instruction guidelines and safety procedures supplied with your Borla Performance Exhaust System

Borla Performance Industries assumes no responsibility for damages occurring from misuse, abuse, improper installation, improper operation, lack of responsible care, or all previously stated reasons resulting from incompatibility with other manufacturer's products and/or systems.

Included with your Borla Performance Exhaust System is a warranty card. Please read it carefully before you begin any work on your vehicle. If you should have any questions regarding our warranty policy, installation, or any other matter pertaining to your

Minimum Required Tool List:


TOOLS:

1. 3/8" Drive Ratchet
2. 3/8" Drive Extension 3"
3. 15mm Socket"
4. 3/8" Ratchet
5. 15mm Wrench
6. 17mm Socket
7. 17mm Wrench
8. Pry Bar

SHOP SUPPLIES:

- 1 Spray Lubricant

Borla Performance - Bill of Materials

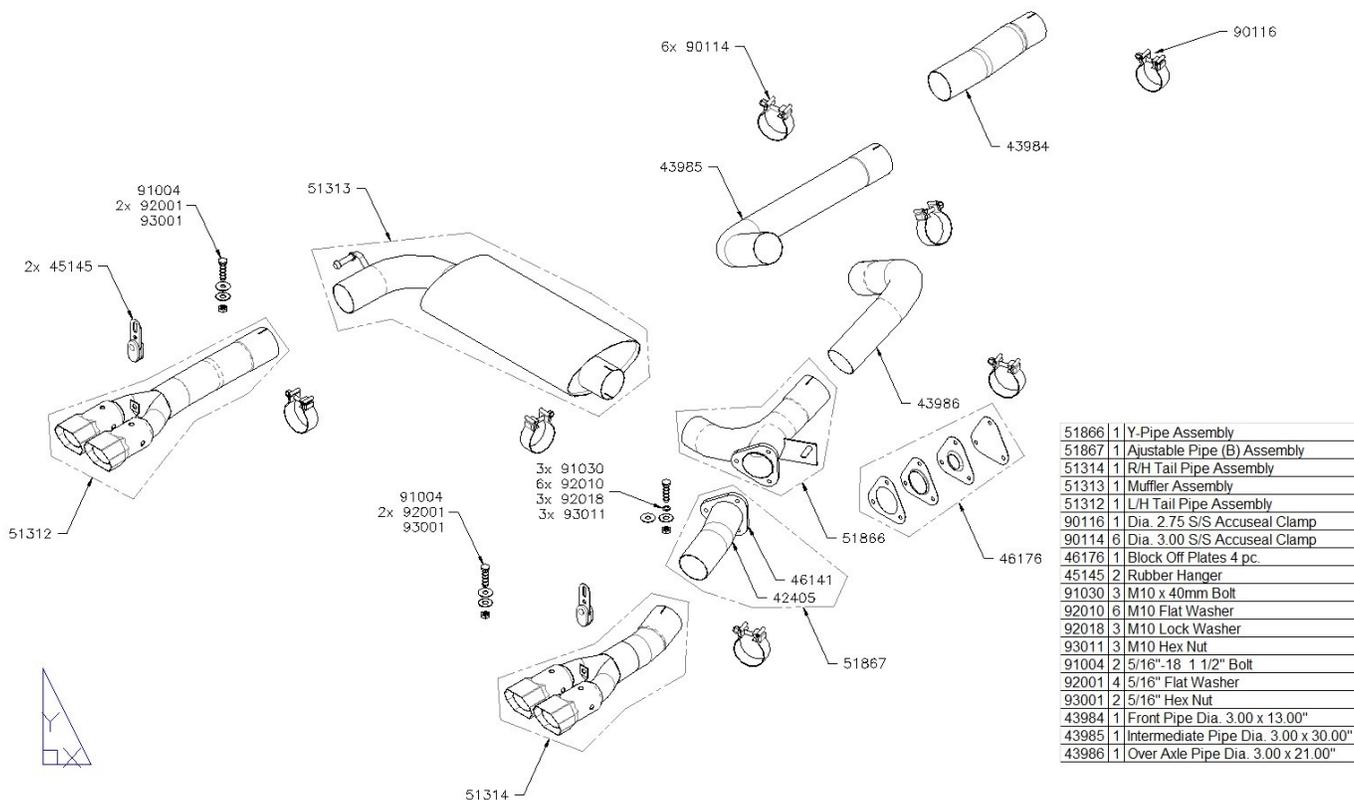

51866	1	Y-Pipe Assembly
51867	1	Adjustable Pipe (B) Assembly
51314	1	R/H Tail Pipe Assembly
51313	1	Muffler Assembly
51312	1	L/H Tail Pipe Assembly
90116	1	Dia. 2.75 S/S Accuseal Clamp
90114	6	Dia. 3.00 S/S Accuseal Clamp
46176	1	Block Off Plates 4 pc.
45145	2	Rubber Hanger
91030	3	M10 x 40mm Bolt
92010	6	M10 Flat Washer
92018	3	M10 Lock Washer
93011	3	M10 Hex Nut
91004	2	5/16"-18 1 1/2" Bolt
92001	4	5/16" Flat Washer
93001	2	5/16" Hex Nut
43984	1	Front Pipe Dia. 3.00 x 13.00"
43985	1	Intermediate Pipe Dia. 3.00 x 30.00"
43986	1	Over Axle Pipe Dia. 3.00 x 21.00"