



## Toyota "OE" Style® Bumper Protector

Part #34026

Rev-1 07/15/2016

For complete fitment info visit : [www.bushwacker.com](http://www.bushwacker.com)

### STEP 1 – PRIOR TO INSTALLATION

- A)** Bushwacker only approves installing the bumper protectors according to these written instructions with the hardware provided. **WARNING:** Failure to install according to these instructions will invalidate the warranty. This includes, but is not limited to using alternative installation methods, hardware, or materials. **DO NOT USE:** Loctite, SuperGlue, or similar products on the bumper protector.
- B) Fit:** Verify the fit of the bumper protector to vehicle. (Some filing, sanding, or cutting may be necessary to ensure proper fit).
- C) Painting:** (Optional) if paint is desired it must be done prior to installing bumper protector on the vehicle clean outer surface with a good grade degreaser. **DO NOT USE LACQUER THINNER OR ENAMEL REDUCER AS A DEGREASER.** Wipe outer surface thoroughly with a tack rag prior to paint. Paint bumper protector using a high quality enamel, or polyurethane automotive paint. (Application of a primer coat is optional) If painting edge trim (not recommended), use a flex additive.

### TOOLS FOR EASY INSTALLATION:

- Masking Tape
- Lint-free cloth

### LIMITED LIFETIME WARRANTY AGAINST ANY MANUFACTURING DEFECTS

- To claim a warranty, you must provide Proof of Purchase.


## Included in Hardware Kit:

1.



AD1-0008,  
ALCOHOL PREP  
PAD,  
2 pcs

# Bumper Protector Installation Procedures:

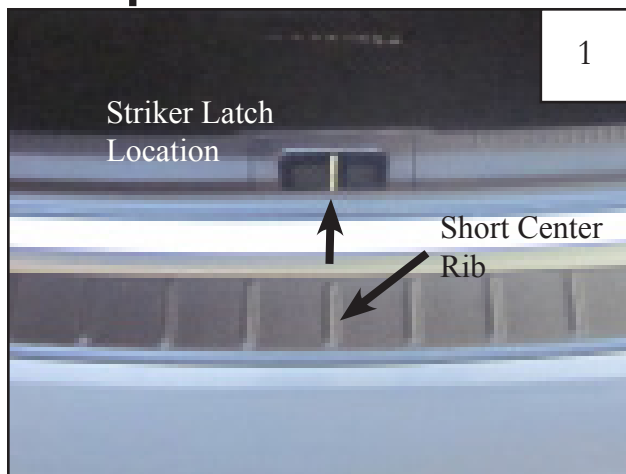


Open rear door of vehicle. **WITHOUT** peeling liner from tape pads, align part on bumper, centering the center rib of the bumper protector with metal loop on striker.



Apply a piece of masking tape along both edges of part for ease of placement during installation.



Make sure that all installation surfaces are free of dirt and/or grease. Use a clean, lint-free cloth and supplied isopropyl alcohol-based cleaning pad (AD1-0008).

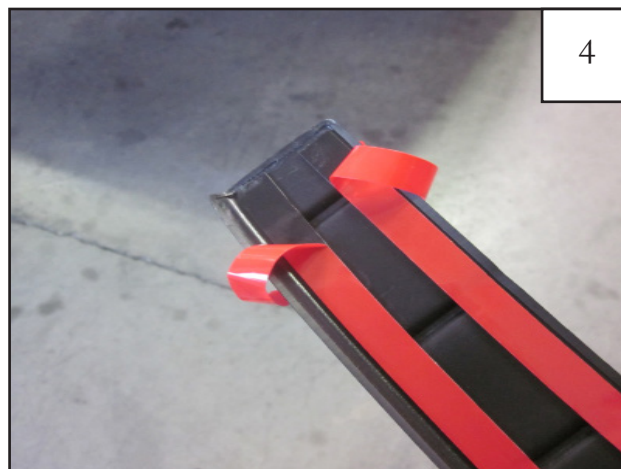

Peel red liners partially from tape pads and fold towards the outside of part.



Hold the part at an angle to prevent tape from prematurely sticking and align the part on Bumper by center, shorter rib in part with center of striker latch location and using the masking tape applied in Step 2 as a guide. Stick peeled end to Bumper and pull red tab nearest the rear of the vehicle while applying downward/forward pressure to the rear edge of part.



Maintaining part placement, repeat process for red tab liner nearest the front of the vehicle.



Press the part into place starting at the left side, pushing downward and forward while working your way to the right. Apply 30 PSI to the taped areas for proper bond. Tape reaches maximum adhesive bond after 24 hours of contact. Remove masking tape.