




Xtendable Trailer Towing Mirror Installation Instructions

For: All General Motors C/K Trucks 1988-2000*

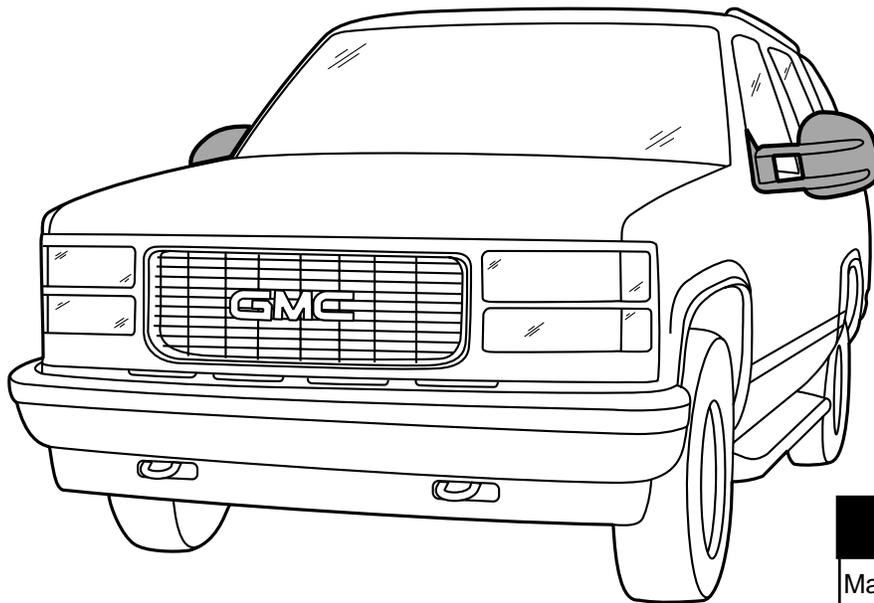

| * Chevrolet | Years |
|---------------|-----------|
| CK Pickup | 1988-2000 |
| Suburban | 1992-1999 |
| Tahoe | 1995-1999 |
| Tahoe Limited | 2000 |
| GMC | Years |
| Sierra | 1988-2000 |
| Suburban | 1992-1999 |
| Yukon | 1992-1999 |
| Denali | 1998-2000 |


CIPA Part Numbers 70000, 70500 & 80000

WARNING


Manufacturer recommends this installation be carried out by a professional installer or your local dealership.

PLEASE read **ALL INSTRUCTIONS** and warnings carefully before installing this product. These mirrors are designed only for the vehicle listed on this page. Ensure that the fitting instructions are followed exactly, as failure to do so may result in incorrect installation, or result in the driver, passenger or vehicle being placed in a hazardous condition, as well as voiding any warranty, implied or otherwise.

PARTS LIST

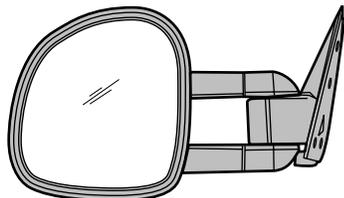

Driver's Side Mirror

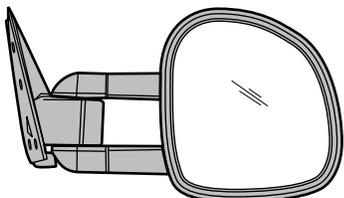


Passenger Side Mirror



Installation Instructions

10mm Nut



10mm Wrench

Note: Two people are required for proper installation of this product.

STEP ONE


Removing Trim Piece and Stuffer Gasket

Open the door and roll the window completely down.

Start at the top edge of the corner door trim piece and gently pull away and down from the door to disengage the christmas tree. Once disengaged, pull the trim piece upward to disengage it from the door trim panel.

Gently pull the gasket from door pocket .

Set both pieces aside to be reinstalled later.

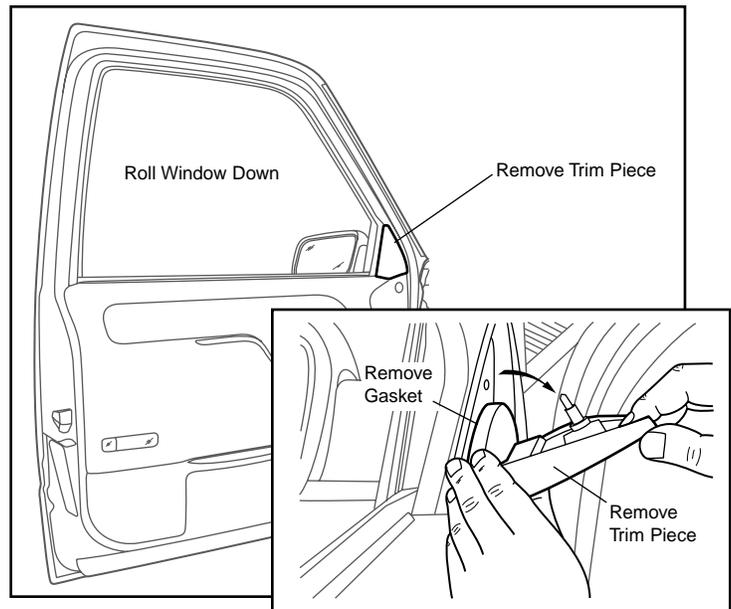


STEP TWO

Disconnecting Electrical Connector – Electric Mirrors Only

For manual mirror installation proceed to Step Three.

If you are installing an electric mirror, pull the wiring harness out of the door to access the plug. Gently pry the locking tab on the side of the plug and pull the harness away. DO NOT allow the harness and connector to fall into the door cavity.

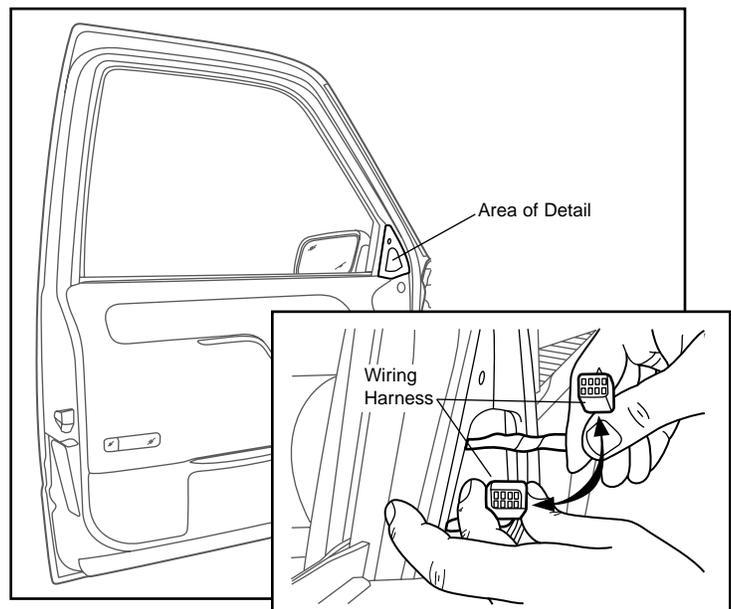


STEP THREE

Removing Factory Mirror

While a second individual holds the factory mirror, use a 10mm open ended wrench to remove the the three 10mm nuts inside the door. Make sure not to drop loose 10mm nuts into door cavity. Slowly remove factory mirror from door.

If the vehicle is equipped with an electrical harness feed it through as the mirror is removed.

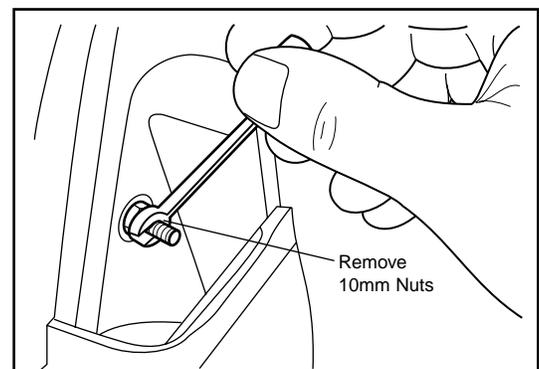


STEP FOUR

Installing Xtendable Trailer Tow Mirror

Clean any foreign material from sheet metal of door exterior with a clean, soft cloth.

If you are installing an electric mirror, feed the wire harness through the center hole in the door.


Slide the three studs on the mirror into the holes in the door. While a second person holds the mirror in place, thread a 10mm nut from the parts kit onto each stud. Once the nuts are installed on each stud, tighten them in an alternating pattern until they are secure.

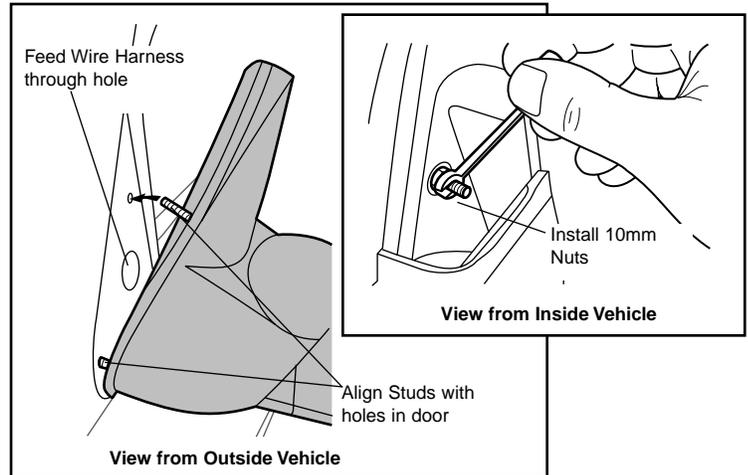

STEP FIVE

Reconnecting Electric Mirror


If installing an electric mirror, connect the wiring harness to the plug in the door and slip the wiring into the door cavity. **Note:** some mirrors have a four inch jumper harness assembled for adaptation of a non heated mirror to a heated harness. Discard this jumper harness if your vehicle does not have heat.

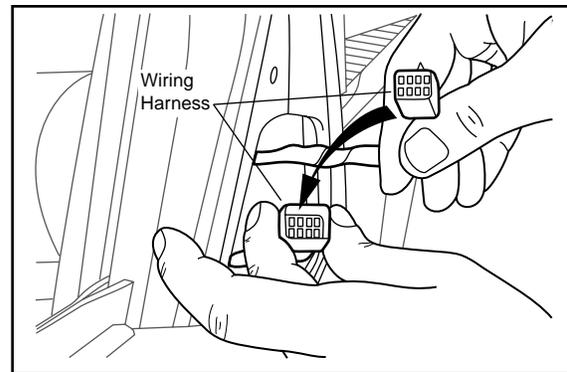

STEP SIX

Finishing Installation

Replace the gasket in the opening in the door and reinstall the trim piece with the christmas tree fastener.

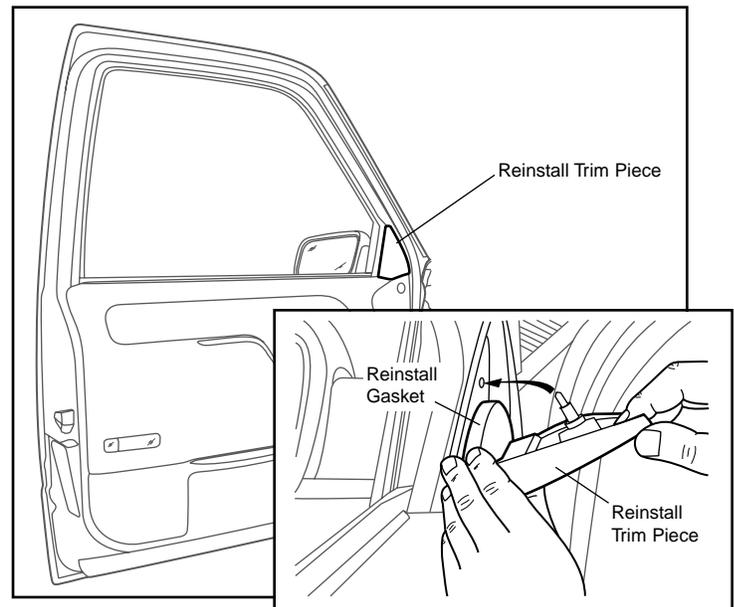

STEP SEVEN

Repeat this installation procedure with the remaining mirror on the other side of the vehicle.

This completes the installation of your Towing Mirror.