




Installation Instructions

22-802IC

1. If your vehicle has tilt steering, put the steering wheel in the lowest position.
2. (EMERGENCY BRAKE MUST BE ON)
3. If your vehicle has a shifter on the column, you will need to move it all the way down.
4. Test fit the new cover to make sure you have a proper fit.
5. Using ammonia based cleaner such as Windex®, clean the original cluster area and the underside of your new Coverlay®.
6. Apply a 1/8" bead of silicone around your **existing** instrument cluster and vent areas as displayed in the picture below. Also add quarter sized blots where shown.

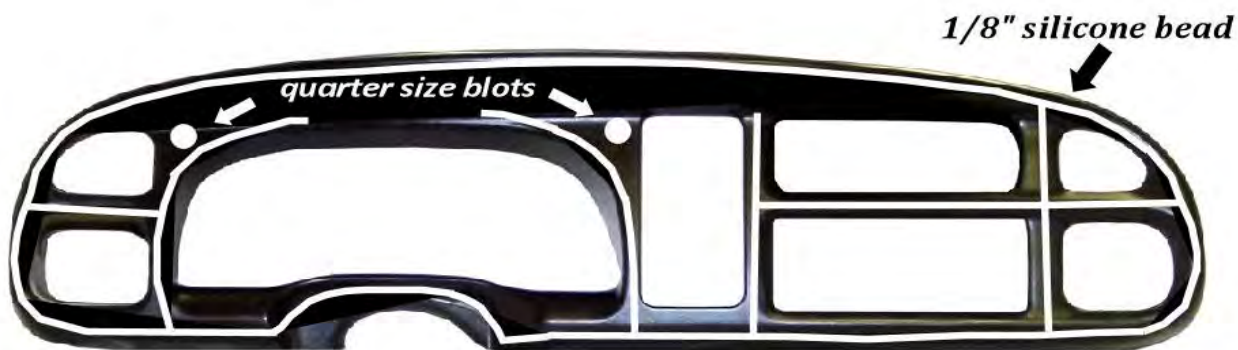

7. Use masking tape to hold your new cover in place for 6 to 8 hours.