



12-10K

KICK PANEL INSTALLATION INSTRUCTIONS

IMPORTANT

- READ ALL INSTRUCTIONS BEFORE ATTEMPTING TO INSTALL PANELS.
- MAKE SURE YOU HAVE THE CORRECT PANELS FOR YOUR AUTOMOBILE.
- COVERLAY® KICK PANELS ARE NOT EXACT DUPLICATES OF FACTORY ORIGINALS.


BE CAREFUL NOT TO WIND UP CARPET MATERIAL IN DRILL BIT!

KICK PANEL INSTALLATION

1. Line up the back edge of the kick panel with the back edge of the door panel.
2. Using a 1/8" drill bit; drill a hole (using the predrilled holes in the panel as a guide) through the kick panel into your door's sheet metal beginning in the upper most rear corner (1). Be sure not to push the Coverlay® kick panel up against the bottom of the upper door panel during installation.
3. Drill remaining screw holes in order, using the numbered diagram below for screw placement, installing screws as you go (2-6).

KICK PANEL INSTALLATION

4. Starting at the upper front corner, install the 3/4" screw (7) through the map pocket into the panel. Proceed to upper left hand corner of pocket (8) and install screw. Finish by installing remaining screws (9 & 10).

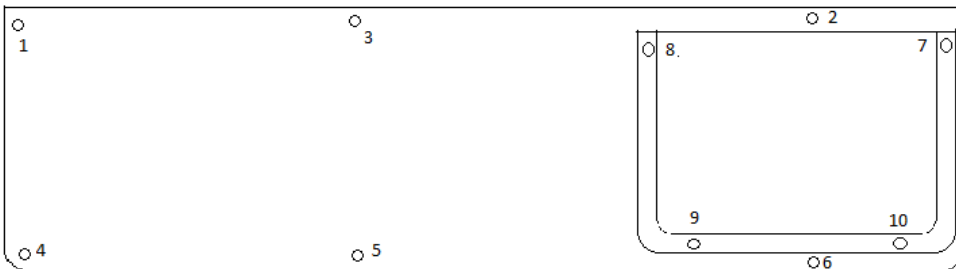

PARTS LIST

- Left & Right Kick Panel
- 2 Map Pockets
- 2 8 x 1 1/4" Screws
- 18 8 x 3/4" Screws

YOU WILL NEED

- Drill
- 1/8" Drill Bit

Installation assistance is available Mon.-Fri. 8:00 am – 3:30 pm CST at 1-800-633-7090.



Our Warranty

Coverlay Manufacturing, Inc. warrants all of its products to be free of defects in workmanship and material. It further warrants that when properly installed our products will not warp or crack for the life of the vehicle. Uninstalled products reported defective after 30 days of receipt will not be covered under warranty. Color is not covered under warranty and photos may be required to determine warranty issues. If a product failure occurs, we will only replace the defective product in the original color. Cost of shipping and handling of replacement parts is not covered on warranty claims made after 30 days of receipt.

Furthermore, it is our policy that returns must be requested within 30 days of purchase. If a **Retail Purchaser** of any Coverlay® product which is purchased directly from our manufacturing site is not totally satisfied with his or her purchase they may request to return it within **30 days** of delivery date with copy of receipt for a full product refund. If purchased indirectly through a supplier of our product, the supplier must be contacted for return authorization. **Dealers and Distributors** must also request return authorization within **30 days** of delivery and upon receipt of return, credit for product will be issued less applicable restock fees. All products must not have been installed or altered and received back in "re-stock" condition or no refund will be applied. Products returned under this policy must be shipped back in original unaltered packaging with freight prepaid by purchaser.

Prior to return of any product purchased directly, you must contact us at 1-800-633-7090 for an authorization number and return instructions. Return product must be received within 30 days of return authorization. *You must contact your supplier for return instructions if purchased indirectly.*

COLOR MATCH IS NOT GUARANTEED OR COVERED UNDER WARRANTY

We offer 15 generic colors as a no charge convenience. These will not be a perfect match but will normally be complimentary to the vehicle interior. If an exact match is desired then you may obtain color code matched plastic dye in an aerosol can from your local automotive paint store. Repaint to your satisfaction before installing in your vehicle.