

DOOR PANEL INSERT INSTALLATION INSTRUCTIONS

IMPORTANT

- READ ALL INSTRUCTIONS BEFORE ATTEMPTING TO INSTALL INSERTS.
- MAKE SURE YOU HAVE THE CORRECT INSERTS FOR YOUR AUTOMOBILE.

1. Preparing for Installation

- a. Remove old vinyl from insert area using a utility knife or razor blade to trim around the edges.
- b. Using a putty knife, scrape the existing foam from around the outer edges and wipe clean with a damp cloth.




1-a



1-b

2. Installation of New Inserts

- a. Test fit new insert.
- b. Place new insert into position making sure to push in from the side to close any gap under the pull handle. While holding in place, pre-drill the 9 holes into the door using a 1/8" drill bit.
- c. Install screws provided in hardware kit through pre-drilled holes using a phillips screwdriver.
DO NOT APPLY TOO MUCH PRESSURE AS THE SCREWS SHOULD ONLY BE SNUG.

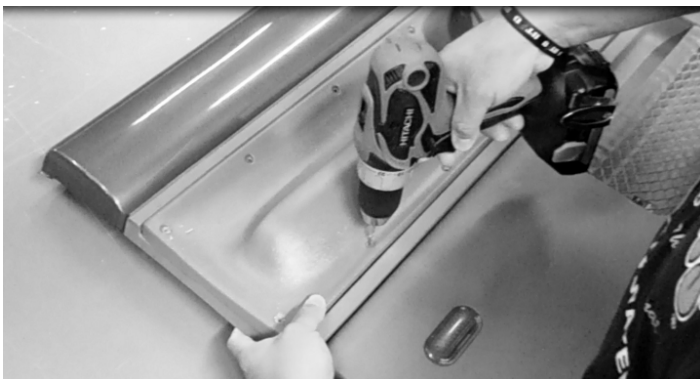

2-b



2-c

Tools Needed:

Utility Knife or Razor Blade
Putty Knife
Drill with 1/8" Drill Bit
Phillips Screwdriver
Clean Damp Cloth

Included - Hardware Kit:

(18) #8 x 5/8" Phillips Tapping Screws

**Installation assistance is available
Mon.-Fri. 8:00 am – 3:30 pm CST
at 1-800-633-7090.**