


DOOR PANEL INSTALLATION INSTRUCTIONS

IMPORTANT:

- READ ALL INSTRUCTIONS BEFORE ATTEMPTING TO INSTALL PANELS.
 - COVERLAY® DOOR PANELS ARE NOT EXACT DUPLICATES OF FACTORY ORIGINALS.
 - MAKE SURE YOU HAVE THE CORRECT PANELS FOR YOUR AUTOMOBILE
1. Some full power vehicles have lock/window cut out at top of panel and some are at the bottom of the panel. Determine which type you have and locate the scribe lines for the appropriate cut-out on the back of the panel. Carefully trim out scribe lines.
 2. If vehicle has remote mirrors, scribe lines are indicated on pack of door panel. **Cut inside scribe lines with caution** and increase size of hole inside triangle area of door panel to scribe line size. **Be certain to lay door panel on soft surface so that front is not scratched while cutting scribe lines from back side.**
 3. Remove bezel from around door handle by inserting a putty knife at the front of bezel. Lift up and slide back. **This method of removal is the only way to prevent breakage of bezel.**
 4. For vehicles '89-'93, remove bezel from around switch plate by inserting screwdriver at **front of bezel**. Lift up and bezel should pop up. Pop out electric switch and remove and **save the two (2) factory screws behind switch plate.**
 5. For vehicles '94-'96, remove bezel from around switch plate by inserting screwdriver at **rear of bezel**. Lift up and bezel should pop up. Pop out electric switch.
 6. Remove old door panels. Align hole in triangle area of new door panel and hole in arm rest area with corresponding holes in door. Use **oval head** Phillips screw in hole in triangle area and **pan head** Phillips screw in armrest hole. Tighten screws snugly, **but do not overtighten.**
 7. Drill 9/64" hole in door through pre-drilled holes in door panel in five (5) locations indicated. Use #10 screws with metal washers (provided) to secure door panels.
 8. Insert electric switch replacing factory screws on indicated models. Re-attach hand bezel using reverse process listed in step #4 and window bezel using reverse process in step #5 or #6.

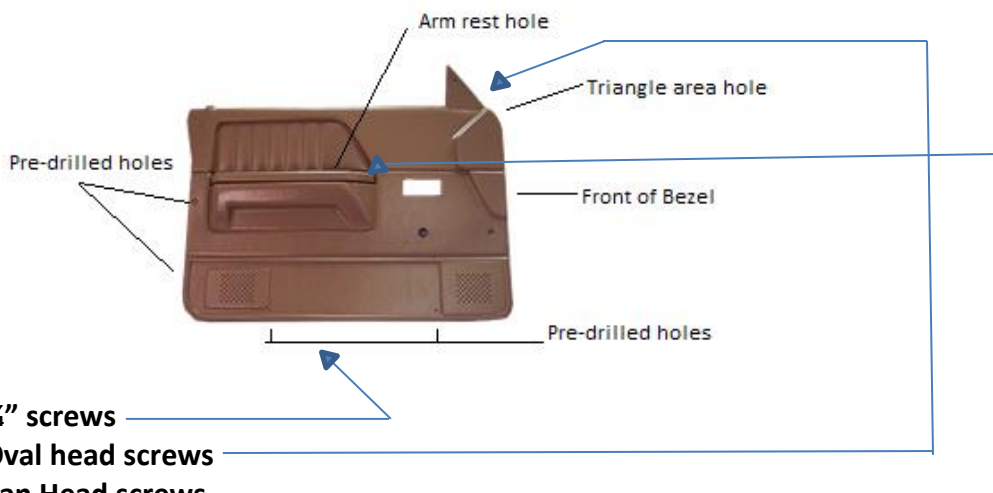

Parts List:

- 10 #10 x 1 1/4" screws
- 2 #8 x 1" Oval head screws
- 2 #8 x 1" Pan Head screws

Installation assistance is available Mon.-Fri. 8:00 am – 3:30 pm CST at 1-800-633-7090.



Our Warranty

Coverlay Manufacturing, Inc. warrants all of its products to be free of defects in workmanship and material. It further warrants that when properly installed our products will not warp or crack for the life of the vehicle. Uninstalled products reported defective after 30 days of receipt will not be covered under warranty. Color is not covered under warranty and photos may be required to determine warranty issues. If a product failure occurs, we will only replace the defective product in the original color. Cost of shipping and handling of replacement parts is not covered on warranty claims made after 30 days of receipt.

Furthermore, it is our policy that returns must be requested within 30 days of purchase. If a **Retail Purchaser** of any Coverlay® product which is purchased directly from our manufacturing site is not totally satisfied with his or her purchase they may request to return it within **30 days** of delivery date with copy of receipt for a full product refund. If purchased indirectly through a supplier of our product, the supplier must be contacted for return authorization. **Dealers and Distributors** must also request return authorization within **30 days** of delivery and upon receipt of return, credit for product will be issued less applicable restock fees. All products must not have been installed or altered and received back in "re-stock" condition or no refund will be applied. Products returned under this policy must be shipped back in original unaltered packaging with freight prepaid by purchaser.

Prior to return of any product purchased directly, you must contact us at 1-800-633-7090 for an authorization number and return instructions. Return product must be received within 30 days of return authorization. *You must contact your supplier for return instructions if purchased indirectly.*

COLOR MATCH IS NOT GUARANTEED OR COVERED UNDER WARRANTY

We offer 15 generic colors as a no charge convenience. These will not be a perfect match but will normally be complimentary to the vehicle interior. If an exact match is desired then you may obtain color code matched plastic dye in an aerosol can from your local automotive paint store. Repaint to your satisfaction before installing in your vehicle.