


DOOR PANEL INSTALLATION INSTRUCTIONS

IMPORTANT:

- READ ALL INSTRUCTIONS BEFORE ATTEMPTING TO INSTALL PANELS.
 - COVERLAY® DOOR PANELS ARE NOT EXACT DUPLICATES OF FACTORY ORIGINALS.
 - MAKE SURE YOU HAVE THE CORRECT PANELS FOR YOUR AUTOMOBILE
1. Some full power vehicles have lock/window cut out at top of panel and some are at the bottom of the panel. Determine which type you have and locate the scribe lines for the appropriate cut-out on the back of the panel. Carefully trim out scribe lines.
 2. If vehicle has remote mirrors, scribe lines are indicated on pack of door panel. **Cut inside scribe lines with caution** and increase size of hole inside triangle area of door panel to scribe line size. **Be certain to lay door panel on soft surface so that front is not scratched while cutting scribe lines from back side.**
 3. Remove bezel from around door handle by inserting a putty knife at the front of bezel. Lift up and slide back. **This method of removal is the only way to prevent breakage of bezel.**
 4. For vehicles '89-'93, remove bezel from around switch plate by inserting screwdriver at **front of bezel**. Lift up and bezel should pop up. Pop out electric switch and remove and **save the two (2) factory screws behind switch plate.**
 5. For vehicles '94-'96, remove bezel from around switch plate by inserting screwdriver at **rear of bezel**. Lift up and bezel should pop up. Pop out electric switch.
 6. Remove old door panels. Align hole in triangle area of new door panel and hole in arm rest area with corresponding holes in door. Use **oval head** Phillips screw in hole in triangle area and **pan head** Phillips screw in armrest hole. Tighten screws snugly, **but do not overtighten.**
 7. Drill 9/64" hole in door through pre-drilled holes in door panel in five (5) locations indicated. Use #10 screws with metal washers (provided) to secure door panels.
 8. Insert electric switch replacing factory screws on indicated models. Re-attach hand bezel using reverse process listed in step #4 and window bezel using reverse process in step #5 or #6.

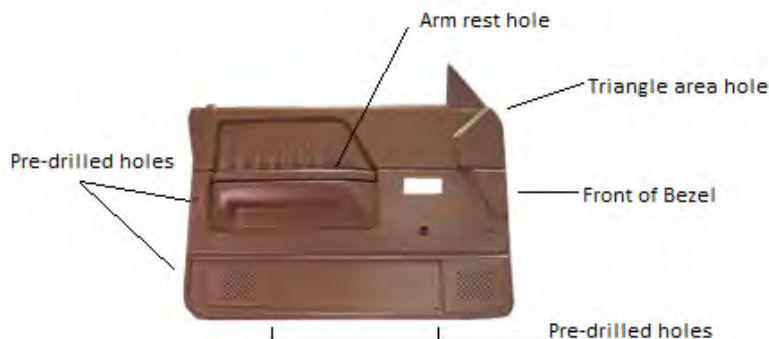

Parts List:

- 16 Plastic "Christmas Tree" Fasteners
- 4 #10 x 2" Screws
- 2 #6 x 1 1/4" Screws

Installation assistance is available Mon.-Fri. 8:00 am – 3:30 pm CST at 1-800-633-7090.