



Part # 17-94 R, 17-94 F Pass, 17-96 Pass


DOOR PANEL INSERT INSTALLATION INSTRUCTIONS

IMPORTANT

- READ ALL INSTRUCTIONS BEFORE ATTEMPTING TO INSTALL INSERTS.
- MAKE SURE YOU HAVE THE CORRECT INSERTS FOR YOUR AUTOMOBILE.

1. Preparing for Installation

- a. Using a utility knife or razor blade, cut along seam to ensure fabric lays flat. Gluing down fabric is not necessary.
- b. Using a precision screwdriver or panel removal tool, pop off the cover to handle. Unscrew the three screws and remove handle. Keep these screws for reinstallation of handle later.

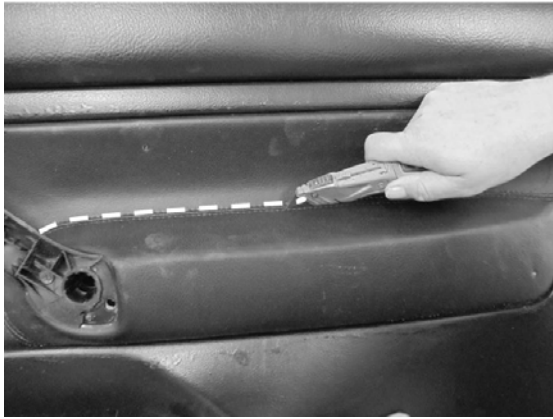

1-a



1-b

2. Installation of New Inserts

- a. Test fit new insert.
- b. Place new insert into position making sure to push in from the side to close any gap under the pull handle. While holding in place, pre-drill the countersunk indentions into the door using a 1/8" drill bit.
- c. Install screws provided in hardware kit through pre-drilled holes using a Phillips screwdriver. **DO NOT APPLY TOO MUCH PRESSURE AS THE SCREWS SHOULD ONLY BE SNUG.**
- d. Reattach handle.



2-b



2-d

Tools Needed:

Utility Knife or Razor Blade
Precision Screw Driver or Panel Removal Tool
Drill with 1/8" Drill Bit
Phillips Screwdriver

Included - Hardware Kit:

#8 x 5/8" Phillips Tapping Screws Included

Installation assistance is available
Mon.-Fri. 8:00 am – 3:30 pm CST Call
1-800-633-7090.