



# INSTALLATION MANUAL

18125

## Level of Difficulty

### Easy

Installation difficulty levels are based on time and effort involved and may vary depending on the installer level of expertise, condition of the vehicle and proper tools and equipment.

## Parts List

| Item | Qty | Description        |
|------|-----|--------------------|
| 1    | 2   | Quick release      |
| 2    | 2   | Tube spacers, 12mm |
| 3    | 2   | Tie down strap     |

## Product Registration and Warranty

CURT stands behind our products with industry-leading warranties. To get copies of the product warranties, register your purchase or provide feedback, visit: [warranty.curtgroup.com/surveys](http://warranty.curtgroup.com/surveys)

## ⚠ WARNING

Never exceed the factory weight rating of the OEM roof rack, including the weight of the cargo carrier.

## Product Photo



## NOTICE

Visit [www.curtmfg.com](http://www.curtmfg.com) for a full-color copy of this instruction manual, as well as helpful videos, guides and much more!

Before you begin installation, read all instructions thoroughly.

Proper tools will improve the quality of installation and reduce the time required.

Periodic inspection of your product should be performed to ensure all hardware and / or components remain secure.


To help prevent damage to the product or vehicle, refer to the specified torque specifications when securing hardware during the installation process.

Cargo roof rack rating: 150 lbs. limited to your vehicles factory roof rack weight limit.

# ASSEMBLY


## Parts List

| Item | Qty | Description        |
|------|-----|--------------------|
| 1    | 2   | Quick release      |
| 2    | 2   | Tube spacers, 12mm |
| 3    | 2   | Tie down strap     |

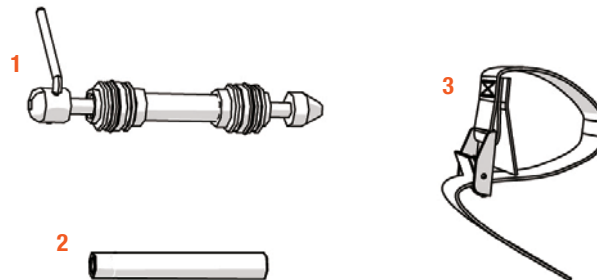

### Step 1


Remove the old fork mounts from the cargo basket, if installed.

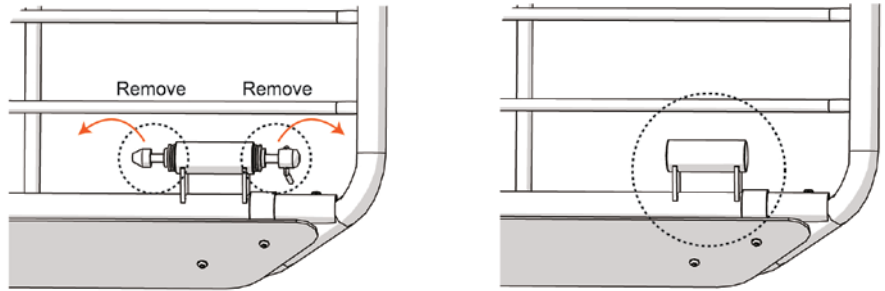

### Step 2

Install the replacement adapters.


Note that the adapters can be flipped around for either 100 mm or 110 mm spacing. Verify your fork spacing before installing.

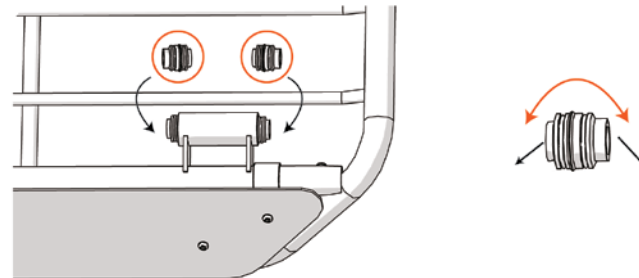

### Step 3

Insert the appropriate bushing.

For 9mm axles, insert the bushing with the groove. For 12mm axles, insert the bushing with no groove. For 15mm axles, no bushing is required.

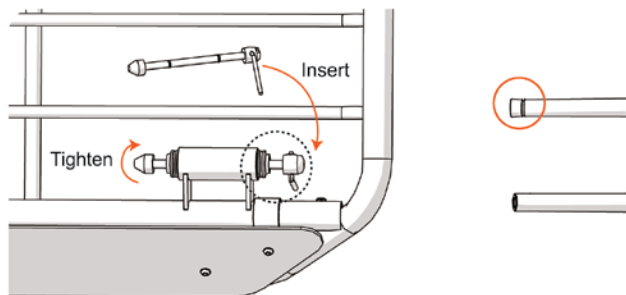

### Step 4

Insert the quick release through the bushing.

**Note:** The quick release is only suitable for 9mm axles. For 12mm and 15mm thru axles, re-use the bike axle.

Wrap the safety strap around the rear tire and cargo rack to secure the rear of the bike. Feed the end of the strap into the buckle and tighten.

