

# INSTALLATION MANUAL

## Level of Difficulty

Easy

## ⚠ WARNING

Do not exceed product rating or tow vehicle lamp load rating, whichever is lower.

## NOTICE

Before you begin installation, read all instructions thoroughly.

Proper tools will improve the quality of installation and reduce the time required.

All steps must be followed to ensure the product will function properly. Once installed, test for proper function by using a test light or connecting a properly wired trailer.

## Maintenance

Periodic inspection of all wires and connections should be performed to ensure there is no visible damage or loose connections.

## Tools Required

Cutting tool	--
--------------	----

## Wiring Location(s)

BH1

## Product Registration and Warranty

CURT Group stands behind our products with industry-leading warranties. Provide feedback and help us to improve our products by registering your purchase at: [warranty.curtgroup.com/surveys](http://warranty.curtgroup.com/surveys)



**E**  
E-brake


**BH1**

Brake

Gas

### Step 1

Locate the vehicle brake control harness connector underneath the dash, just above the driver-side kick panel. The connector will be similar to that on the custom brake control harness.

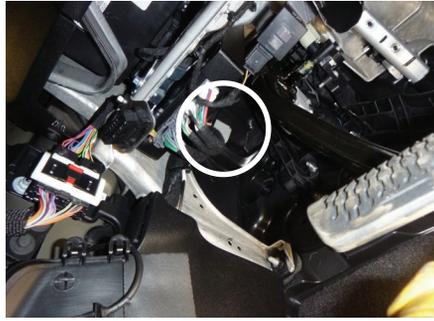

### Step 2

Insert the connector from the vehicle to the custom brake control harness. Make sure the connector is fully inserted with locking tabs in place.



### Step 3

Insert the other end of the brake control harness into the brake control unit. Secure the brake control harness with the provided cable ties, avoiding any pinch points. Do not let the harness dangle near the foot pedals.

### Step 4

Complete the installation using the brake control instructions. Mount the unit as directed and perform test procedures as instructed in the brake control user manual.