

55311

CHEVROLET BLAZER
CHEVROLET C/K SERIES PICKUP
CHEVROLET SUBURBAN
GMC BLAZER
GMC C/K SERIES PICKUP
GMC SUBURBAN

WIRING LOCATION GUIDE
GUÍA DE UBICACIÓN DEL CABLEADO
IDE D'EMPLACEMENT DES FILS



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement fileté.

5/14/09



English

1. Locate the vehicles taillight wiring harness. It will be located behind the bumper on the drivers side frame rail. A The harness will have connectors similar to those on the T-connector harness. Separate the vehicles connectors being sure not to damage the locking tabs.


2. Insert the T-connector end in-between the separated connectors. Make sure the connectors are fully inserted with locking tabs in place.

3. Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" hole and secure white wire using eyelet and screw provided.

4. Route the 4-flat to the center of the vehicle and secure in a convenient out of the way location. Secure any loose wires with the cable ties provided.

WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.

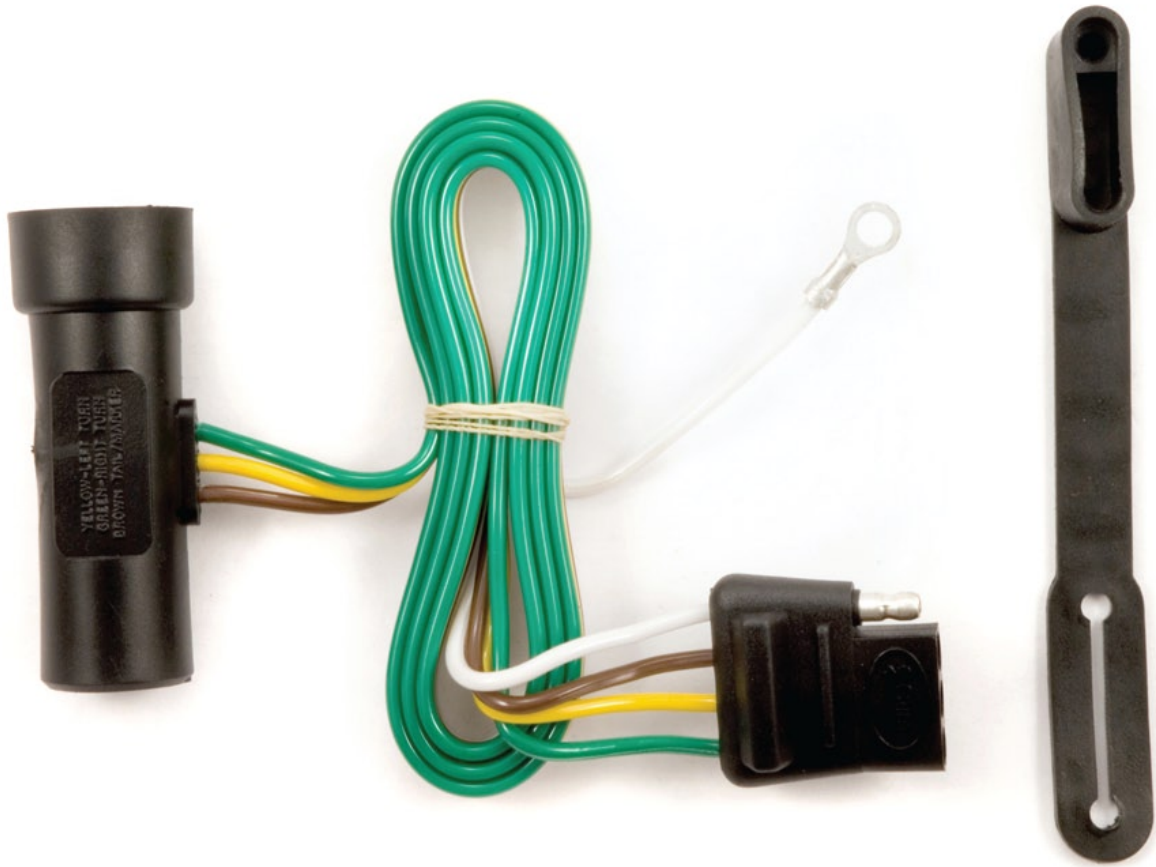

55311