

# 56116

CHEVROLET IMPALA

## WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



### MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.



### ¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

### À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filéée.

8/11/2010

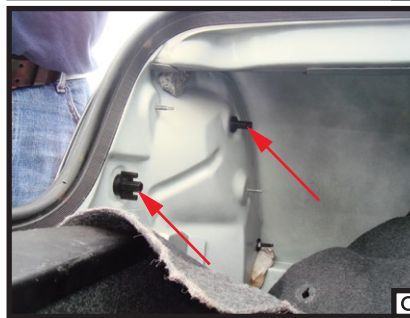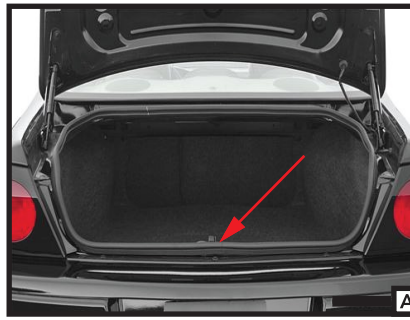

## English

1. Open the trunk and remove the rear scuff panel (A), by pulling up. On both sides of the trunk remove two plastic wing nuts (B) and pull back on the felt trunk liner behind the taillights to reveal the 2 plastic wing nuts holding the taillight in place (C).

2. On the drivers side behind the felt trunk liner remove the (2) remaining wingnuts holding the taillight in place (C). Pull out the taillight to locate the vehicles taillight wiring harness (D). The harness will have connectors similar to those on the T-connector. Separate the connectors taking care not to damage the locking tabs. Route the T-connector end with the yellow wire up through the opening under the taillight (E). Insert the T-connector end with the yellow wire between the separated connectors. Make sure the connectors are fully inserted with locking tabs in place.


3. Repeat Step 2 on the passenger side using the T-connector end with the green wire.

### WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.

4. Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" hole and secure white ground wire using eyelet and screw provided.

5. Secure the 4-flat to the center of the vehicle in a convenient out of the way location. Secure any loose wires with the cable ties provided. Re-install the wing nuts, rear scuff panel, taillights and felt trunk liner.

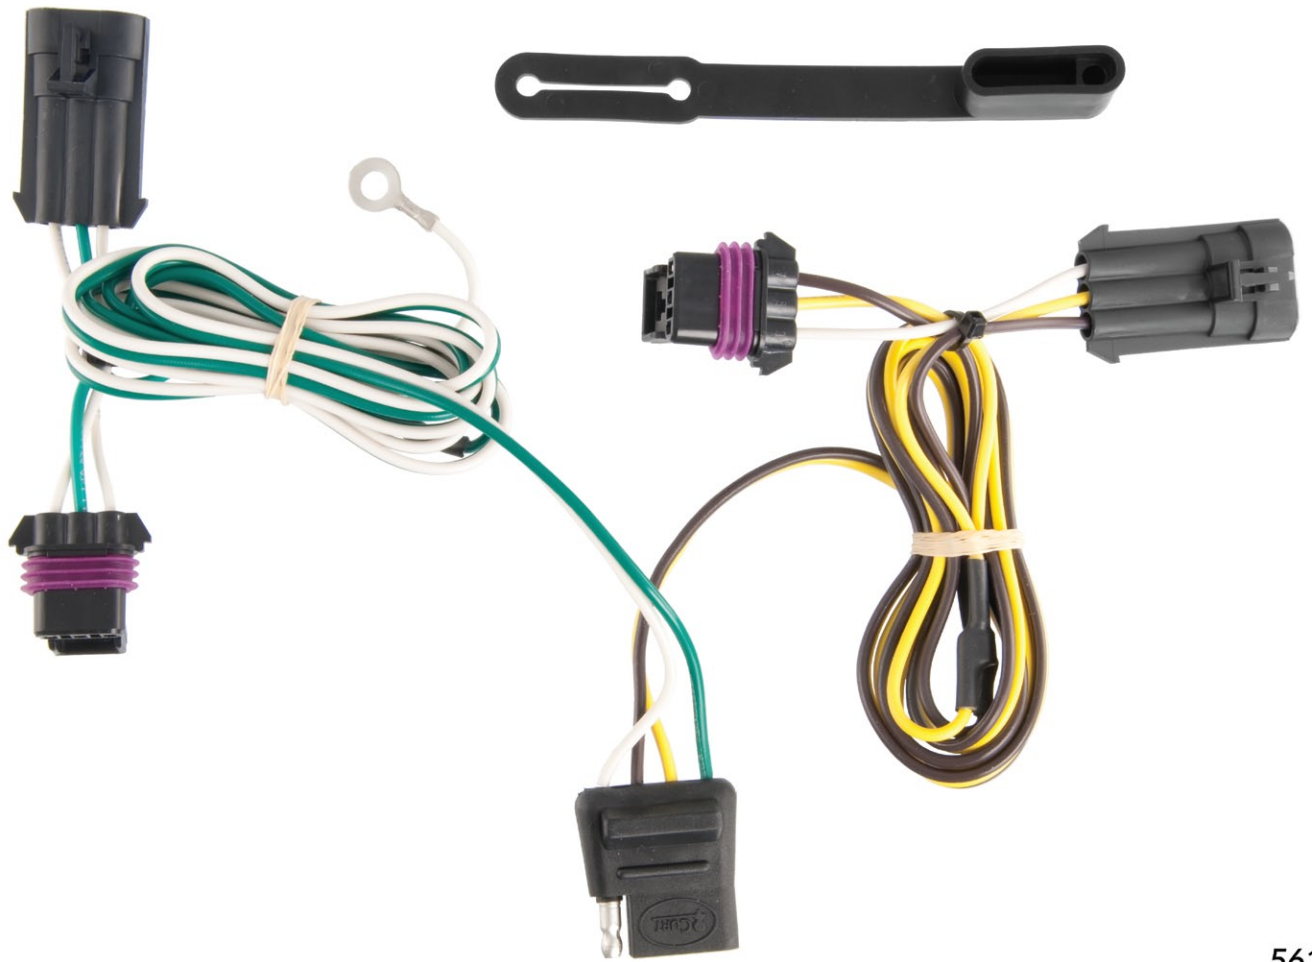

56116