



The **FIRST** Name
in Towing Products™

Scan for helpful
installation tips



INSTALLATION INSTRUCTIONS

51332 & 51333 APPLICATIONS

Make	Model
Chrysler	Aspen (w/ factory tow package)
Dodge	Dakota (w/ factory tow package)
Dodge	Durango (w/ factory tow package)
Dodge	Ram pickup, full-size
Ram	Dakota (w/ factory tow package)

BRAKE CONTROL HARNESS




NOTICE

All steps must be followed to ensure the CURT brake control harness will function properly. Once installed, test for proper function by following the brake control unit instruction manual.

LOCATION GUIDE

Representative vehicle shown below

BH1 - Under dash, left of steering column, near emergency brake pedal

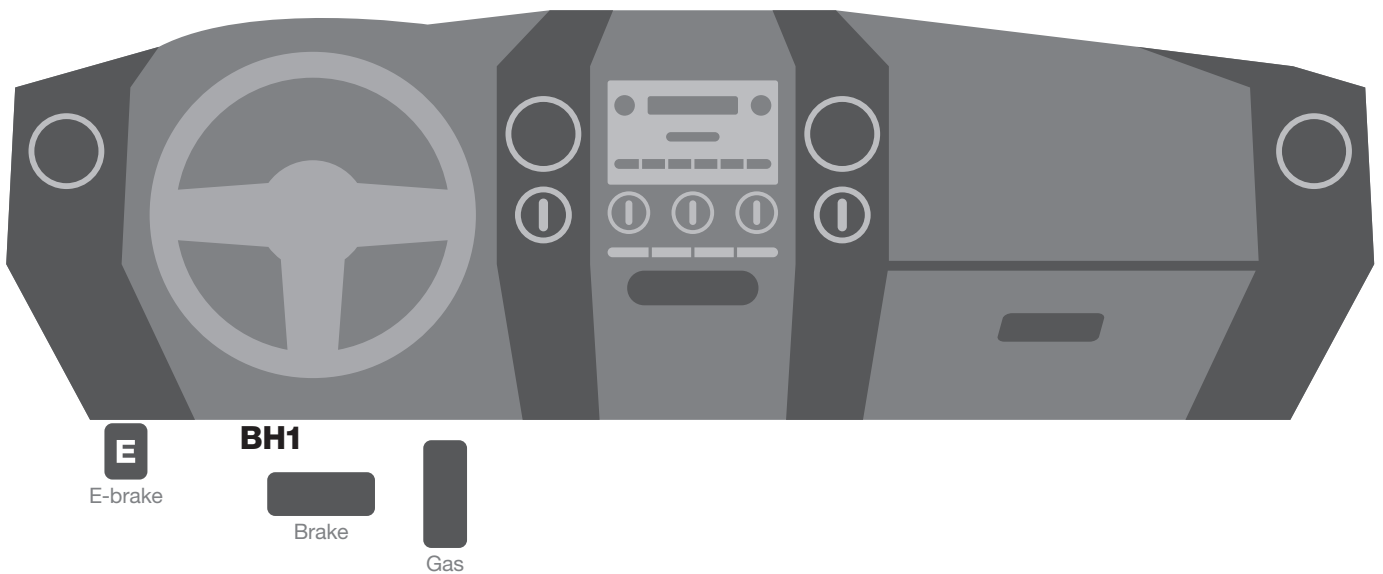

INSTALLATION / SAFETY INSTRUCTIONS

Step 1

Locate the 4-pin, vehicle brake control harness connector under the dash, to the left of the steering column. It will be taped to another harness near the emergency brake pedal. The connector will be similar to that on the CURT brake control harness.

Step 2

Insert the connector on the CURT brake control harness into the vehicle connector. Make sure the connector is fully inserted with locking tabs in place.

Step 3

Insert the brake control harness's black connector into the brake control's quick plug connector. Secure the brake control harness with the provided cable ties, avoiding any pinch points.

Step 4

Complete the installation using the brake control instructions. Mount the unit as directed and perform test procedures as instructed in the brake control user manual.