

55319

CADILLAC ESCALADE
CHEVROLET BLAZER
CHEVROLET SUBURBAN
CHEVROLET TAHOE
GMC SUBURBAN
GMC YUKON

WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filée.

03/30/09



English

1. Locate the vehicles factory tow harness. **[A]**
It is located under the vehicle in location S6 along to drivers side frame rail. **[B]** It will have connectors similar to those on the T-connector.


2. Disconnect the connectors making sure not to damage the locking tabs. Insert the T-connector end in-between the disconnected connectors making sure the locking tabs are locked into place. **[C]**

3. Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" hole and secure white wire using eyelet and screw provided.

4. Route the 4-flat to the center of the vehicle and secure in a convenient out of the way location.

WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.

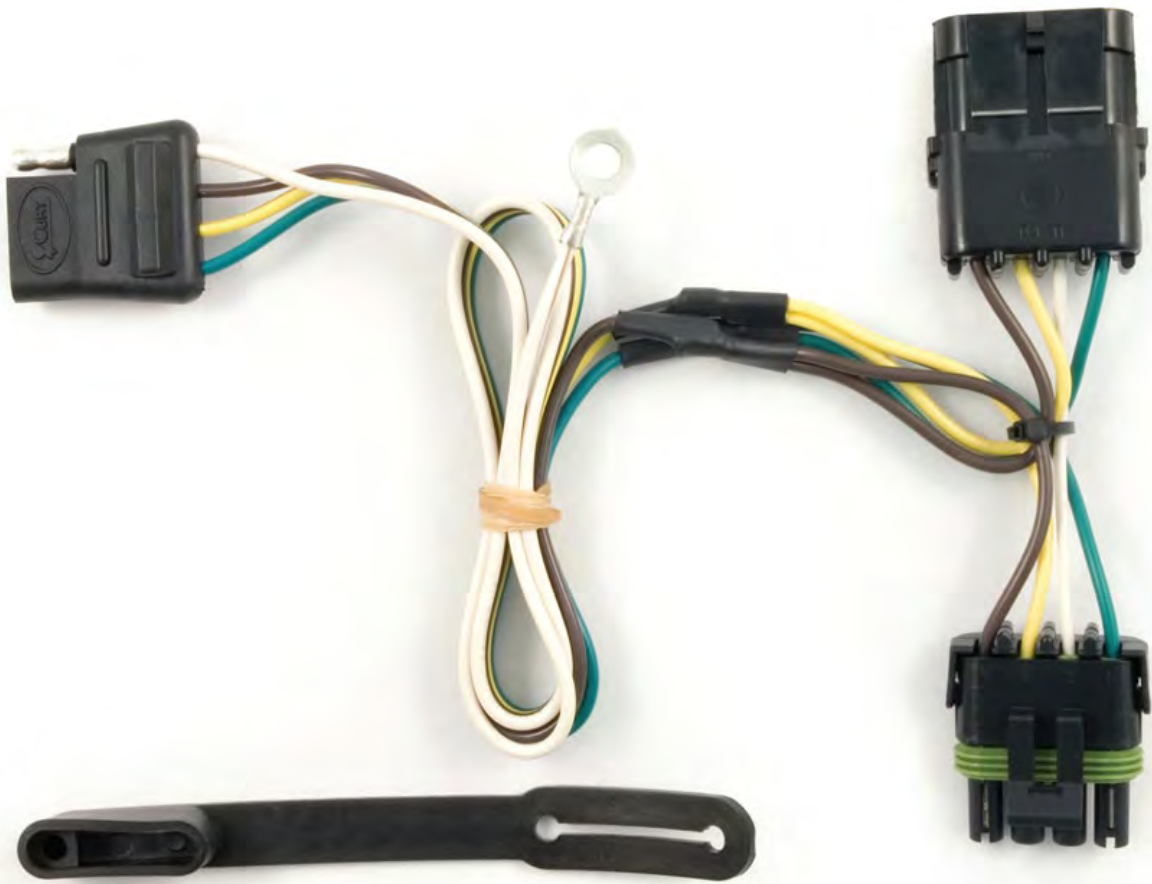

55319