



INSTALLATION INSTRUCTIONS

⚠ WARNING: DO NOT EXCEED PRODUCT RATING OR TOW VEHICLE LAMP LOAD RATING, WHICHEVER IS LOWER

APPLICATIONS

Make	Model
Honda	Odyssey

CUSTOM WIRING CONNECTOR

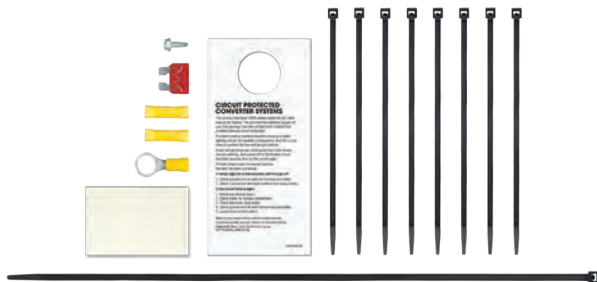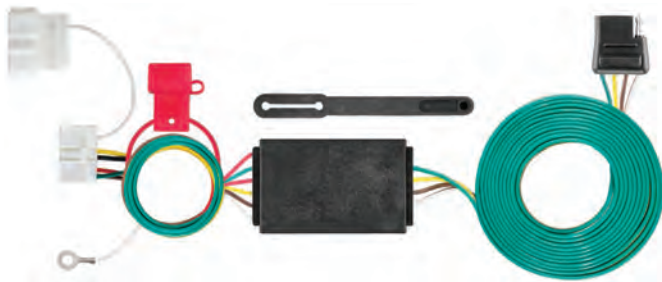

WIRING LOCATION GUIDE

SUVs, MINI & FULL-SIZED VANS (S)

Representative vehicle shown below

S3 - Behind driver side rear access panel



NOTICE

All steps must be followed to ensure the wiring connector will function properly. Once installed, test for proper function by using a test light or connecting a properly wired trailer.

TOOLS NEEDED

Flat blade screwdriver

Panel trim removal tool

⚠ WARNING

The battery connection must be fuse-protected, 10-amp max. Exceeding the product rating can cause loss of warranty, overheating and potential fire. Do not exceed product rating or tow vehicle lamp load rating, whichever is lower.

Signal Circuits - 3.0 amps per side

Tail / Running Circuits - 6.0 amps total

Check vehicle owner's manual or contact the vehicle manufacturer for more information.

INSTALLATION / SAFETY INSTRUCTIONS

Step 1

Open the vehicle tailgate and fold the rear seat on the driver side forward (A).

Step 2

Remove the two cargo hooks securing the rear scuff panel. Remove the scuff panel by pulling out on the bottom and then up (B,C).

Step 3

Remove the cargo hook securing the driver side panel. Loosen the panel by pulling on it gently. Remove the fuse panel cover near the rear seat (D,E).

Step 4


Starting at the rear of the vehicle, route the custom wiring connector behind the interior panel to the fuse panel. Insert the wiring connector into the vehicle connector. Make sure the connectors are fully inserted with locking tabs in place (F).

Step 5

Locate a flat spot inside the vehicle, near the taillight. Adhere the black converter box using the provided double-sided tape (G). Insert the provided 10 amp fuse into the in-line fuse holder.

Step 6

Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle frame or drill a 3/32" pilot hole for the provided screw. The area should be free of rust, dirt and paint. Secure the white ground wire using the ring terminal and provided screw.

 **WARNING:** Check for miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and / or personal injury.

Step 7

When in use, route the 4-flat to the center of the vehicle and out of the trunk. When not in use, roll up and store in a convenient, out of the way location inside the trunk. Secure any loose wires with the provided cable ties.

Step 8

Install the provided 10 amp mini fuse in position #8 and two 7.5 amp fuses in position #2 & #11 in the rear fuse panel (F).

Step 9

Reinstall all items removed during install. Install the provided 4-flat dust cover to help prevent corrosion.

