# 12304

## 1991-1997 TOYOTA PREVIA VAN

#### 10/15/2012


GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 3,500 LBS. TRAILER WEIGHT & 300 LBS. TONGUE WEIGHT.

\*\*\*DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.\*\*\*

WARNING: ALL NON-TRAILER LOADS APPLIED TO THIS PRODUCT MUST BE SUPPORTED BY AUXILIARY STABILIZING STRAPS.

\*\* FAILURE TO PROPERLY SUPPORT NON-TRAILER LOADS WILL VOID PRODUCT WARRANTY\*\*

HAVING INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 1-800-798-0813

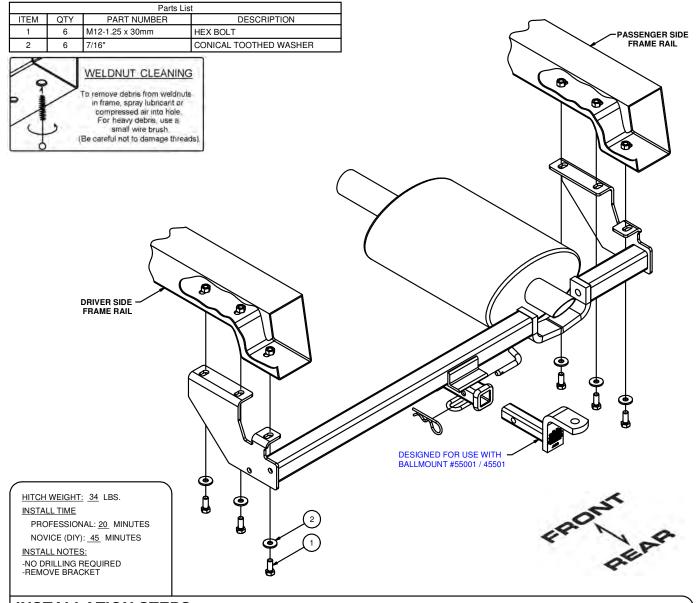

### **INSTALLATION STEPS**

- 1. Under the rear of the vehicle, locate the left and right frame rails and the tie down brackets attached to each frame rail. These brackets are vertical black plates with one large hole. Remove the brackets by removing two frame rail screws and one bumper bracket screw. Return these brackets and attaching bolts to the vehicle's owner for reinstallation should the hitch ever be removed.
- 2. This hitch will attach to the vehicle at the same points as the tie down brackets. Use fasteners as shown to install the hitch.
- 3. Torque all 12mm fasteners to 86 lb-ft.

# PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.

Curt Manufacturing Inc., warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, Curt Manufacturing Inc., may repair or replace the product, at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. Curt Manufacturing Inc.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.