



WARNING!

If any part of this installation seems beyond your level of installation experience, please seek the help of a certified professional.

Before installing the Drake Muscle Cars 2018-20 Mustang Dive Planes, please read through the installation procedure and verify that all parts are present, including the supplied hardware. If any items are missing, please contact Drake Muscle Cars at (702) 853-2060, 8:00 AM to 5:00 PM PST.

KIT INCLUDES


- 2 Dive Planes
- 2 Phillips Head Screws

TOOLS NEEDED FOR INSTALLATION

- Drill
- 5/32" Drill Bit
- Phillips Screwdriver
- Masking Tape or Wax Pencil (Optional)

INSTALLATION

1. Clean the mounting area thoroughly, be sure to remove any wax or coatings that may be on the paint to ensure adhesion.
2. Test fit the Dive Plane to determine ideal placement. Ensure the lower screw tab sits flush against the lower grille surface and that both taped surfaces sit flush against the painted surface of the fascia. Optional: Mark placement with a wax crayon or masking tape.
3. Once you have the Dive Plane in place, peel back roughly 1" of the double-sided tape backing on both taped surfaces, leaving it long enough to pull later. Lightly press the dive plane into place on the fascia. With the part in place, drill a small hole in the lower grille surface and using a Phillips screwdriver, install the provided screw to firmly hold the part in place.
4. Once the screw is installed, pull the edge of the backing from both tape stripes, and apply firm pressure on both surfaces to adhere the part to the fascia.
5. Repeat this process for the other side.

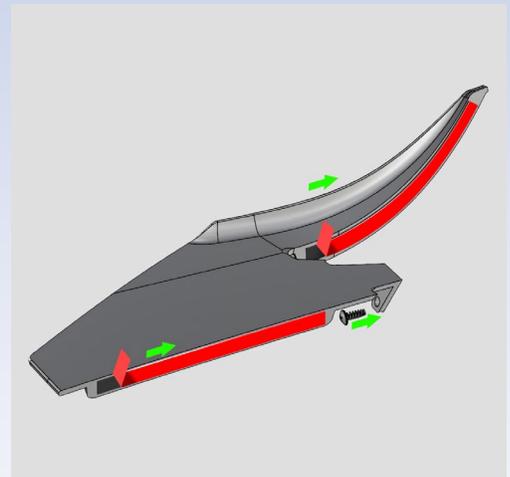

Drake Muscle Cars

130 Cassia Way, Henderson, NV 89014-6615
Tel: (702) 853-2060 Fax: (702) 853-2061
www.DrakeAutomotiveGroup.com