


BODY MOUNT INSTRUCTIONS FOR TOYOTA LAND CRUISER FJ-40, 1958 – JAN. 1979

1. SPRAY ALL NUTS WITH PENETRATING LUBRICANT.
2. INSTALL MOUNTS ON ONE SIDE WITH MOUNTS ON OPPOSITE SIDE LOOSENED.
3. ON DISASSEMBLY, NOTE QUANTITY AND POSITION OF ANY SHIMS THAT MAY HAVE BEEN INSERTED FOR BODY ALIGNMENT. THESE SHIMS WILL HAVE TO BE REUSED TO INSURE CORRECT BODY ALIGNMENT.
4. ONLY RAISE BODY HIGH ENOUGH TO REMOVE & REPLACE MOUNTS. WATCH THE FAN SHROUD, FRONT GRILL SUPPORT MOUNT, AND THE SHIFT BOOT FOR SUFFICIENT CLEARANCE WHEN RAISING THE BODY. ON 1975 TO 1979 MODELS, WATCH RUBBER BUSHING IN STEERING COLUMN.
5. WHEN JACKING THE BODY, USE A LONG 2X4 OR 4X4 FOR SUPPORT. NEVER PUT JACK DIRECTLY ON BODY PANELS.
6. AFTER NEW MOUNTS ARE INSTALLED, RETORQUE TO FACTORY SPECIFICATIONS.

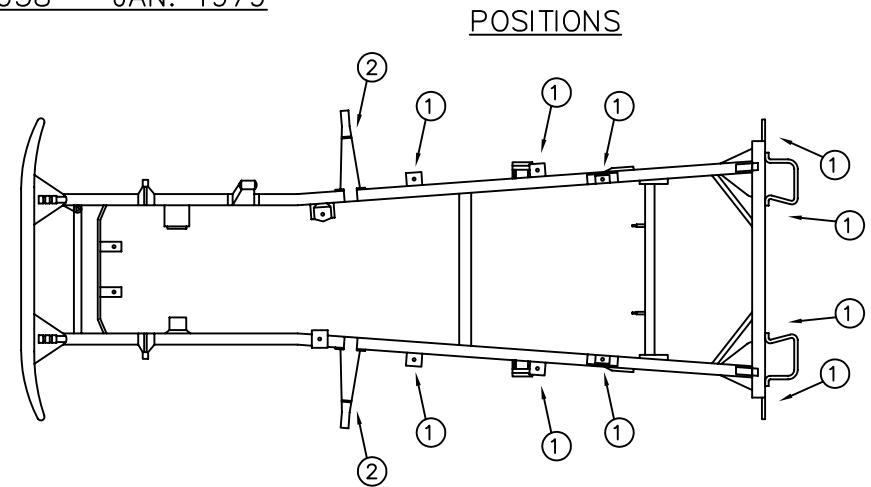


1 = SMALL MOUNT
2 = LARGE MOUNT

INSTRUCTION SHEET P10285
REV. 01

BODY MOUNT INSTRUCTIONS FOR TOYOTA LAND CRUISER FJ-40, 1958 – JAN. 1979

1. SPRAY ALL NUTS WITH PENETRATING LUBRICANT.
2. INSTALL MOUNTS ON ONE SIDE WITH MOUNTS ON OPPOSITE SIDE LOOSENED.
3. ON DISASSEMBLY, NOTE QUANTITY AND POSITION OF ANY SHIMS THAT MAY HAVE BEEN INSERTED FOR BODY ALIGNMENT. THESE SHIMS WILL HAVE TO BE REUSED TO INSURE CORRECT BODY ALIGNMENT.
4. ONLY RAISE BODY HIGH ENOUGH TO REMOVE & REPLACE MOUNTS. WATCH THE FAN SHROUD, FRONT GRILL SUPPORT MOUNT, AND THE SHIFT BOOT FOR SUFFICIENT CLEARANCE WHEN RAISING THE BODY. ON 1975 TO 1979 MODELS, WATCH RUBBER BUSHING IN STEERING COLUMN.
5. WHEN JACKING THE BODY, USE A LONG 2X4 OR 4X4 FOR SUPPORT. NEVER PUT JACK DIRECTLY ON BODY PANELS.
6. AFTER NEW MOUNTS ARE INSTALLED, RETORQUE TO FACTORY SPECIFICATIONS.

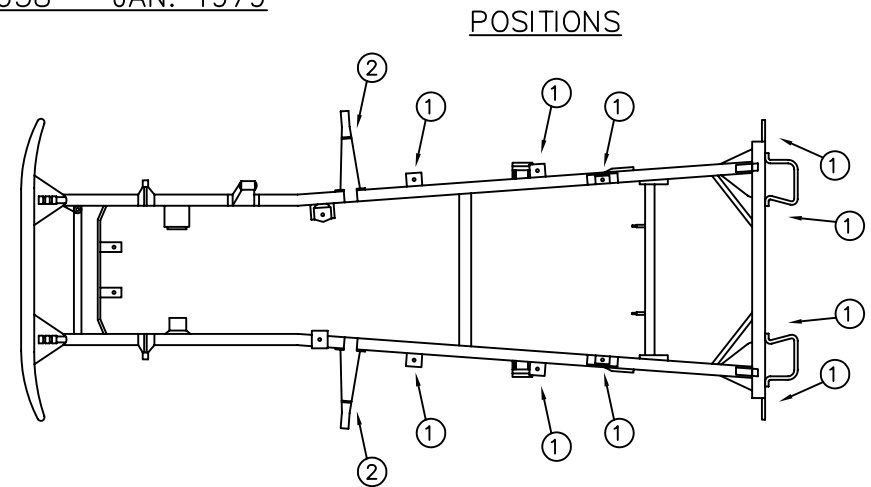

1 = SMALL MOUNT
2 = LARGE MOUNT

INSTRUCTION SHEET P10285
REV. 01