

Product Number: W2850, W2851 **Application: 2014-2019 Toyota Tundra**

Your safety and the safety of others is very important.

- In order to help you make informed decisions about safety, we have provided installation instructions and other information.
- These instructions alert you to potential hazards that could hurt you or others.
- Please do a job safety analysis (JSA) before each task to identify potential hazards for your situation and remove/protect against them.
- You must use your own good judgment, and take your time.

Read and understand all safety precautions and instructions before installing this product.

THIS PRODUCT IS FOR OFFROAD USE ONLY. ALL LIABILITY FOR INSTALLATION AND USE RESTS WITH THE OWNER.

CARELESS INSTALLATION AND OPERATION CAN RESULT IN SERIOUS INJURY OR EQUIPMENT DAMAGE.

SENSORS' FIELD OF VIEW WILL BE ALTERED WITH USE OF THE REPLACEMENT BUMPER.

Injury hazard

Failu

ire to observe these instructions could lead to severe injury or death.	
<u> </u>	Always remove jewelry and wear eye protection. Always use extreme caution when jacking up a vehicle for work. Set emergence have and use the vehicle many features designed and the vehicle many features and the vehicle man
	brake and use tire blocks. Locate and use the vehicle manufacturers designated
_	lifting points. Use jack stands.
u	Always use appropriate and adequate care in lifting components into place.
	Always ensure components will remain secure during installation and operation
	Always wear safety glasses when installing this kit. A drilling operation will
	cause flying metal chips. Flying chips can cause serious eye injury.
	Always use extreme caution when drilling on a vehicle. Thoroughly inspect the
	area to be drilled (on both sides of material) prior to drilling, and relocate any
	objects that may be damaged.
	Always use extreme caution when cutting and trimming during fitting.
	Always tighten all nuts and bolts securely per installation instructions.
	Always route electrical cables carefully. Avoid moving parts, components that
	become hot and rough or sharp edges.
	Always insulate and protect all exposed wiring and electrical terminals.
	Always perform regular inspections and maintenance on mounts and
	related hardware.





Product Number: W2850,W2851 Application: 2014-2019 Toyota Tundra

I. Overview

Congratulations on your new purchase of the industries' best and most stylish Rear Bumper available for the 2014+ Toyota Tundra! This Bumper has been **engineered** for strength while keeping the weight down.

Your Rear Bumper designed in 3-D from digitized data, CNC laser cut, fabricated, and powder coated... all in the U.S.A.

Enjoy the fit and finish of a quality Toyota Tundra Rear Bumper from Fab Fours Inc.





Product Number: W2850,W2851 Application: 2014-2019 Toyota Tundra

Tools Required

- Socket Wrench with Extension
- 3/4", 12mm, & 19mm Sockets (ratcheting wrenches may also be convenient)
- 3/4", 12mm, & 11/32" Box End Wrenches
- 3/32" Allen Wrench
- Flat and Phillips Head Screw Drivers
- Floor Jack and wood block.

II. Removal of Stock Bumper

- A. Disconnect the sensor light and towing harness on the back side of the license plate lights from the main connector on the truck frame. Secure the harness out of harms way to the back of the bumper.
- B. Remove your license plate from the OEM Bumper.
- C. Remove the plastic corner pieces from the top of the OEM bumper by pulling up from the outside edge. If the plastic is being stubborn during removal the plastic clips can be popped loose from the bottom side of the bumper.(Figure 1)



Figure 1





Product Number: W2850,W2851 Application: 2014-2019 Toyota Tundra

D. Remove the Phillips head screw passing through the plastic that was hidden by the license plate previously. See Image Below.



Figure 2

E. Pop the plastic clips loose on the bottom side of the main piece of plastic on the top side of the bumper allowing access to the OEM fasteners.

F. Using a 12mm wrench remove the eight OEM fasteners holding the OEM bumper shells to the receiver hitch.



Figure 3





Product Number: W2850,W2851 Application: 2014-2019 Toyota Tundra

- G. Remove the OEM bumper shells and set aside.
- H. If your truck is equipped with sensors remove the sensors and sensor harness from the bumper at this time, and save for the Fab Fours bumper installation.
- I. Your Tuck is now ready for the installation of your new Fab Fours Rear Bumper!

III. Pre-Installation


- A. Remove Fab Fours bumper from shipping carton and lay all item out on a blanket to prevent damage.
- B. Install license plate lights provided with the included hardware.
- C. *When experiencing a hyper flash or when replacing halogen lights with led lights a resistor should be used. The resistor will wire into the positive power supply to the light and the negative side of the ground supply to the light.






Installation Instructions Toyota Tundra Rear Bumper Product Number: W2850,W2851

Product Number: W2850,W2851 Application: 2014-2019 Toyota Tundra

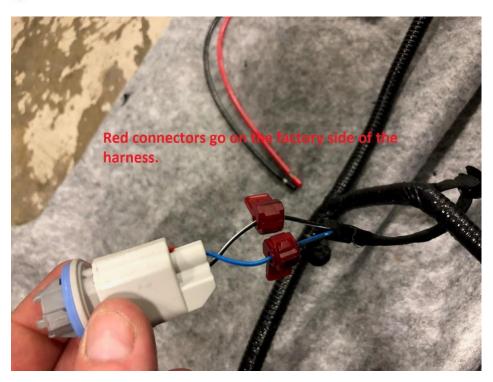

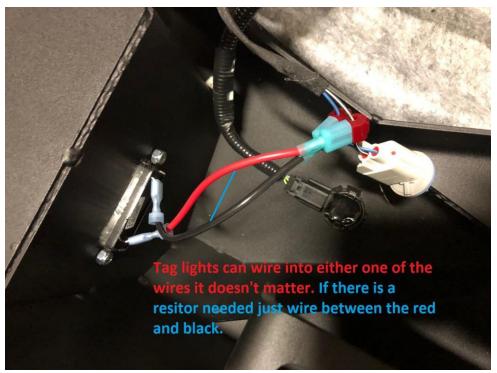






Product Number: W2850,W2851 Application: 2014-2019 Toyota Tundra

D. Install trailer plug receptacle. The stock plug receptacle must be drilled with a 7/32 drill bit (1/4 is acceptable) using the shown impressions in the receptacle as guides. Attach with the provided #8 hardware.

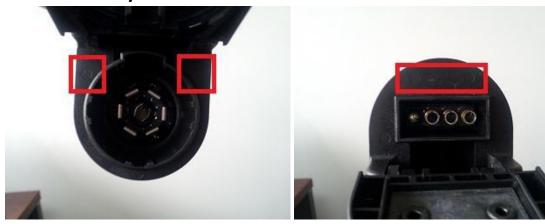

E. Install license plate inserts in 4 provided locations.

F. For sensor equipped vehicles: install sensors from the outside of the bumper by inserting the connector in first and rotating until the sensor in fully installed. DO NOT EPOXY AT THIS TIME.



Product Number: W2850,W2851 Application: 2014-2019 Toyota Tundra



IV. Rear Bumper Installation

NOTE: The Following Installation steps apply to the installation of the Rear





Product Number: W2850,W2851 Application: 2014-2019 Toyota Tundra

Bumper. PLEASE READ THE ENTIRE MANUAL BEFORE ATEMPTING INSTALLATION! Ignoring these steps will increase your probability of scratching the vehicle during product Installation!

A. Using a 19mm socket and wrench to remove the three bolts from each side of the hitch frame plate.

B. Install supplied intermediate mounting brackets to the hitch frame plate using the OEM hardware. Complete on both driver and passenger sides of vehicle. Do Not Fully Tighten, Finger Tighten Only. See Image Below.



Figure 4

C. With the help of two friends and possibly a floor jack to help support the center of the bumper lift the Fab Fours bumper into place.

D. With the bumper held into place insert the supplied ½" fasteners through the bumper and into the bumper brackets placing the nuts on the front side of the frame mount. Do Not Fully Tighten. See Image Below.





Product Number: W2850,W2851 Application: 2014-2019 Toyota Tundra



Figure 5

- E. Align the bumper side to side and top to bottom to ensure a perfect fit to the truck. Allow for a 0.375" clearance to all painted surfaces if possible to allow for frame flex.
- F. Check that the tailgate does not interfere with the bumper by opening it very carefully and lowering it into place. If tailgate is to close to the bumper, adjust bumper lower.
- G. Fully tighten all fasteners between bumper and brackets and brackets and frame.
- H. Remove the factory harness from the center section of





Product Number: W2850,W2851 Application: 2014-2019 Toyota Tundra

the OEM bumper.(Figure 6)

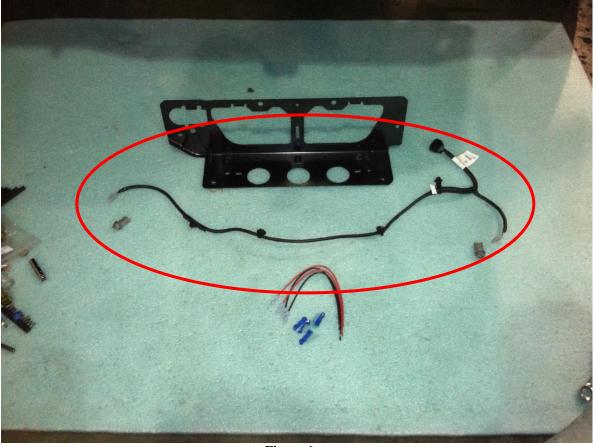


Figure 6

- I. With the supplied T-Tap connectors tab into the Green and White w/Black stripe wires at the ends of the OEM harness as shown in Figure 7 and figure 8. Repeat on opposite side.
- J. Place the Red wires with the female spade connector onto the T-Tap connected to the Green wire of the OEM harness (Figure 8)



Installation Instructions Toyota Tundra Rear Bumper Product Number: W2850,W2851

Application: 2014-2019 Toyota Tundra



Figure 7

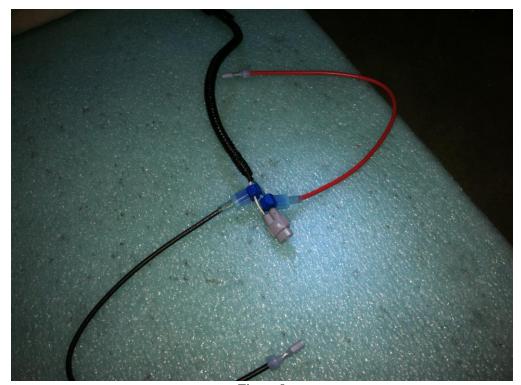


Figure 8





Product Number: W2850,W2851 Application: 2014-2019 Toyota Tundra

K. Re-Install the modified factory harness and connect to the license plate lights as shown in Figure 9. Use zip-ties to secure excess wiring.



Figure 9

L. FOR SENSOR BUMPER INSTALLATION ONLY: Install the sensor harness back into the bumper and plug the harness into both the sensors and the truck side connector. Test the sensor to ensure that the truck does not read the ground or give off any error. Once complete epoxy the sensors permanently in.

M. Enjoy your New Rear Replacement Bumper from Fab Fours!





Product Number: W2850,W2851 Application: 2014-2019 Toyota Tundra

V. Maintenance/Care

☐ Periodically check and tighten all fasteners.


■ Stripped, fractured, or bent bolts or nuts need to be replaced.

☐ After washing of the vehicle make sure to fully dry all surfaces

VI. Contact Information

Fab Fours Inc. Phone (866)-385-1905 1312 Camp Creek Rd Fax (866)-574-1424

Lancaster, SC 29720 Email Support@fabfours.com

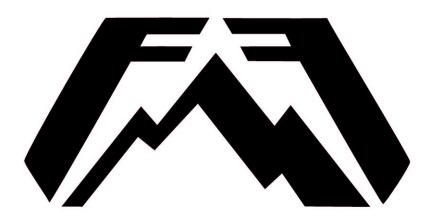

More than expected... Better than expected

