



FRONT RUNNER


SINGLE LED WIRING HARNESS WITH ATP PLUG

ENG

ECOM103



INSTALL TIME: 60 mins

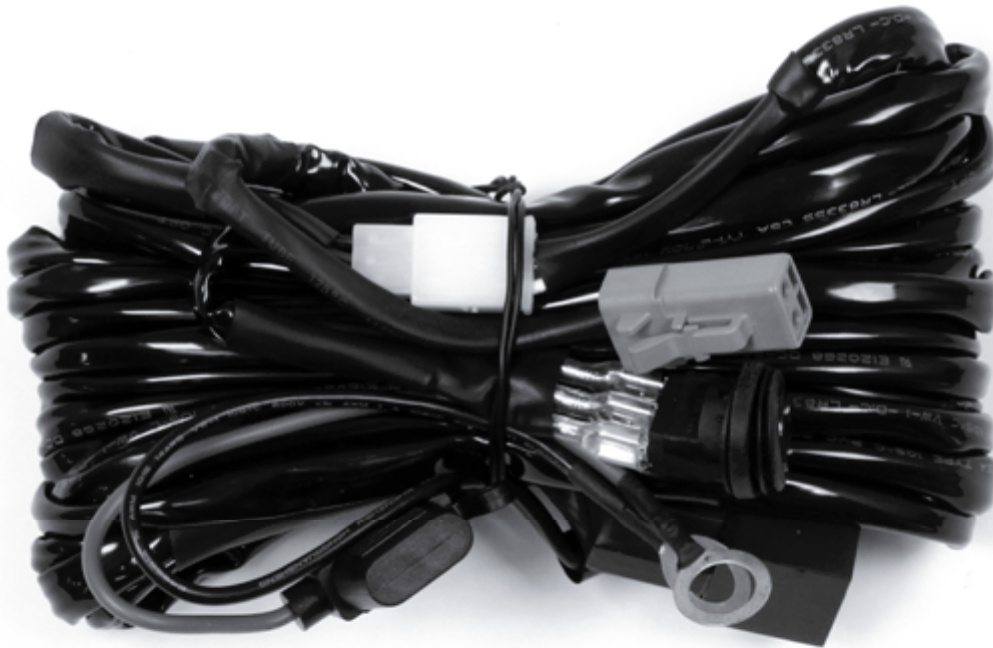

IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH TO YOU OR TO OTHERS. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR, AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

1 SINGLE LED WIRING HARNESS WITH ATP PLUG

ON / OFF SWITCH: To be mounted into your vehicles dashboard or control panel in your desired position.


ELECTRICAL CONNECTOR: Connect ECOM095 remote control here.

RELAY: Mount in an appropriate position close to battery.

FUSE HOLDER

BATTERY CONNECTORS: Connect to positive and ground battery terminals.

ATP PLUG: Connection between harness and light bar.

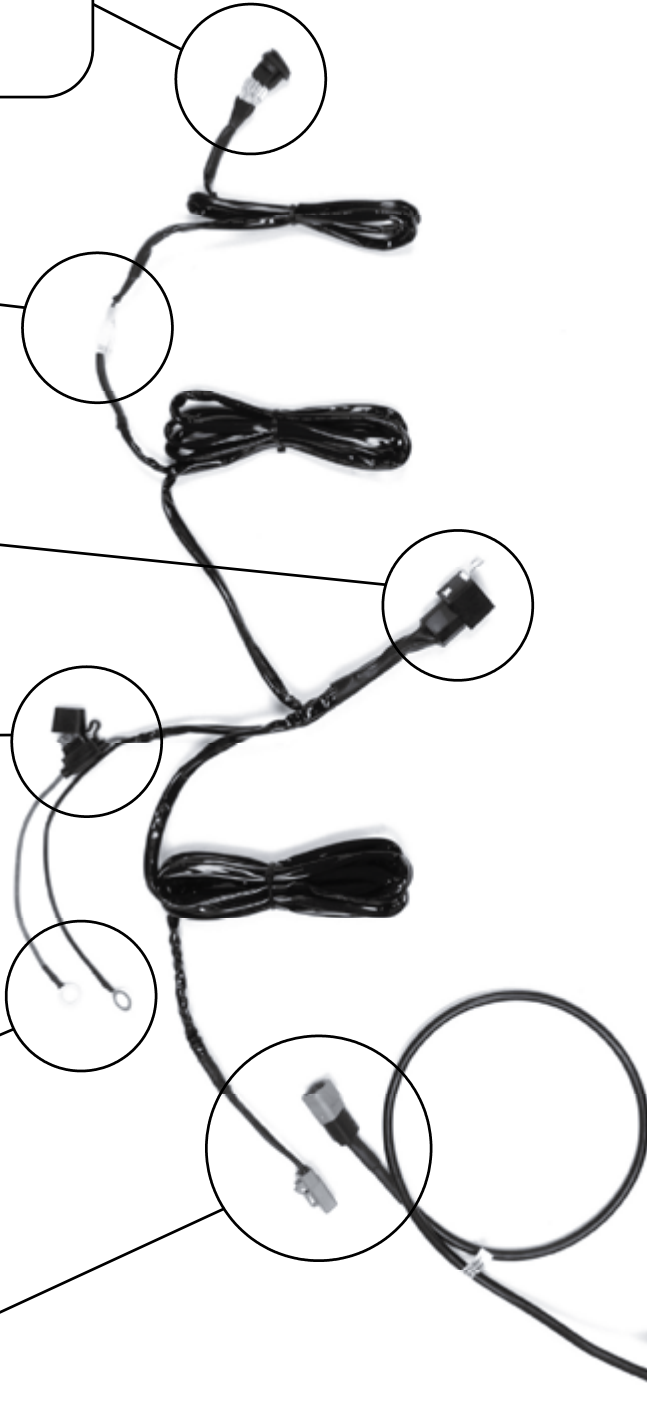

It is advised that all electrical work and connections be done by a qualified auto electrician.