


DRAWER DECK COMPLETION SET LAND ROVER DISCOVERY SPORT

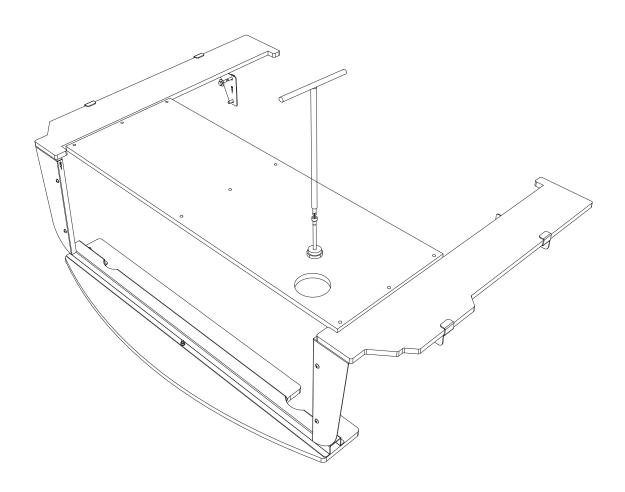

SSDS902



READ ME!

Thank you for purchasing a Front Runner Deck Completion Set.

Before you start, take a moment to familiarize yourself with this Fitting Instruction and the components received.

Refer to Page 2 for a list of all the components, quantities and tools required.

IMPORTANT WARNING! 🔨

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.


Please call us if you have any questions about the installation of this product.


1

GET ORGANIZED

IN THE BOX				
1	1 X	Side Deck LH		
2	1 X	Replacement Top Deck		
3	1 X	Side Deck RH		
4	1 X	Replacement Bottom Deck		
5	2 X	Front Face LH & RH		
6	1 X	Drawer Lifting Channel		
7	1 X	Side Wing Front RH		
8	3 X	Side Wing 1 LH And 2 RH		
9	4 X	M5x10 Button Head		
10	7 X	M5 Flat Washer		
11	7 X	M5 Nyloc Nut		
12	10 X	M6x20 Hex Bolt		
13	10 X	M6 Spring Washer		
14	10 X	M6x19x1ss Flat Washer		
15	3 X	M5x25 Button Head		
16	4 X	Carabiner Hook 37mm		
17	2 X	Carabiner Hook 60mm		
18	2 X	Pinchweld 310mm		
19	1 X	Plastic End Cup		

IN T	HE BOX		
20	4 X	D-Ring M8	
21	4 X	Turn Buckle	
22	4 X	Wing Nut M6	
23	1 X	Wheel Winder T-Handel	
24	1 X	Wheel Winder 31mm Slot	
25	2 X	Front Face 1LH + 1RH With Knockouts	
_			<i>/</i>

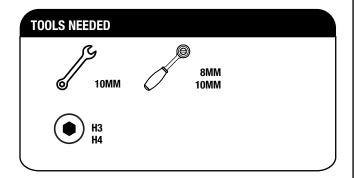

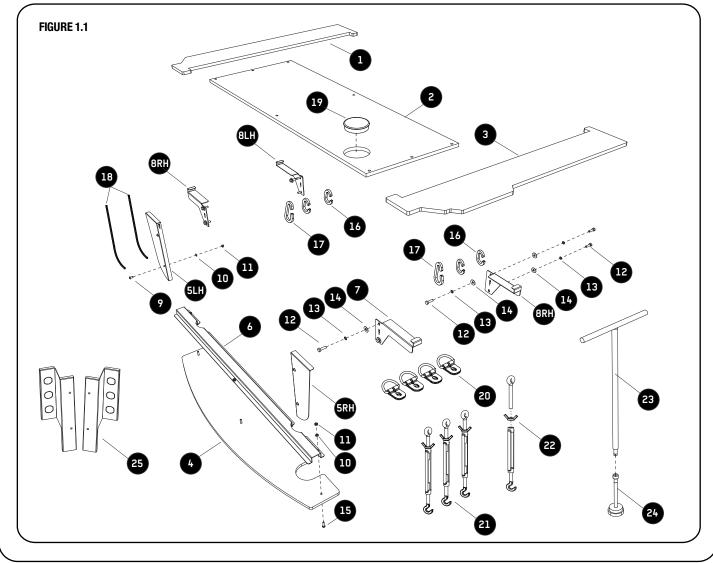


2 PREPARATION

2.1




Remove existing floor cover.
Remove tools from tool tray.
After the drawer has been installed the tools can be stored next to it.

2.2

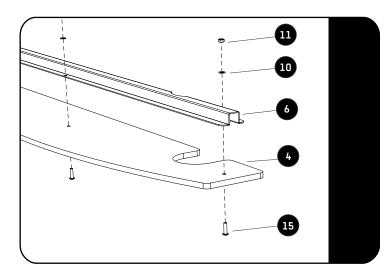

Assembly of 4 & 6 (Replacement Floor)


2.3

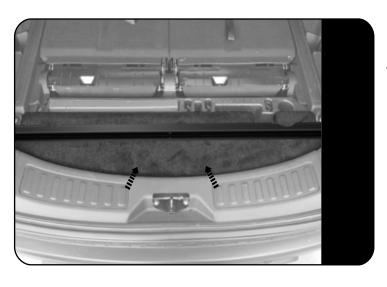

C1 Replacement Floor


3 FIT AND SECURE

3.1

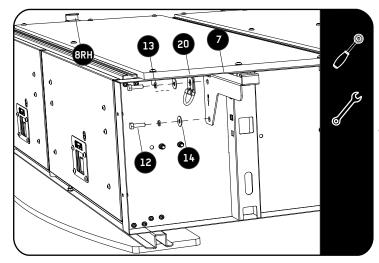


- Place the drawer in the vehicle before assembling the wings onto the drawer. Refer to 1.1 for wing placement. Fit item 20 to the front left and the front right side of the drawer as shown.
- !\tem 7 is longer than item 8

3.2

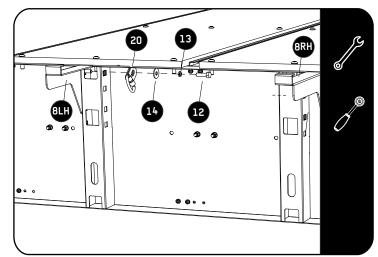

Refer to 1.1 for wing placement.
Fit item 20 to the rear left and rear right side of the drawer as shown.


3.3

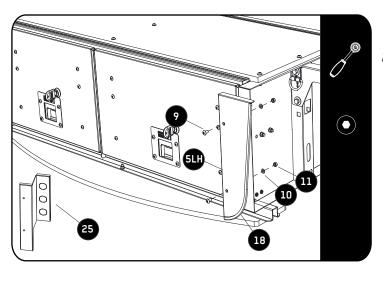

Secure the Front Faces (Item 18 or 25) to the drawer using M5 x 12 Button Heads, M5 Flat Washers and M5 Nyloc Nuts (Items 9, 10 & 11) as shown.


2 FIT AND SECURE

3.4

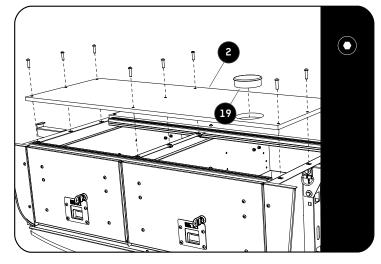


Remove the existing front deck and replace it with item 2.

3.5

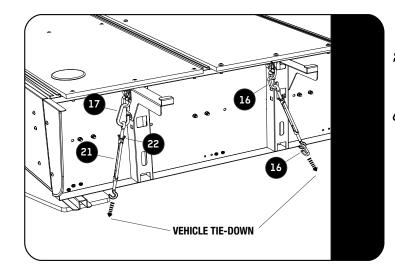

- Secure the drawer to the vehicles tie-down point using the items shown in 3.5
- Before securing the drawer, make sure that the rear door does not interfere with the drawer.


3.6

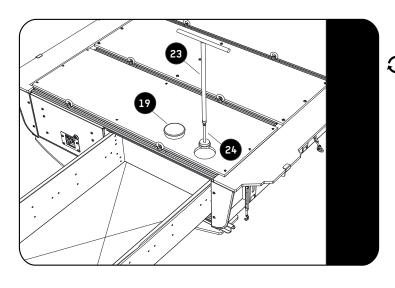

C) LOWERING THE SPARE WHEEL

Remove item 19. Open the drawer and insert item 23 and 24 into the hole. Locate the wheel winder and turn to lower the wheel.

3 FITTING ELECTRICAL SOCKETS

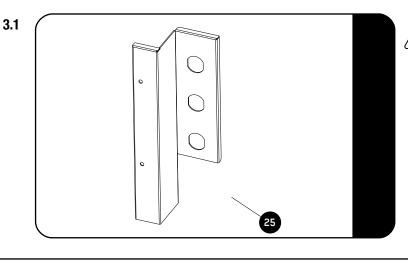

Twist the pre cut knock outs to remove. These cut outs can then be used to fit Front Runners range of electrical sockets.

(Sold Separately)

ECOM117 - Amp ECOM118 - USB

ECOM119 - 12/24V

ECOM120 - Merit

ECOM121 - Engel

ECOM124 - Volt

COMPLETION

Congratulations! You did it. Take a step back and admire your work!

5

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner Dealer in person or online.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam

Share your adventures on:

(a)







