


**2011-2014 Chevrolet 2500-3500HD Installation
Instructions FBR #300-21-1005, XFBR # 600-
21-1005, SFBR #120-21-1005**

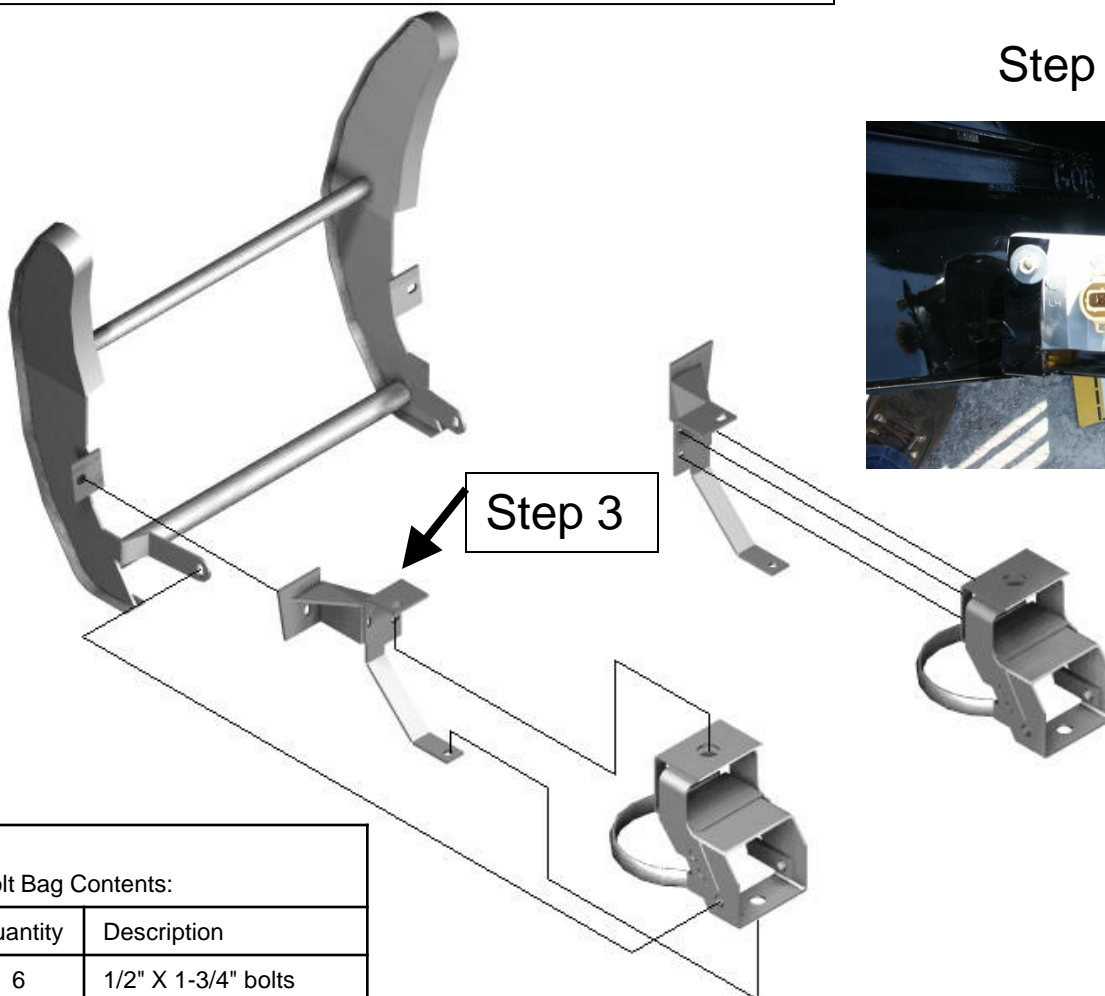

Step 2



Bolt Bag Contents:

Quantity	Description
6	1/2" X 1-3/4" bolts
12	1/2" flat washers
6	1/2" Lock Washers
6	1/2" Hex Nuts
2	1/4" X 1" bolts
2	1/4" nuts
4	1/4" flat washers
2	1/4" Lock Washers
6	3/8" Flat Washers
6	5/16" X 1 1/4" Hex Bolts
6	5/16" Hex Nuts
12	5/16" flat Washers
6	5/16" Lock Washers
2	Mounting Brackets
78	Total Pieces

Step 1: Remove factory bumper. Note: **Do not** remove factory tow hooks.

Step 2: Install factory fog lights to front end using the 3/8" washers to hold light to steel bracket as shown in step 2.

Step 3: Install Mounting bracket to frame horn using factory top bolt. Factory bottom bolt can be used if truck has tow hook. If not use 1/2" bolt provided.

Step 4: Mount Front Bumper Replacement to Frontier Mounting brackets using 1/2" X 1 3/4" bolts provided.

Step 5: Install bottom foot of Front Bumper Replacement to the outside tow hook bolt.

Step 6: Check alignment of front end replacement to truck and tighten all bolts.

Need Help? Call Frontier at 800.634.3086 or E-mail info@frontier-gear.com.