

OCTA SERIES

VEHICLE APPLICATION(S):


2015 

F-150 REG, EXT & CREW CABS


CREW CAB SHOWN - REGULAR
AND EXTENDED CABS SIMILAR




A

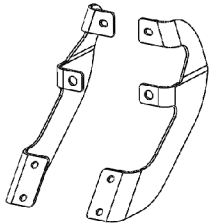


B

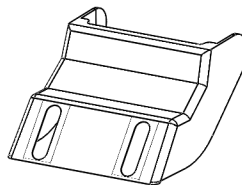



C

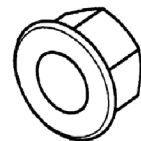

D

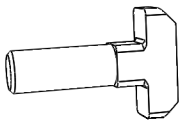

TOOLS REQUIRED




MADE BY MAXWAY INTERNATIONAL LTD. ONTARIO, CANADA
1-800-918-8316
INFO@WAXWAYINT.COM

INSTALLATION INSTRUCTIONS

OCTA SERIES


1. Position bracket (Item A) over threaded studs on inner rocker. Secure with M8 flange nuts (Item C).

Install only finger tight at this time.

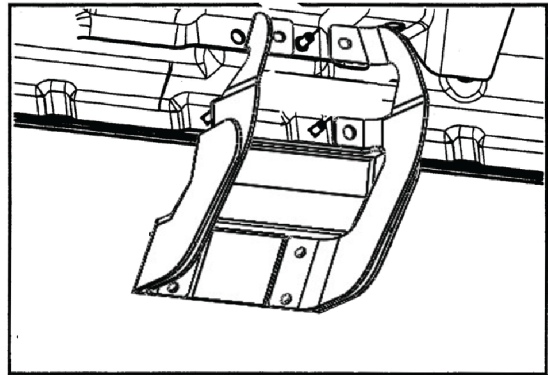

2. Position bracket cover (Item B) over each bracket.

In each brackets lower two mounting holes, install a T-bolt (Item D) from the outside, and just start threading on a flange nut (Item C) from the backside. Leave very loose and only just start the threads.

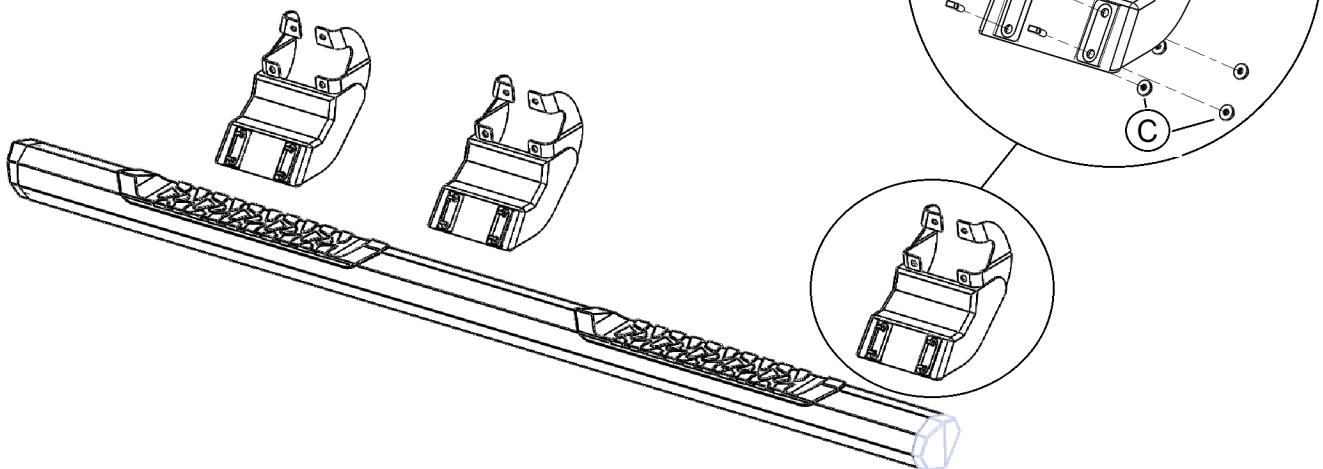

Position step tube over protruding t-bolts. From behind bracket, PUSH UP AND TURN Flange nuts (Item C) to engage t-bolts in slots and tighten.

CAUTION: BE SURE TO CHECK THAT T-BOLT HAS TURNED AND FULLY ENGAGED INTO SLOT IN BACK OF STEP TUBE

Torque all M8 fasteners to 14lbs-ft (20 N.m)



M8 - 14 lbs-ft (20 N.m)