




Installation Instructions

Cat-Back Stainless Steel Dual Rear Exhaust System
Dodge Challenger
5.7L V8, RWD, 2DR Coupe

Part #617006

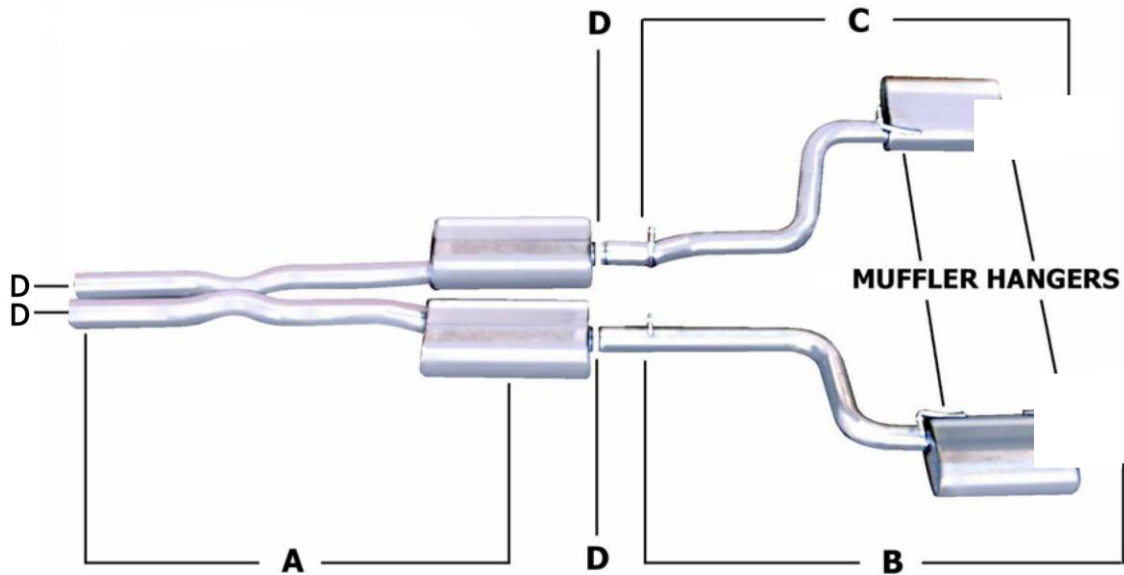

ITEM	PART	QUANTITY	DESCRIPTION
A	1334-701095S	1	2.5" Stainless Steel X Pipe / Muffler Assembly
B	1304-701072S	1	2.5" Stainless Steel Driver side tailpipe / Muffler Assembly
C	1305-701073S	1	2.5" Stainless Steel Passenger side tailpipe / Muffler Assembly
D	5757	4	2.5" Clamp

Thank you for purchasing our Gibson Exhaust System for your vehicle.
If you need further assistance, please do not hesitate to call our technical department at
(800) 528 -3044 Monday through Friday, 8am to 5 pm.

Installation Instructions #617006

When installing this exhaust system make sure to use proper safety precautions. Use jack stands when working under the vehicle, set parking brake, block tires and use safety glasses and gloves. Allow exhaust to cool before attempting installation. Severe injury or burns could occur if safety measures are not taken.

SUGGESTED TOOLS: 1/2", 9/16", 15mm wrenches & sockets, WD-40, hacksaw, jack stands

1. Disconnect the negative battery cable before removal of OEM exhaust. This will allow the computer to reset and recognize the new exhaust. Lay out the exhaust on the floor so it looks like the drawing and compare parts with manual.



2. To remove the stock exhaust, first you must remove the factory cross member under the X pipe. Then unbolt and remove driver side tailpipe at the flange. Now unbolt and cut tack welds on factory clamps at the X pipe and carefully remove factory exhaust, save clamps for new exhaust installation. The 2.75" clamps are included in case you can't use the factory clamps. Leave all rubber grommets on hangers. Use WD-40 to help remove hangers.



6. Install passenger side tailpipe/muffler assembly #C. Insert all welded hangers into rubber grommets. Secure tailpipe with clamp #D. Do not tighten. Now go back and make sure the first two mufflers in the middle are level.



3. Install X pipe assembly #A assembly on to your front factory pipes and secure with factory clamps. Re-install factory cross member. Use a jack stand to support mufflers. Do not tighten.



7. Re Install Stock Tips. Use stainless steel cleaner and a Scotch Brite pad weekly to prevent tips from discoloration. Inspect all fasteners after 25-50 miles of operation and re-tighten as necessary.



4. Install driver side tailpipe/muffler assembly #B. Insert all welded hangers into rubber grommets. Secure tailpipes with clamp #D. Do not tighten.

GIBSON EXHAUST systems are designed on a factory stock vehicle. Any aftermarket products installed could increase the sound levels of the exhaust. **Make sure there is a 1" clearance from ALL rubber brake lines, shock boots, lines, tires, etc. to prevent heat related damage or fire.**