




Installation Instructions

Cat-Back Stainless DEEGAN 38 Dual Sport Exhaust
 Chevy Silverado & GMC Sierra 2500HD/3500HD, 6.0L, 2/4wd
 Crew Cab, Short Bed

Part #65630D

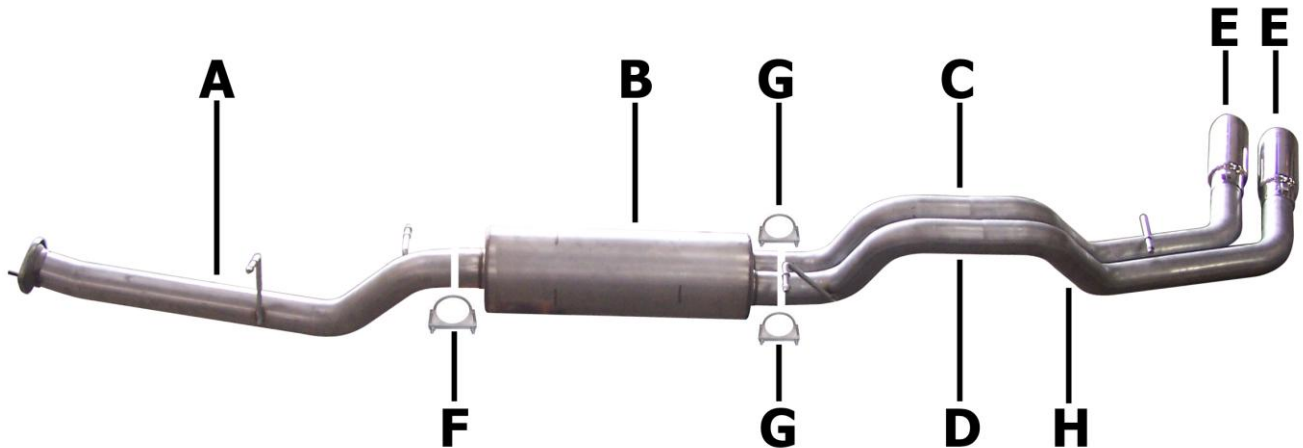

ITEM	PART	QUANTITY	DESCRIPTION
A	1233-700990S	1	3.5" Stainless Headpipe w/ welded flange
B	758350S	1	Stainless Superflow SFT Muffler
C	1234-700992S	1	3" Stainless Passenger Side Over Axle Tailpipe
D	1235-700993S	1	3" Stainless Driver Side Over Axle Tailpipe
E	500641-B	2	4" BLACK SS TIP
F	4170	1	3.5" Clamp
G	OHD300	2	3" Clamp
H	BO-906	1	Bolt kit for tailpipes
I	DE-13	2	DEEGAN 38 BADGE

Thank you for purchasing our Gibson Exhaust System for your vehicle.
 If you need further assistance, please do not hesitate to call our technical department at
 (800) 528 -3044 Monday through Friday, 8am to 5 pm.
 60x22x13

Installation Instructions #65630D

When installing this exhaust system make sure to use proper safety precautions. Use jack stands when working under the vehicle, set parking brake, block tires and use safety glasses and gloves. Allow exhaust to cool before attempting installation. Severe injury or burns could occur if safety measures are not taken.

SUGGESTED TOOLS: 1/2", 9/16", 15mm wrenches & sockets, WD-40, hacksaw, jack stands

1. Disconnect the negative battery cable before removal of OEM exhaust. This will allow the computer to reset and recognize the new exhaust. Lay out the exhaust on the floor so it looks like the drawing and compare parts with manual.



2. To remove your stock exhaust, unbolt the 2-bolt flange located in front of the muffler. Disengage the welded hangers from the rubber grommets. Use WD-40 to aid in this process. Do not remove or damage the rubber grommets as you will reuse them to mount your new system. Now, cut off tailpipe and remove exhaust. Do not throw away stock hardware.



6. Slide the driver side over axle tailpipe #D into the muffler 1.5-2". Use clamp #G to secure tailpipe to muffler. Do not tighten. Insert welded hanger into rubber grommet.



3. Install headpipe #A onto your existing stock front headpipe using stock hardware to secure pipes together. Do not tighten. Use a jack stand to support the converter. Insert welded hangers into rubber grommets.



7. Attach tailpipes together with bolt kit #H. Driver side tab should be on the bottom.



4. Slide muffler #B over headpipe 1.5-2" with the louvers facing towards the converter. Use a jack stand to support the muffler. Use clamp #F to secure the muffler to the headpipe. Do not tighten. Muffler inlet is looking into the louvers.



8. INSTALL YOUR BLACK CERAMIC COATED TIPS. PROCEED TO THE NEXT SHEET ON HOW TO INSTALL YOUR DEEGAN 38 BADGES. AFTER YOU HAVE CHECKED FOR CLEARANCES GO BACK AND TIGHTEN ALL NUTS, BOLTS AND CLAMPS.



5. Slide the passenger side over axle tailpipe #C into the muffler 1.5-2". Use clamp #G to secure. Do not tighten. Insert welded hanger into rubber grommet.

GIBSON EXHAUST systems are designed on a factory stock vehicle. Any aftermarket products installed could increase the sound levels of the exhaust. **Make sure there is a 1" clearance from ALL rubber brake lines, shock boots, lines, tires, etc. to prevent heat related damage or fire.**