




INSTRUCTION MANUAL

DEEGAN 38 DUAL SPORT STAINLESS TRUCK EXHAUST

EXTENDED CAB, LONG BED 4.3L-4.8L-5.3L 2/4 WD
CHEVY SILVERADO/SIERRA 1500 4.3L, 4.8L, 5.3L
CLASSIC 1500 SILVERADO/SIERRA TRUCK 5.3L 2/4 WD
EXTENDED CAB, LONG BED
PART # 65701D

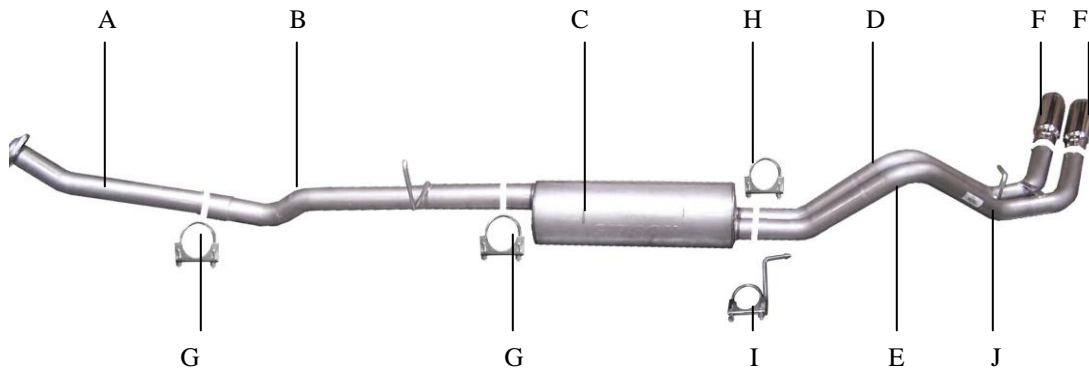

| ITEM | PART # | QTY | DESCRIPTION |
|------|---------------|-----|---|
| A | 382-700228S-A | 1 | STAINLESS HEADPIPE WITH FLANGE #GP115 |
| B | 383-700228S-B | 1 | STAINLESS HEADPIPE EXTENSION |
| C | 758250S | 1 | STAINLESS SUPERFLOW MUFFLER |
| D | 505-700395S | 1 | 2.5" STAINLESS PASSENGER SIDE OVERAXLE PIPE |
| E | 506-700396S | 1 | 2.5" STAINLESS DRIVER SIDE OVERAXLE PIPE |
| F | 500640-B | 2 | 4" BLACK SS TIP |
| G | OHD300 | 2 | 3" CLAMP |
| H | 5757 | 1 | 2-1/2" CLAMP |
| I | 4149 | 1 | REAR MUFFLER HANGER |
| J | BO-906 | 1 | BOLT KIT FOR TAILPIPE |
| K | 4137 | 1 | SPARE TIRE BRACKET |
| L | DE-13 | 2 | DEEGAN 38 BADGE |

Thank you for purchasing our GIBSON EXHAUST SYSTEM for your vehicle. If you need further assistance, please do not hesitate to call our Technical Department at 1-800-528-3044 Monday through Friday, 8:00 am to 5:00 pm.

EXHAUST INSTALLATION #65701D

When installing this exhaust system make sure to use proper safety precautions. Use jack stands when under the truck, set parking brake, block tires and use safety glasses and gloves.

DO NOT WORK WITH HOT PIPES!

SUGGESTED TOOLS:

1/2", 9/16", 15mm wrench and socket, WD-40, Hacksaw or Sawzall, Jack Stand



Lay out the exhaust on the floor so it looks like the drawing and compare parts with manual. To remove the stock exhaust un-bolt it from the 2-bolt flange located behind your factory Y-pipe. You will re-use your factory hardware. Leave all rubber grommets in place. Use WD-40 to aid in removal of exhaust and the hangers. Now cut off your stock tailpipe just behind the muffler.



Install the passenger side over axle tailpipe #D into the muffler 1 1/2" to 2". Use clamp #H to secure tailpipe to muffler. Do not tighten. Insert welded hanger into rubber grommet



Install head pipe #A onto you're existing stock flange using your factory hardware. Do not tighten. Next slide headpipe #B onto headpipe #A. Insert welded hanger into rubber grommet. Use clamp #G to secure pipes together. Do not tighten.



Install driver side over axle tailpipe #E into muffler and attach using clamp #I. Use bolt kit #J to attach the tailpipes together. Do not tighten. Driverside pipes tab will be on the bottom when putting bolting pipes together.



Install muffler #C onto head pipe #B 1-1/2" to 2" with the louvers facing towards the converter. Use a jack stand to support the muffler. Use clamp #G to secure the muffler to the head pipe. Do not tighten. Install rear muffler hanger #I onto driverside muffler outlet. Insert hanger into rubber grommet. Do not tighten.



INSTALL YOUR BLACK CERAMIC COATED TIPS. PROCEED TO THE NEXT SHEET ON HOW TO INSTALL YOUR DEEGAN 38 BADGES. AFTER YOU HAVE CHECKED FOR CLEARANCES GO BACK AND TIGHTEN ALL NUTS, BOLTS AND CLAMPS..

MAKE SURE YOU HAVE A 1" CLEARANCE ON ALL RUBBER BRAKE LINES, SHOCK BOOTS, TIRE, FUEL LINES, ETC.