




INSTRUCTION MANUAL

CAT-BACK STAINLESS SPLIT EXHAUST SYSTEM

DODGE RAM 25003500 TRUCK 5.7L HEMI 2/4WD 4DR
CREW CAB, SHORT & LONG BED

PART #66502

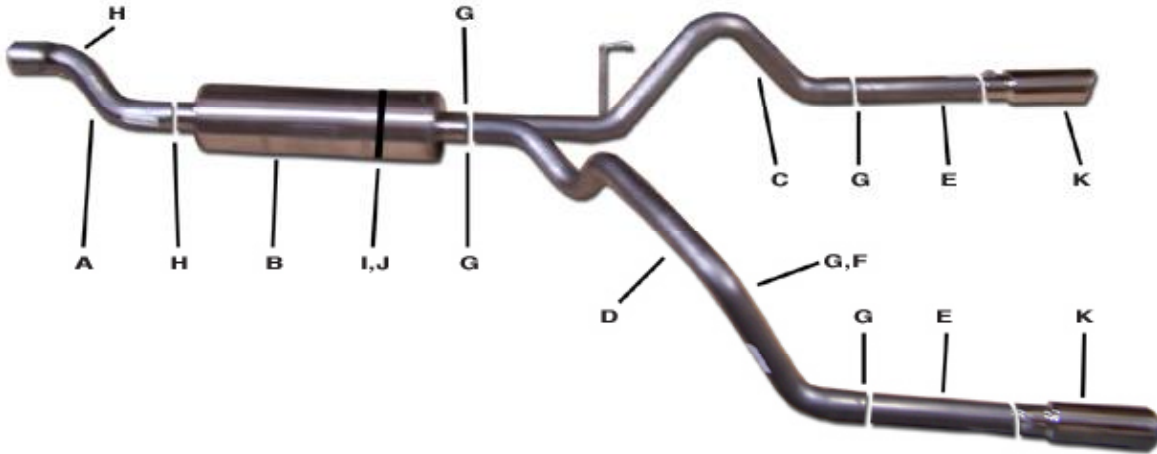

ITEM	PART #	QTY.	DESCRIPTION
A	585-700474S	1	3"X23" STAINLESS HEADPIPE WITH EXTENSION
B	789800S	1	SUPERFLOW STAINLESS MUFFLER
C	544-700407S	1	2-1/2" PASSENGER STAINLESS OVERAXLE PIPE
D	612-700408S-1	1	2-1/2" DRIVER STAINLESS OVERAXLE PIPE
E	546-700346S	2	2-1/2" STAINLESS EXIT PIPE
F	08269	1	10" HANGER
F	BO-101	1	BOLT KIT FOR 10" HANGER
G	5757	5	2-1/2" CLAMP
H	OHD300	2	3" CLAMP
I	4188	1	BAND CLAMP
J	BO-1015	1	BAND CLAMP BOLT KIT
K	500374	2	3.5" STAINLESS TIPS
L	ZIP	2	ZIP TIES

SPARE TIRE MUST BE REMOVED IF EQUIPPED WITH 20" SPARE OR LARGER!

Thank you for purchasing our GIBSON EXHAUST SYSTEM for your vehicle. If you need further assistance, please do not hesitate to call our Technical Department at (800) 528-3044, Monday through Friday, 8:00 am to 5:00 pm.

EXHAUST INSTALLATION #66502

WHEN INSTALLING THIS EXHAUST SYSTEM MAKE SURE TO USE ALL THE PROPER SAFETY PRECAUTIONS. USE JACK STANDS WHEN UNDER TRUCK, SET PARKING BRAKE, BLOCK TIRES AND USE SAFETY GLASSES AND GLOVES. **DO NOT WORK WITH HOT PIPES!**


SUGGESTED TOOLS:

9/16, 1/2, 15MM Wrench and Socket, Jack Stand, Hacksaw, WD-40

TO REMOVE STOCK EXHAUST UNCLAMP THE STOCK EXHAUST JUST IN FRONT OF THE MUFFLER.



YOU MAY NEED TO HEAT IT UP FOR EASIER REMOVAL. LEAVE ALL RUBBER GROMMETS IN PLACE. USE WD-40 FOR REMOVAL OF HANGERS.

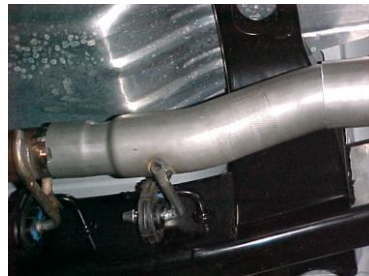

INSTALL HEADPIPE #A, YOU WILL NEED TO LINE UP THE TWO NOTCHES. INSERT WELDED HANGER INTO RUBBER GROMMET. USE CLAMP #A TO SECURE HEADPIPE TO THE STOCK PIPE. DO NOT TIGHTEN.



INSTALL MUFFLER #B ONTO HEADPIPE 1-1/2" TO 2". USE CLAMP #H TO SECURE THE MUFFLER TO THE HEADPIPE. INSERT WELDED HANGER INTO RUBBER GROMMET. DO NOT TIGHTEN. SLIDE BAND CLAMP #I ONTO THE MUFFLER AND INSERT THE WELDED HANGER INTO THE RUBBER GROMMET. ATTACH WITH BOLT KIT # J.



INSTALL PASSENGER SIDE TAILPIPE #C INTO MUFFLER 1-1/2" TO 2". USE CLAMP #G TO SECURE TAILPIPE TO MUFFLER. INSERT WELDED HANGER INTO RUBBER GROMMET. DO NOT TIGHTEN.



MEASURE 19 1/2" FROM THE REAR OF THE FRAME AND USE THIS HOLE AND BOLT ON HANGER #F. USE THE 1ST. HOLE FROM THE TOP. IT WILL BOLT ON THE INSIDE OF THE FRAME.



INSTALL DRIVER SIDE TAILPIPE #D INTO MUFFLER 1-1/2" TO 2" AND USE CLAMP #G TO SECURE THE MUFFLER. DO NOT TIGHTEN. USE CLAMP #F TO HOLD PIPE UP TO THE HANGER #G DO NOT TIGHTEN.

INSTALL THE EXIT PIPES #E ONTO THE TAILPIPES USING CLAMPS #G. ROLL THE PIPES UNTIL YOU HAVE THEM AT THE ANGLE YOU DESIRE.



NOW GO BACK AND TIGHTEN ALL CLAMPS, NUTS AND BOLTS STARTING FROM THE FRONT AND WORKING BACK.

INSTALL STAINLESS TIPS.

USE ZIP TIES FOR BRAKE AND FUEL LINES.

MAKE SURE YOU HAVE A 1" CLEARANCE AWAY FROM ALL PIPES, BRAKE LINES, FUEL LINES, SHOCKS, TIRES, ETC...