




INSTRUCTION MANUAL

CAT-BACK STAINLESS DEEGAN 38 DUAL SPORT EXHAUST

DODGE RAM 1500 5.7L TRUCK 2/4WD 4DR QUADCAB, SHORT BED

PART # 66523D

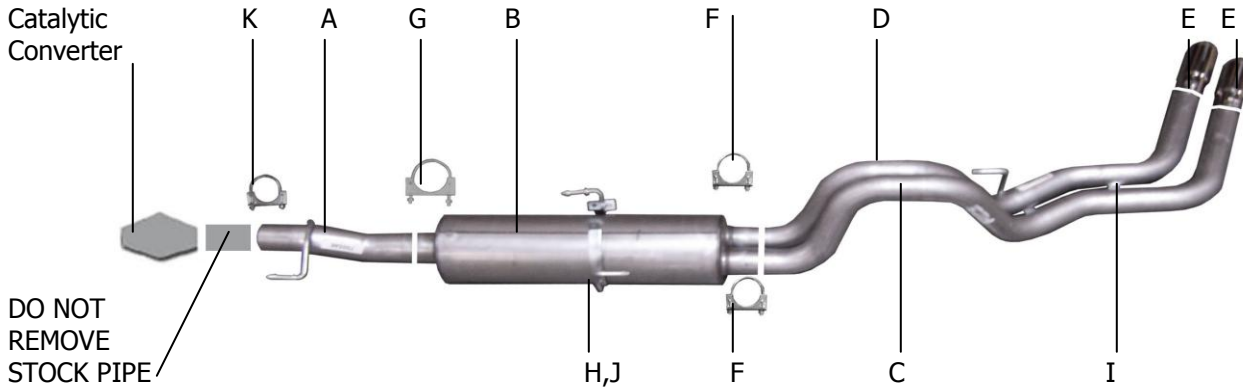

ITEM	PART #	QUANTITY	DESCRIPTION
A	993-700764S	1	3" STAINLESS HEADPIPE
B	789802S	1	SUPERFLOW STAINLESS MUFFLER
C	994-700765S	1	2 1/2" SS DRIVER SIDE TAILPIPE
D	995-700766S	1	2 1/2" SS PASSENGER TAILPIPE
E	500640-B	2	4" BLACK SS TIP
F	5757	2	2 1/2" CLAMP
G	OHD300	1	3" CLAMP
H	4260	1	BAND CLAMP
I	BO-906	1	BOLT KIT FOR TAILPIPE
J	BO-1015	1	BAND CLAMP BOLT KIT
K	5758	1	2.75" CLAMP
L	DE-13	2	DEEGAN 38 BADGE

Thank you for purchasing our GIBSON EXHAUST SYSTEM for your vehicle. If you need further assistance, please do not hesitate to call our Technical Department at (800) 524-3044 Monday through Friday 8:00 am to 5:00 pm.

EXHAUST INSTALLATION KIT#66523D

WHEN INSTALLING THIS EXHAUST SYSTEM MAKE SURE TO USE ALL THE PROPER SAFETY PRECAUTIONS. USE JACKSTANDS WHEN UNDER THE TRUCK, SET PARKING BRAKE, BLOCK TIRES, AND USE SAFETY GLASSES AND GLOVES.

DO NOT WORK WITH HOT PIPES!

SUGGESTED TOOLS

15MM SOCKET, 9/16" SOCKET, 1/2" SOCKET, 1/2" WRENCH, JACKSTANDS, HACKSAW, WD-40

TO REMOVE THE STOCK EXHAUST UNCLAMP THE STOCK EXHAUST JUST IN FRONT OF THE MUFFLER.



YOU MAY NEED TO HEAT IT UP FOR EASIER REMOVAL. LEAVE ALL RUBBER GROMMETS IN PLACE. USE WD-40 FOR REMOVAL OF HANGERS.



INSTALL DRIVERSIDE TAILPIPE #C INTO MUFFLER. USE CLAMP #F TO SECURE TAILPIPE TO MUFFLER.



INSTALL HEADPIPE #A ONTO YOUR EXISTING STOCK FRONT PIPE AND SECURE WITH CLAMP #K. USE A JACKSTAND TO SUPPORT THE CONVERTER. INSERT WELDED HANGER INTO RUBBER GROMMET. DO NOT TIGHTEN.



INSTALL PASSENGER SIDE TAILPIPE #D INTO MUFFLER AND ATTACH USING CLAMP #F. INSERT WELDED HANGER INTO RUBBER GROMMET. DO NOT TIGHTEN. USE BOLT KIT #I TO ATTACH THE TAILPIPES TOGETHER. DO NOT TIGHTEN. PASSENGER SIDE TABS ON TAILPIPE WILL BE ON TOP OF DRIVER SIDE TABS. YOU MAY NEED TO LOOSEN THE SPARE TIRE AND PUSH TOWARD THE DRIVERSIDE FOR EASIER INSTALLATION.



INSTALL MUFFLER #B ONTO HEADPIPE 1-1/2" TO 2". USE CLAMP #G TO SECURE THE MUFFLER TO THE HEADPIPE. DO NOT TIGHTEN. SLIDE BAND CLAMP #H ONTO THE MUFFLER AND INSERT THE WELDED HANGERS INTO THE RUBBER GROMMETS. ATTACH WITH BOLT KIT #J.



INSTALL YOUR BLACK CERAMIC COATED TIPS. PROCEED TO THE NEXT SHEET ON HOW TO INSTALL YOUR DEEGAN 38 BADGES. AFTER YOU HAVE CHECKED FOR CLEARANCES GO BACK AND TIGHTEN ALL NUTS, BOLTS AND CLAMPS.

MAKE SURE YOU HAVE A MINIMUM OF A 1" CLEARANCE AWAY FROM ALL SHOCK BOOTS, BRAKE LINES, FUEL LINES, TIRES, ETC...