




INSTRUCTION MANUAL
STAINLESS CAT-BACK DEEGAN 38 DUAL SPORT EXHAUST
05-08 DODGE RAM 2500 HEAVY DUTY & POWERWAGON
QUAD CAB, SHORT BED, 5.7L HEMI 4DR 4WD
PART # 66542D

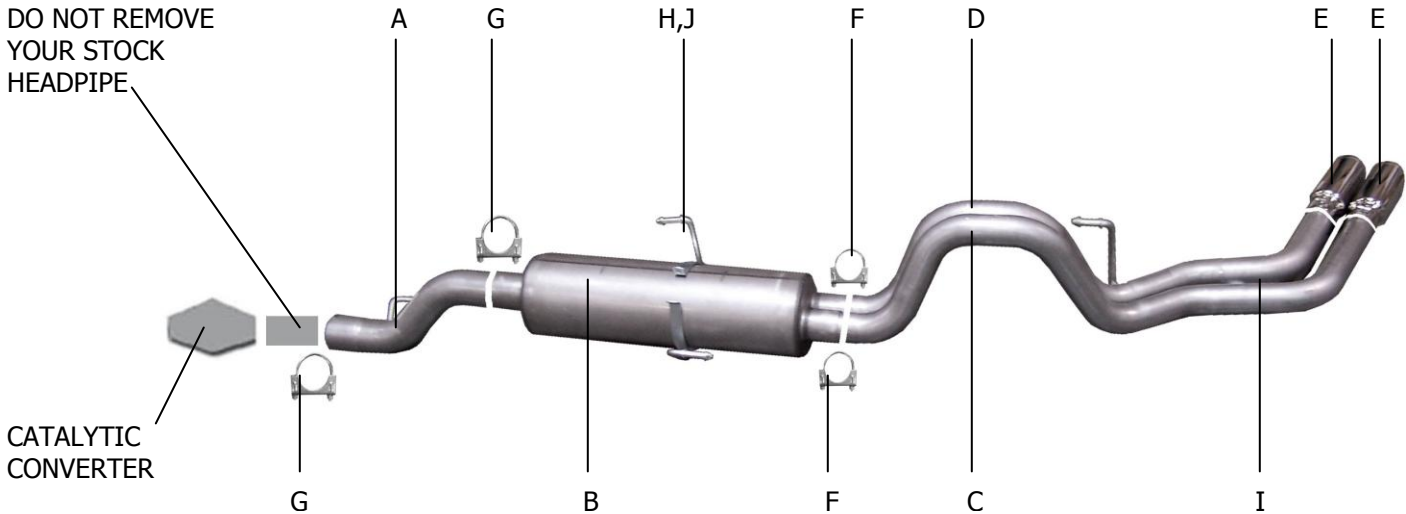

TO REMOVE STOCK EXHAUST, UNCLAMP JUST IN FRONT OF MUFFLER

ITEM	PART #	QUANTITY	DESCRIPTION
A	974-700749S	1	3" STAINLESS HEADPIPE EXTENSION
B	789800S	1	SUPERFLOW STAINLESS MUFFLER
C	975-700750S	1	2 ½" STAINLESS DRIVER SIDE TAILPIPE
D	976-700751S	1	2 ½" STAINLESS PASS. SIDE TAILPIPE
E	500640-B	2	4" BLACK SS TIP
F	5757	2	2 ½" CLAMP
G	OHD300	2	3" CLAMP
H	4258	1	BAND CLAMP
I	BO-906	2	BOLT KIT FOR TAILPIPE
J	BO-1015	1	BAND CLAMP BOLT KIT
K	DE-13	2	DEEGAN 38 BADGE

Thank you for purchasing our GIBSON EXHAUST SYSTEM for your vehicle. If you need further assistance, please do not hesitate to call our Technical Department at (800) 524-3044, Monday through Friday, 8:00 am to 5:00 pm. 0216

EXHAUST INSTALLATION KIT#66542D

WHEN INSTALLING THIS EXHAUST SYSTEM MAKE SURE TO USE ALL THE PROPER SAFETY PRECAUTIONS. USE JACKSTANDS WHEN UNDER THE TRUCK, SET PARKING BRAKE, BLOCK TIRES, AND USE SAFETY GLASSES AND GLOVES.

DO NOT WORK WITH HOT PIPES!

SUGGESTED TOOLS

15MM SOCKET, 9/16" SOCKET, 1/2" SOCKET, 1/2" WRENCH, JACKSTANDS, HACKSAW, WD-40


TO REMOVE THE STOCK EXHAUST UNCLAMP THE STOCK EXHAUST JUST IN FRONT OF THE MUFFLER.



YOU MAY NEED TO HEAT IT UP FOR EASIER REMOVAL. LEAVE ALL RUBBER GROMMETS IN PLACE. USE WD-40 FOR REMOVAL OF HANGERS. FOR EASIER REMOVAL, REMOVE THE TWO CROSSMEMBER BARS FIRST.



INSTALL DRIVERSIDE TAILPIPE #C INTO MUFFLER. USE CLAMP #F TO SECURE TAILPIPE TO MUFFLER.

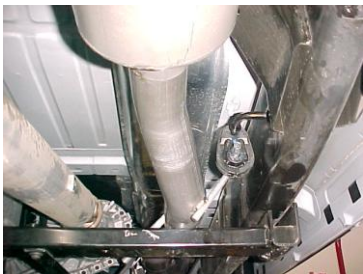

INSTALL HEADPIPE #A ONTO YOUR EXISTING STOCK FRONT PIPE AND SECURE WITH CLAMP #G. USE A JACKSTAND TO SUPPORT THE CONVERTER. INSERT WELDED HANGER INTO RUBBER GROMMET.



INSTALL PASSENGER SIDE TAILPIPE #D INTO MUFFLER AND ATTACH USING CLAMP #F. INSERT WELDED HANGER INTO RUBBER GROMMET. DO NOT TIGHTEN. USE BOLT KIT #I TO ATTACH THE TAILPIPES TOGETHER. DO NOT TIGHTEN. DRIVER SIDE TAILPIPE TABS WILL BE ON THE BOTTOM.



INSTALL MUFFLER #B ONTO HEADPIPE 1-1/2" TO 2". USE CLAMP #G TO SECURE THE MUFFLER TO THE HEADPIPE. DO NOT TIGHTEN. SLIDE BAND CLAMP #H ONTO THE MUFFLER AND INSERT THE WELDED HANGERS INTO THE RUBBER GROMMETS. ATTACH WITH BOLT KIT #J.



INSTALL YOUR BLACK CERAMIC COATED TIPS. PROCEED TO THE NEXT SHEET ON HOW TO INSTALL YOUR DEEGAN 38 BADGES. AFTER YOU HAVE CHECKED FOR CLEARANCES GO BACK AND TIGHTEN ALL NUTS, BOLTS AND CLAMPS.

FOR EASIER INSTALLATION, YOU MAY NEED TO MOVE YOUR SPARE TIRE OVER. MAKE SURE YOU HAVE A MINIMUM OF A 1" CLEARANCE AWAY FROM ALL SHOCK BOOTS, BRAKE LINES, FUEL LINES, TIRES, ETC...