




**INSTALLATION INSTRUCTIONS**  
**CAT BACK STAINLESS DEEGAN 38 DUAL SPORT EXHAUST**  
**DODGE RAM 1500 TRUCK 4.7L 2WD 4DR**  
**QUAD CAB, SHORT BED**  
**PART #66558D**

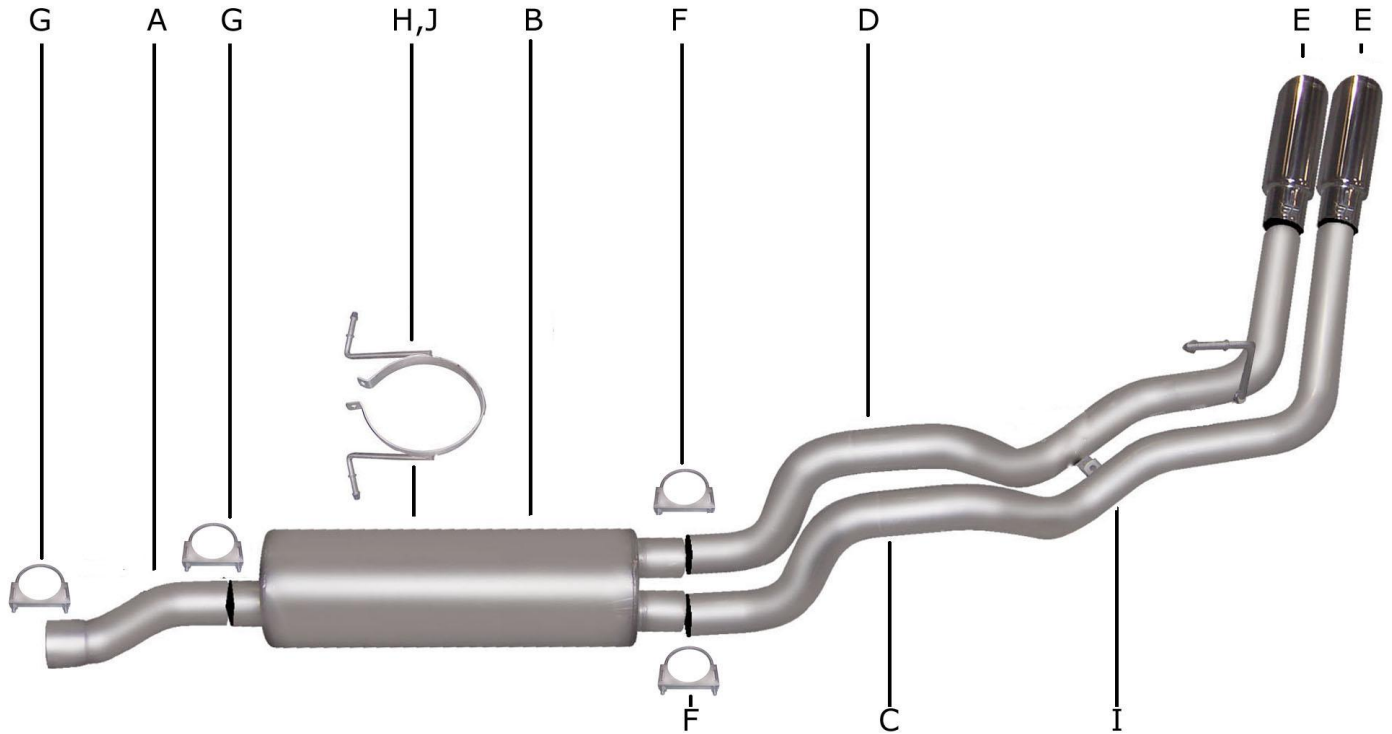

ITEM	PART #	QUANTITY	DESCRIPTION
A	1073-700818S	1	3" Stainless head pipe
B	789800S	1	Stainless Superflow muffler
C	1034-700810S	1	2½" Stainless driver side tailpipe
D	1035-700811S	1	2½" Stainless passenger side tailpipe
E	500640-B	2	4" BLACK SS TIP
F	5757	2	2½" clamp
G	OHD300	2	3" clamp
H	4337	1	7" Band clamp
I	BO-906	1	Bolt kit for tailpipe
J	BO-1015	1	Bolt kit for band clamp
K	DE-13	2	DEEGAN 38 BADGE

**Thank you for purchasing our Gibson exhaust system for your vehicle. If you need further assistance, please do not hesitate to call our technical dept at (800) 528-3044 Monday through Friday, 8:00 am to 5:00 pm.**

# INSTALLATION INSTRUCTIONS #66558D


## CAREFULLY READ INSTRUCTIONS BEFORE STARTING INSTALLATION.

When installing this exhaust system make sure to use proper safety precautions. Use jack stands when working under the vehicle, set parking brake, block tires and use safety glasses and gloves. Allow exhaust to cool before attempting installation. Severe injury or burns could occur if safety measures are not taken.

**SUGGESTED TOOLS:** 1/2", 9/16" 15mm wrenches & sockets, WD-40, hacksaw, jack stands.

.....  
: **Disconnect the negative battery cable before removal of OEM exhaust. This will allow the computer to reset and recognize the** :  
: **new exhaust. Lay out the exhaust on the floor so it looks like the drawing and compare parts with manual.** :  
.....

## DO NOT REMOVE STOCK HEADPIPE

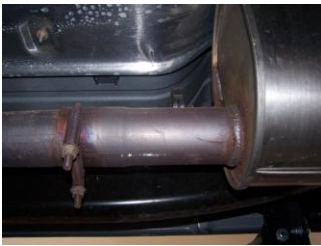

**1.** To remove the stock exhaust remove it from in front of the stock muffler.. Disengage the welded hangers using WD-40 from the OEM rubber grommets. Do not damage or remove the rubber grommets as you will re-use them to mount your new system.



**5.** Install the passenger side overaxle tailpipe #D into the muffler 1½"-2". Use clamp #F to secure tailpipe to muffler. **DO NOT TIGHTEN.**



**2.** Install head pipe #A onto your existing stock front pipe and attach with clamp #G. Use a jack stand to support the converter.



**6.** Install the driver side overaxle tailpipe #C into the muffler 1½"-2". Use clamp #F to secure tailpipe to muffler. **DO NOT TIGHTEN.**



**3.** Install muffler #B onto head pipe 1½"-2" with the louvers facing towards the converter. Use a jack stand to support the muffler. Use clamp #G to secure the muffler to the headpipe. **DO NOT TIGHTEN.**



**7.** Attach tailpipes together with bolt kits #I. **DO NOT TIGHTEN.** Driver side tabs will be on bottom.



**4.** Slide band clamp #H onto muffler and attach with bolt kit #J. **DO NOT TIGHTEN.** Insert hangers into rubber grommets.



**8.** INSTALL YOUR BLACK CERAMIC COATED TIPS. PROCEED TO THE NEXT SHEET ON HOW TO INSTALL YOUR DEEGAN 38 BADGES. AFTER YOU HAVE CHECKED FOR CLEARANCES GO BACK AND TIGHTEN ALL NUTS, BOLTS AND CLAMPS.

GIBSON EXHAUST systems are designed on a factory stock vehicle. Any aftermarket products installed could increase the sound levels of this Exhaust. **Make sure there is a 1" clearance from ALL rubber brake lines, shock boots, fuel lines, tires, etc to prevent heat related damage or fire.**