




PERFORMANCE EXHAUST SYSTEMS

INSTRUCTION MANUAL
CAT-BACK DEEGAN 38 DUAL STAINLESS SPORT TRUCK
EXHAUST
FORD F250/F350 SUPERDUTY TRUCK 5.4L - 6.8L 2/4WD
CREWCAB LONG BED
PART # 69121D

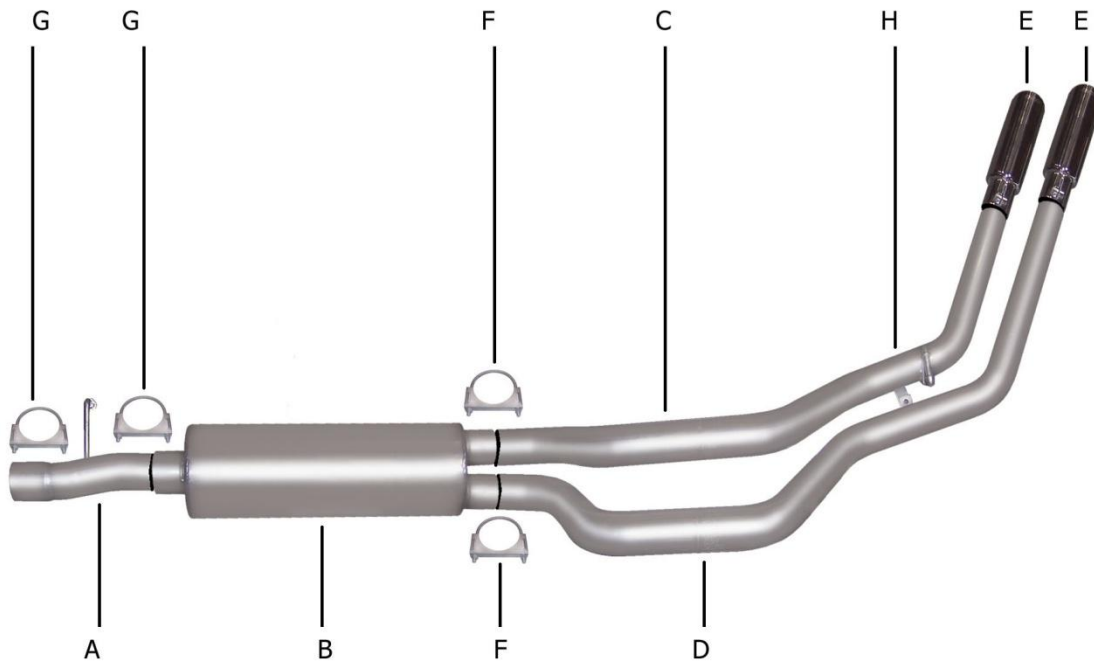

ITEM	PART#	QTY	DESCRIPTION
A	999700756S	1	3" STAINLESS HEADPIPE
B	789800S	1	SUPERFLOW STAINLESS MUFFLER
C	999700760S	1	2.5" SS PASSENGER OVERAXLE TAILPIPE
D	999700761S	1	2.5" SS DRIVER OVERAXLE TAILPIPE
E	500640-B	2	4" BLACK SS TIP
F	5757	2	2 1/2" CLAMPS
G	OHD300	2	3" CLAMPS
H	BO-906	1	BOLT KIT FOR TAILPIPE
I	DE-13	2	DEEGAN 38 BADGE

Thank you for purchasing our GIBSON EXHAUST SYSTEM for your vehicle. If you need any further assistance, please do not hesitate to call our Technical Department at (800) 528-3044, Monday-Friday 8:00AM-5:00PM.

INSTALLATION INSTRUCTIONS PART #69121D

WHEN INSTALLING THIS EXHAUST SYSTEM, MAKE SURE TO USE THE PROPER SAFETY PRECAUTIONS. USE JACK STAND WHEN UNDER TRUCK, SET PARKING BRAKE, BLOCK TIRES, AND USE SAFETY GLASSES AND GLOVES. DO NOT WORK WITH HOT PIPES!


SUGGESTED TOOLS:

13mm, 15mm SOCKET, 9/16" SOCKET, 1/2" SOCKET, 1/2" WRENCH, HACKSAW, JACKSTAND

LAY OUT THE EXHAUST AND COMPARE THE PART NUMBER WITH THE DRAWING



TO REMOVE YOUR STOCK EXHAUST, UNBOLT AND REMOVE IT FROM THE SECOND CLAMP LOCATED JUST IN FRONT OF THE MUFFLER. FOR EASIER REMOVAL OF THE FACTORY EXHAUST, CUT OFF THE STOCK TAILPIPE JUST BEHIND THE MUFFLER AND REMOVE. LEAVE ALL RUBBER GROMMETS ON THE HANGERS. USE WD-40 TO AID IN REMOVAL OF EXHAUST AND HANGERS.

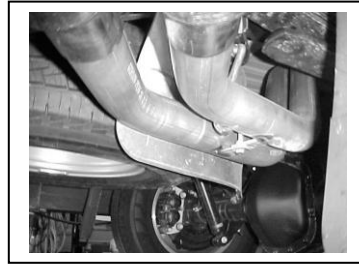

INSTALL DRIVER SIDE OVER AXLE TAILPIPE # D INTO MUFFLER 1 1/2 TO 2". INSERT WELDED HANGER INTO RUBBER GROMMET, USE CLAMP # G TO SECURE PIPE TO MUFFLER. THIS PIPE WILL GO INTO THE DRIVERS SIDE OUTLET. DO NOT TIGHTEN



INSTALL HEADPIPE # A ONTO FACTORY PIPE. LINE UP THE NOTCH. USE CLAMP # G TO SECURE HEADPIPE TO FACTORY PIPE. DO NOT TIGHTEN. INSERT WELDED HANGER INTO RUBBER GROMMET.



NEXT INSTALL DRIVERS OVER AXLE PIPE # D INTO MUFFLER 1 1/2 TO 2". USE CLAMP # F TO SECURE PIPE TO MUFFLER. DO NOT TIGHTEN. USE BOLT KIT # H TO SECURE PIPES TOGETHER. DRIVERSIDE TAB WILL BE ON THE BOTTOM.



SLIP MUFFLER #B ONTO THE HEADPIPE 1 1/2" TO 2". THE OUTLETS WILL BE LEVEL. USE CLAMP #G TO SECURE MUFFLER TO HEADPIPE. DO NOT TIGHTEN.



INSTALL YOUR BLACK CERAMIC COATED TIPS. PROCEED TO THE NEXT SHEET ON HOW TO INSTALL YOUR DEEGAN 38 BADGES. AFTER YOU HAVE CHECKED FOR CLEARANCES GO BACK AND TIGHTEN ALL NUTS, BOLTS AND CLAMPS.

MAKE SURE YOU HAVE A MINIMUM OF 1" CLEARANCE FROM ALL PIPES, BRAKE & FUEL LINES, TIRES, SHOCKS. ETC