




INSTALLATION INSTRUCTIONS

**Patriot Skull Stainless Steel Exhaust
Nissan Titan 5.6L 2/4WD
King Cab & Crew Cab Short Bed
PART #76-0012**

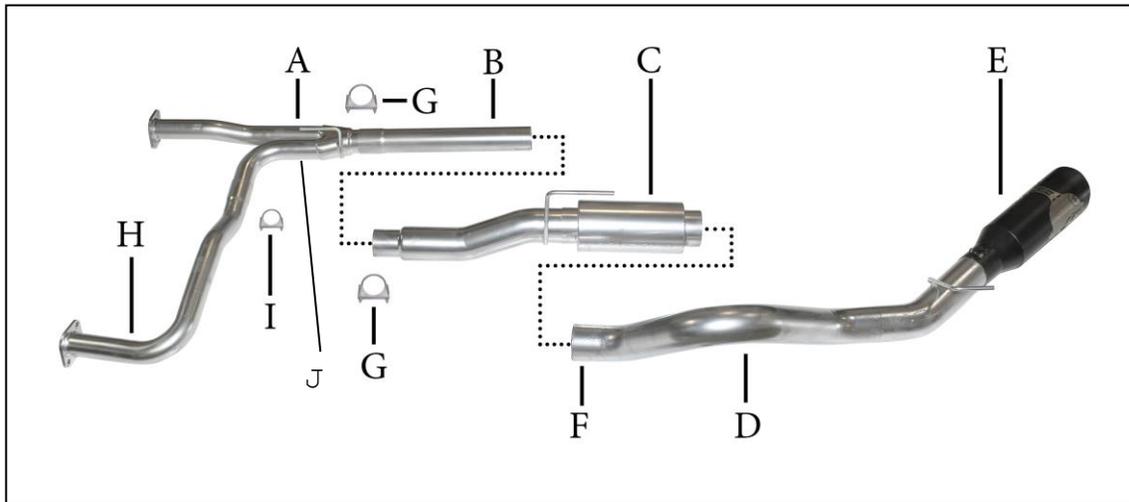

ITEM	PART #	QTY	DESCRIPTION
A	794-700550S	1	2.50" Y-pipe W/ GP-110 Flange
B	795-700551S	1	3" Resonator
C	MM015	1	Muffler Assembly
D	MM016	1	4.0" Overaxle Pipe
E	77-1036-B	1	6.0" Patriot Skull Tip
F	5759	1	4" Band Clamp
G	OHD300	2	3.0" Clamp
H	1336-700550S-1	1	2.50" Driver Side Headpipe
I	5757	1	2.50" clamp
J	80044	1	Y-Pipe Hanger Mount (4wd)
K	Bo-906	1	Bolt Kit for hanger mount

Note: This exhaust will exceed some state sound laws and requirements. Aggressive driving will get you noticed and can result in a ticket or warning from your local law enforcement agency.

**Thank you for purchasing our Gibson Exhaust system for your vehicle.
If you need further assistance, please do not hesitate to call our technical dept at (800) 528-3044
Monday through Friday, 8:00 am to 5:00 pm. 0320**

EXHAUST INSTALLATION

PART# 76-0012

WHEN INSTALLING THIS EXHAUST SYSTEM MAKE SURE TO USE ALL THE PROPER SAFETY PRECAUTIONS. USE JACK STANDS WHEN UNDER TRUCK, SET PARKING BRAKE, BLOCK TIRES AND USE SAFETY GLASSES.

DO NOT WORK WITH HOT PIPES!!!

1. Disconnect the negative battery cable before removal of the OEM Exhaust. This will allow the computer to reset and recognize the new exhaust. Lay out the exhaust on the floor so it looks like the drawing and compare parts with manual. Remove the factory exhaust by cutting behind the factory muffler. Once the tail pipe has been removed un-bolt the muffler and head pipe at the flanges located behind the catalytic converters. Use wd-40 or another type of penetrating oil to remove the rubber grommets. Do not damage these they will be re used.



2. Install Head pipe Item # A onto the factory flange. Install hanger into rubber grommet and loosely tighten down the flange. 4wd use (K) to bolt in hangar mount.



3. Install Head pipe Item # H onto the factory flange. Slide the head pipe into item # A before attaching the two bolts. Loosely tighten down.



4. Install the Resonator Item #B onto the head pipe Item # A. The inlet of the resonator will have the louvers opening towards the front of the vehicle. Loosely tighten down.



5. Install The muffler assembly Item # C Onto the resonator. Also slide the muffler hanger into the factory rubber grommet. Install the over axle pipe Item # D into the muffler outlet and install the hanger into the rubber grommets. Use clamp Item # F to secure. Do not tighten



6. With proper clearance from spare tire, install the exhaust tip onto the tailpipe. The system was designed to have the tip 1" below the quarter panel of the vehicle. With the tip in your desired position begin to tighten down all clamp connections from the front head pipe back.



7. Be sure to check all clearance after each section has been tightened to be sure there is proper clearance. It may take 4-500 miles for your vehicle to fully adjust to the changes in exhaust flow.

GIBSON EXHAUST systems are designed on a factory stock vehicle. Any aftermarket products installed could increase the sound levels of this Exhaust. Make sure there is a 1" clearance from ALL rubber brake lines, shock boots, fuel lines, tires, etc to prevent heat related damage or fire.