


1. Determine a suitable mounting point on the tow vehicle.
2. Locate a grounding point and clean dirt and rustproofing from the area. Ground the white wire.
3. Connect remaining wires. See diagram enclosed.


**NOTE:** Locate wires on vehicle by function only. Color coding is not standard among all manufacturers.

**TIPS:**

- Grease applied to the trailer wiring terminals on a regular basis will help prevent corrosion.
- A heavy duty flasher may be required to eliminate rapid flashing.
- Always unplug boat trailer connector before backing trailer into the water.

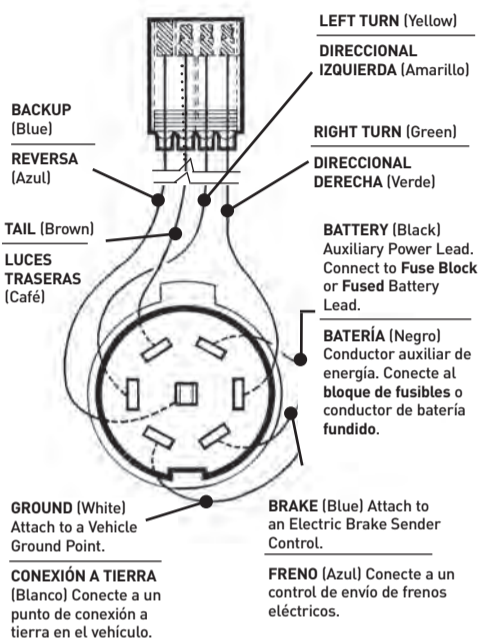

**VIEW LOOKING AT FRONT OF PLUG**  
**VISTA MIRANDO EL FRENTE DEL ENCHUFE**

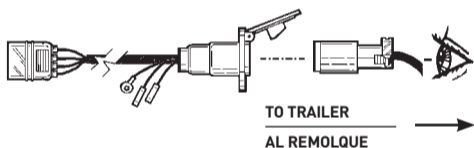

1. Determine un punto de montaje apropiado en el vehículo de remolque.
2. Localice el punto de conexión a tierra y limpie la suciedad y anticorrosivos del área. Conecte a tierra el cable blanco.
3. Conecte los cables restantes. Vea el diagrama adjunto.

**NOTA:** Localice los cables en el vehículo por función solamente. Los códigos de color no son los mismos entre todos los fabricantes.

**CONSEJOS:**

- La aplicación frecuente de grasa a las terminales de los cables del remolque ayudará a prevenir la corrosión.
- Se puede requerir una luz intermitente de alta potencia para eliminar una intermitencia demasiado rápida.
- Siempre desenchufe el conector del remolque de botes antes de regresar el remolque al agua.