


CHEVY / GMC 1999-02

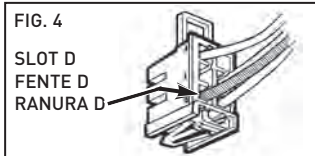

CHEVY / GMC 2003

1. Depending on the year of your vehicle, the red wire will have to be inserted into one of two places in the connector. If your vehicle was made 1999-02 model year, the red wire will need to go into slot "A" (Fig. 3). If your vehicle is model year 2003-07 (Classic body style), the red wire will need to go into slot "D" (Fig. 4). (The slots are lettered on the outside of the connector.)
2. Locate brake control connector under the dash (Fig. 1). Remove the nut in the center of the connector box and remove cover (A).
3. Plug the Hopkins® connector (B) into the vehicle connector (C).
4. Plug mating end of the Hopkins® connector into the Hopkins® Plug-In Simple!® brake control (part number 47294, 47284, 47235 or 47225).

WIRE CODE

White wire.....ground
Blue wire..... electric brake
Black wire..... battery
Red wire..... stop lamp switch

NOTE:

Wire to brake control by function only. Color coding is not standard among all manufacturers. To ensure proper installation, read brake control instructions thoroughly.

- 1 Dependiendo del año de su vehículo, el cable rojo deberá ser insertado en una de dos ranuras en el conector. Si su vehículo fué hecho antes del año modelo 1999-02, el cable rojo necesita ir en la ranura "A" (Fig. 3). Si su vehículo es modelo 2003-07, el cable rojo deberá ir en la ranura "D" (Fig. 4). (Las ranuras están identificadas con letras en la parte exterior del conector.)
2. Localice el conector del control de los frenos debajo del cuadro de instrumentos (Fig. 1). Retire la tuerca en el centro de la caja del conector y retire la cubierta (A).
3. Enchufe el conector Hopkins® (B) dentro del conector del vehículo (C).
4. Conecte el lado que corresponda del conector Hopkins® en el Hopkins® Plug-In Simple!® control de frenos (número de pieza 47294, 47284, 47235 o 47225).

CÓDIGO de CABLEADO

Cable blanco.... tierra
Cable azul..... freno eléctrico
Cable negro.....batería
Cable rojo..... interruptor de luces de pare

NOTA:

Instale el control de frenos por función solamente. El código de color no es igual entre todos los fabricantes. Para asegurar una instalación correcta, lea completamente las instrucciones para el control de frenos.