


#47805

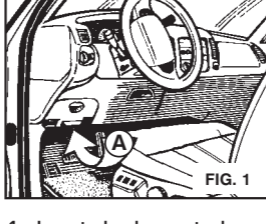

1. Locate brake control connector under driver side dash (Fig 1/A). Apply parking brake for easier access to brake control connector. Brake control connector will be found under lower area of instrument panel.
2. Peel off tape and plug the connector in to brake control connector.
3. Attach / splice wires to a brake control using the wiring code.
4. Release parking brake.

WIRE CODE

White wire.....Ground

Blue wire.....Electric

brake

Black wire.....Battery

Red wire.....Stop lamp

switch

NOTE: Wire to brake control by function only. Color coding is not standard among all manufacturers. To ensure proper installation, read brake control instructions thoroughly.

-
1. Localiza el conector del control de frenos debajo del tablero del lado del conductor (Fig 1/A). Aplique el freno de mano para mejor acceso al conector del control de freno. Encontrará el conector del control de freno debajo de la parte baja del panel de instrumentos.
 2. Desprenda la cinta adhesiva y conecte el conector en el conector de control de freno.
 3. Junte / Empalme los cables al control de frenos usando el código de colores.
 4. Suelte el freno de mano.

CÓDIGO de CABLEADO

Cable blancoTierra

Cable azulFreno

eléctrico

Cable negroBatería

Cable rojo.....Interruptor

de luces

de pare

NOTA: Instale el control de frenos por función solamente. El código de color no es igual entre todos los fabricantes. Para asegurar una instalación correcta, lea completamente las instrucciones para el control de frenos.