


FIG. 1

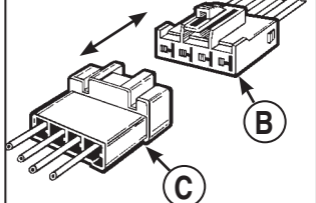

WIRE CODE

- White wire----- Ground
- Blue wire----- Electric brake
- Black wire----- Battery
- Red wire----- Stop lamp switch

1. Carefully remove vehicle trim panel underneath the dash (A) making sure not to pull on courtesy lamp wires that are attached.
2. Plug the connector (B) into the vehicle connector (C).
3. Attach / splice wires to a brake control using the wiring code provided

Wire to brake control by function only. Color coding is not standard among all manufacturers. To ensure proper installation, read brake control instructions thoroughly.