


# #47925

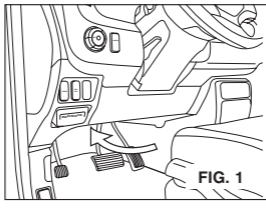

1. Locate brake control connector to the left of the steering column underneath dash. The brake control connector can be found almost directly upward from the emergency brake wrapped in tape.
2. Plug the connector into the vehicle connector.
3. Attach / splice wires to a brake control using the wiring code provided.

## WIRE CODE

White wire.....Ground

Blue wire.....Electric  
brake

Black wire.....Battery

Red wire.....Stop lamp  
switch

**NOTE:** Wire to brake control by function only. Color coding is not standard among all manufacturers. To ensure proper installation, read brake control instructions thoroughly.

- 
1. Localize el conector del controlador de frenos a la izquierda de la columna de la direccion debajo del tablero. El conector del controlador de frenos puede ser encontrado casi directamente arriba del freno de emergencia, envuelto en cinta adhesiva.
  2. Enchufe el conector dentro del conector del vehículo.
  3. Sujete / empalme cables al control de frenos usando el código de cableado proporcionado.

## CÓDIGO de CABLEADO

Cable blanco ....Tierra

Cable azul .....Freno  
eléctrico

Cable negro .....Batería

Cable rojo.....Interruptor  
de luces  
de pare

**NOTA:** Instale el control de frenos por función solamente. El código de color no es igual entre todos los fabricantes.

Para asegurar una instalación correcta, lea completamente las instrucciones para el control de frenos.